



PHONES

0 (800) 800 130
(050) 462 0 130
(063) 462 0 130
(067) 462 0 130

130
COM.UA

Internet store of
autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<https://130.com.ua>




KICKER

 **SS SERIES**

Livin' Loud

OWNER'S MANUAL
SS56.2, SS65.2
COMPONENT SYSTEMS

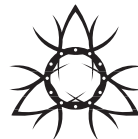

SS Series Component Systems Owner's Manual

Models: **SS65.2 / SS56.2**

Attention:

Please take a moment and record the information asked for below in the provided area. It is also a good idea to attach the original sales receipt or a copy of it to this page for future reference

If for any reason you require service on this system during the warranty period, you will need to provide this information and a copy of the receipt to Kicker to validate your warranty.

ALWAYS KEEP YOUR RECEIPT!

Congratulations!

You have just purchased the most advanced component speaker system to ever leave the Kicker Livin' Loud Laboratories. Your KICKER SS Series Component System is designed and engineered to deliver competition grade sound quality and legendary KICKER durability.

*Thanks for buying KICKER.
Enjoy.*

Dealer Where Purchased:

Purchase Date:

Model Number:

Serial Number:

A Brief Plug For The SS Systems And Our Technical Manuals At www.KICKER.com

The SS Component Speaker Systems are absolutely the best sounding full-range speakers to ever leave the KICKER Livin' Loud Labs. We dare to say (and we tested quite a few) they are the best sounding speakers on the market today...period! There are many state-of-the-art features in these systems and they are briefly described in the following Features section. If you find yourself awake in the middle of the night with the crave for White Castles and a thirst for more in-depth detail on the SS Components then hit our website and download the Technical Manual for the SS Component Systems. (Hit your local White Castle for the sliders)

CROSSOVER

- **System Optimized Two-Way Asymmetrical Passive Crossover Network** Provides 24 dB High Pass and 12 dB Low Pass at 2.8Khz for seamless transition from midrange to tweeter.
- **Air Core Inductors** Provides higher power handling with less 'signal smear' and magnetic saturation when compared to other 'core' type inductors.
- **Mylar Film Filter Capacitors** Used in tweeter crossover section for smooth and extended high frequency response.

- **3 Position Tweeter Attenuator** Select from 0 dB, +1.5 dB or + 3.0 dB tweeter output level for level matching the tweeter to the midrange due to personal taste or mounting locations.

• Zobel Impedance Compensation

Provides more linear response across the operating range and prevents crossover point shift by correcting impedance rise.

TWEETER

- **DuPont® Teton® (Soft Dome) 30mm Diameter Tweeter** Used to provide ultra-wide frequency response. Excellent balance between high and low end frequency response.
- **Ferro-Fluid™ Cooled Voice Coil** Enhances the thermal transfer from voice coil to the motor structure for higher power handling and decreased power compression.
- **Dual Neo Magnets In Tweeter** Top and bottom magnets provide a reduction in overall tweeter size while increasing BL 22% over conventional designs. (Patent Pending)
- **Vented Inner Motor System** The chamber under the tweeter dome is vented to the perimeter of the voice coil with machined channels in the motor structure to minimize dome distortion.

- **Sealed and Tuned Tweeter Enclosure**

Provides awesome control as well as smooth and extended upper mid/lower tweeter response from driver.

- **Foam Dispersion and Control Plug**

Used behind tweeter dome to control reflected energy and balance air pressure to the tweeter dome. Increases overall dome strength while in operation.

- **Copper Clad Aluminum Voice Coil**

Increases efficiency and thermal dissipation (power handling) of the tweeter.

MIDRANGE

- **Tri-Tech™ Cone with Röhm Rohacell®**

Foam Sandwiched cone material of foam, poly and woven carbon fiber. Provides a very light yet very strong cone for extended frequency response and superior cone control over the midrange's entire operating range.

- **T-cut Top Plate with Micro Plate™**

Copper Cap Provides very linear and extended midrange response as well as increased efficiency and thermal dissipation (power handling). Micro Plate™ copper shorting cap reduces THD.

- **Edgewound Copper Clad Aluminum Ribbon Voice Coil**

Very efficient coil design that provides high coil winding density and increases thermal transfer from voice coil to the motor structure for higher power handling and decreased power compression.

- **Balanced Coil Construction** The voice coil diameter and mass are engineered specifically to work with the driver system and provide an extremely linear and balanced response.

- **Variable Surround Thickness** The surround thickness varies across its cross section to provide higher linearity and balance of the driver system, especially at higher excursions, when compared to conventional surround designs.

- **Z-Wave™ Spider Design** New spider design incorporating two complimentary shaped waves which provides better control over non-linear motion in the driver system. (Patent Pending)

PARTS LIST

PARTS LIST

Here is a breakdown of the different parts and accessories you will find in the SS Components System pack.

TWEETER DRIVER 30 mm soft dome unit for high frequency sound reproduction..



TWEETER GRILL MOUNT RING Blue

colored ring to attach grill to speaker when tweeter is coaxially mounted.



TWEETER FLUSH MOUNT RING Black


colored ring attached to tweeter for separate flush or angled mounting.



TWEETER MOUNTING POST Mounting post used to coaxially mount tweeter to the Midrange Driver.



FRONT ANGLE RING 15° ring used on the front side of your mounting panel to direct tweeters output.

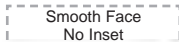

BACK ANGLE RING Used on the back side of your mounting panel to allow Mounting Nut to seat properly.



TWEETER MOUNTING NUT Threads onto the back of your Tweeter to hold it to your mounting panel.



GRILL MOUNT POST Mounting post used to attach grill to midrange if tweeter is not coaxially mounted in the midrange.



PHASE PLUG Used in midrange driver if no coaxially mounted tweeter or grill is being used.



MIDRANGE DRIVER Used for midrange/midbass reproduction.



MIDRANGE DRIVER BOOT Protects the magnet and motor assembly of the Midrange Driver. (Already attached to the midrange and is removable.)



MIDRANGE GRILL Grill used to protect the driver when doing a high-lighted installation or mounting through a panel.



 
COMPONENT CROSSOVER Two way passive crossover to split the audio signal between the tweeter and midrange.



ALLEN WRENCH Supplied tool used to tighten and loosen wire connections at the crossover.



BEVEL HEAD SCREWS Supplied screws to mount Midrange Driver and crossover.



TINNERMAN CLIPS Steel spring anchor used as anchor point for screws if required.



BUTT CONNECTORS Insulated crimp connectors to connect a 16 gauge wire to another 16 gauge wire.




WIRE BUNDLES 3 sets of high quality 16 gauge speaker wire to connect your SS Series Components to the crossover and amplifier.



R-TOOL Tool used to assist in tightening or loosening the Tweeter Grill Mount Ring.



Shown is an example of how the prongs in the R-Tool line up in the holes of the rings. Once in place you use the R-Tool to tighten or loosen the ring.

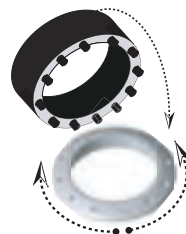

MOUNTING OPTIONS

Your Kicker SS Series Components can be mounted in either a separates or coaxial mounting scheme.

You can also choose to mount the Midrange Driver with or without a grill.

Look at the following diagrams and explanations to help you in setting up your preferred layout.

SEPARATES WITHOUT GRILL

In this setup you are mounting the midrange behind a panel while mounting the tweeter on the panel.



SEPARATES WITH GRILL

Here you are mounting the midrange through a panel and will be using the grill to protect the woofer while mounting the tweeter on the panel.

COAXIAL MOUNT WITHOUT GRILL

Here you are mounting the midrange and tweeter coaxially behind a panel and will be using the panel to protect the drivers.



COAXIAL MOUNT WITH GRILL

Here you are mounting the midrange and tweeter coaxially through a panel and will be using the grill to protect the drivers.



These are the most common applications for mounting. If you have questions about these or other applications, visit your local KICKER Dealer or contact Kicker Technical Services directly by phone or e-mail. Contact information located at the back of this manual.


SEPARATES WITHOUT GRILL

Prepare The Midrange

You will need to have the Phase Plug mounted in the Midrange. Remove any posts in the Midrange and get a Phase Plug from the kit.



Insert Phase Plug into the Midrange and rotate clock-wise to tighten.

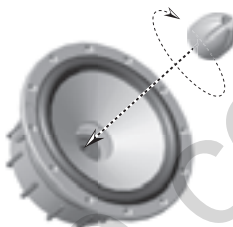

You should now have a Midrange Driver that looks like this.



Repeat this process for the second Midrange.


The Midrange is now ready to mount under the factory panel or any other panel you are using.

Prepare The Tweeter

You will need to have the Tweeter mounted to the Black Tweeter Flush Mount Ring. Get a tweeter and the ring from the kit.



Insert the Tweeter into the Flush Mount Ring and rotate clock-wise to tighten.

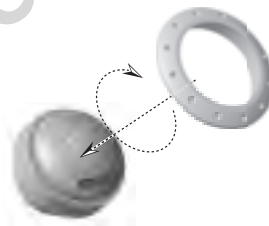

You should now have a Tweeter assembly that looks like this.



Repeat this process for the second Tweeter.

The Tweeter is now ready to mount in the factory panel or any other panel you are using.


SEPARATES WITH GRILL

Prepare The Midrange

You will need to have the Grill Mount Post in the Midrange. Remove any posts in the Midrange and get a Grill Mount Post from the kit.




Insert Grill Mount Post into the Midrange and rotate clock-wise to tighten.

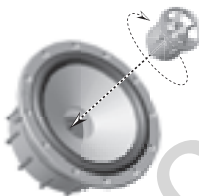

You should now have a Midrange Driver that looks like this.

Repeat this process for the second Midrange.

The Midrange is now ready to mount. Place the grill on the Midrange and secure with the **Blue** Grill Mount Nut after it is mounted.

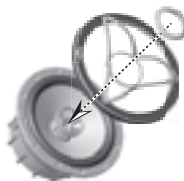


Prepare The Tweeter

You will need to have the Tweeter mounted to the **Black** Tweeter Flush Mount Ring. Get a tweeter and the ring from the kit.



Insert the Tweeter into the Flush Mount Ring and rotate clock-wise to tighten.

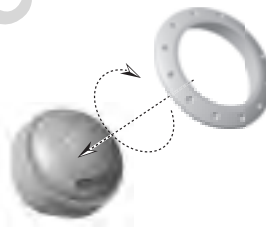

You should now have a Tweeter assembly that looks like this.

Repeat this process for the second Tweeter.

The Tweeter is now ready to mount in the factory panel or any other panel you are using.

COAXIAL MOUNT WITHOUT GRILL

Prepare The Midrange

Remove any posts or plugs in the Midrange. It should look like the pic shown here.



Next you will need to remove the Driver Boot from the back of the Midrange. It is a friction fit, simply pull it straight off the back.


Prepare The Tweeter

You will need to have the Tweeter, Tweeter Mounting Post and your choice of Tweeter Mounting Ring (Blue or Black).




Insert the Tweeter into Tweeter Mounting Post and tighten by turning clock-wise.

Next attach the Tweeter Mount Ring and tighten by turning clock-wise.

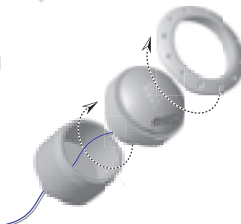


You should now have a tweeter assembly that looks like this to insert into your Midrange.

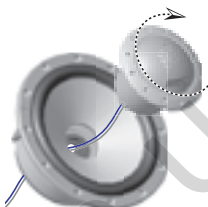

Insert the tweeter assembly into the midrange while feeding the wire through the Midrange's motor as pictured. Tighten by turning clock-wise.

Lay the tweeter wire in the machined groove on the motor back plate and press Midrange Driver Boot into place. Several inches of the tweeter wire will be exposed to permit wiring.

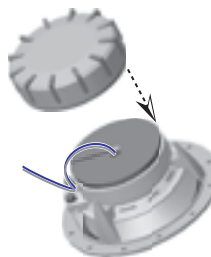

You should now have an assembly that looks like this.

Repeat this process for the second Tweeter and Midrange.

The SS System is now ready to mount.

COAXIAL MOUNT WITH GRILL

Prepare The Midrange

Remove any posts or plugs in the Midrange. It should look like the pic shown here.



Next you will need to remove the Driver Boot from the back of the Midrange. It is a friction fit, simply pull it straight off the back.


Prepare The Tweeter

You will need to have the Tweeter, Tweeter Mounting Post and Tweeter Grill Mount Ring (Blue).




Insert the Tweeter into Tweeter Mounting Post and tighten by turning clock-wise.

Save the Tweeter Grill Mount Ring for use later. It is used to attach the Grill.


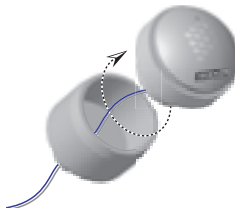


You should now have a tweeter assembly that looks like this to insert into your Midrange.

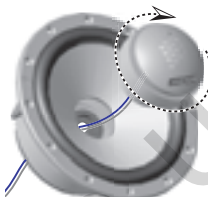

Insert the tweeter assembly into the midrange while feeding the wire through the Midrange's motor as pictured. Tighten by turning clock-wise.

Lay the tweeter wire in the machined groove on the motor back plate and press Midrange Driver Boot into place. Several inches of the tweeter wire will be exposed to permit wiring.

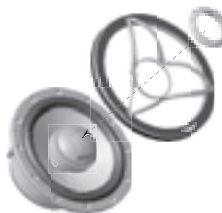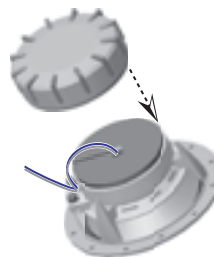

After mounting the assembly to your panel, place the grill on the Midrange and secure with the Blue Grill Mount Nut.

Repeat this process for the second Tweeter and Midrange.


TWEETER MOUNTING

Your tweeter can be flush mounted into your panel with or without the 15° angle rings.

Cut a 1-15/16" (4.9 cm) hole in your panel for the tweeter. Be sure there is clearance behind the panel for the tweeter and wiring.




WITHOUT ANGLE RINGS

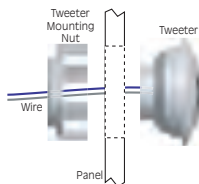

Place the tweeter into the panel and secure by tightening (clockwise) the Tweeter Mounting Nut.


This is what you should end up with after securing the Tweeter to the panel using the Mounting Nut.

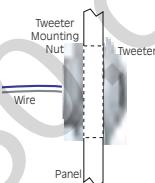

If necessary, the legs of the Tweeter Mounting Nut can be cut to fit thicker panels. Trim each leg at the score line. Remove only 1 section from each leg at a time until desired length is achieved.





WITH ANGLE RINGS

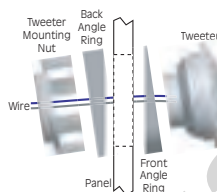

Place the tweeter through the Front Angle Ring and then into the panel.

Next place the Back Angle Ring over the Tweeter and line up the narrow part of the Back Angle Ring with the wide part of the Front Angle Ring for proper operation.


Attach the Tweeter Mounting Nut (clockwise) but do not tighten completely.

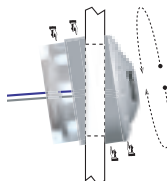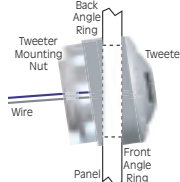

Rotate all the parts in unison until the tweeter is angled in the desired direction.

Secure the assembly by tightening (clockwise) the Tweeter Mounting Nut.

This is what you should end up with after securing the Tweeter to the panel using the Mounting Nut.

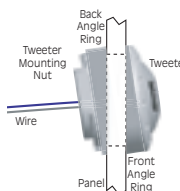


When mounting to a door panel it is best to get the tweeter as high up on the door as possible and as far forward as possible without interference from the dashboard. Be sure the chosen place is flat and space behind the door panel allows the use of the Tweeter Mounting Nut.

Follow the same rules if mounting to a rear deck, side panel or any other custom location. Be sure you have chosen a flat location with plenty of clearance behind it for the necessary wiring and mounting hardware.


After checking for clearance, cut a 1-15/16" (4.9 cm) hole in the desired mounting location. It may be necessary to cut a 2-1/2" (6.4 cm) clearance hole in any sheet metal or panel behind your chosen mounting panel to allow clearance for the Tweeter Mounting Nut.

See the diagrams on this page for more details.

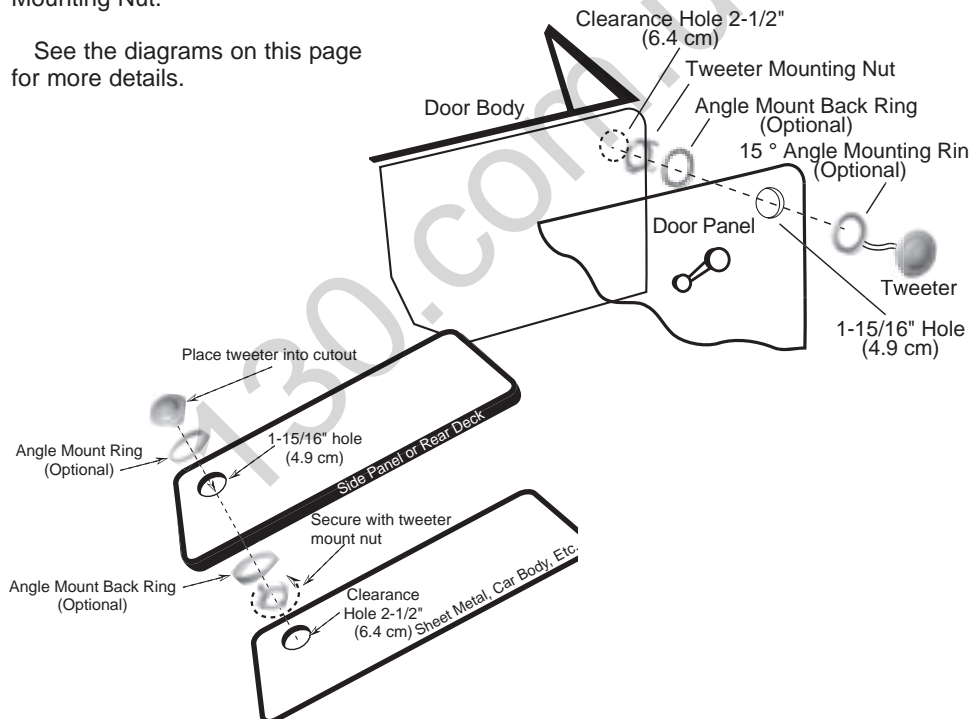

MIDRANGE MOUNTING

Your KICKER drivers are specifically designed for mounting in free-air applications. While the speakers do not need a sealed box for optimum performance, it is important to isolate the sound coming off the front of the driver from the sound radiating from the back of the driver. This isolation is usually accomplished by using the correct size driver in a factory speaker location.

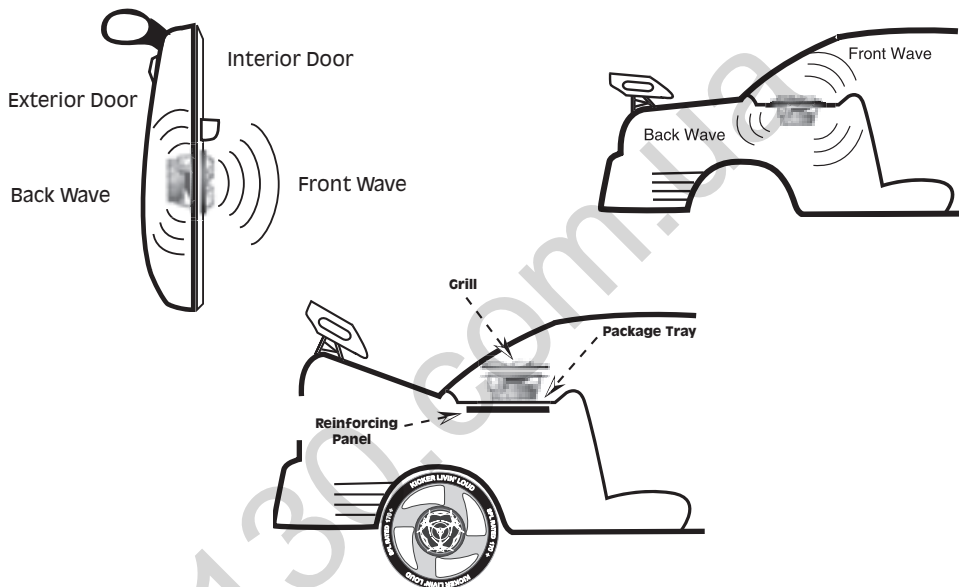


The ideal mounting scheme is to have a sturdy panel to cut out or to reinforce an existing panel with Masonite or medium density fiberboard. If the panel can flex at all, it will decrease the output of the driver and keep it from sounding it's best.


The door or trunk act like an enclosure to keep the backwave from reaching the front side of the driver. In any mounting situation, check for interference from other mechanical systems in the vehicle. Watch for window mechanisms, hinges, trunk springs, wire harnesses, and anything that would be affected by the installation of these drivers.

COAXIAL MOUNTING

If using the Coaxial mounting method for the tweeter and midrange you can mount the drivers under a factory speaker panel for protection.

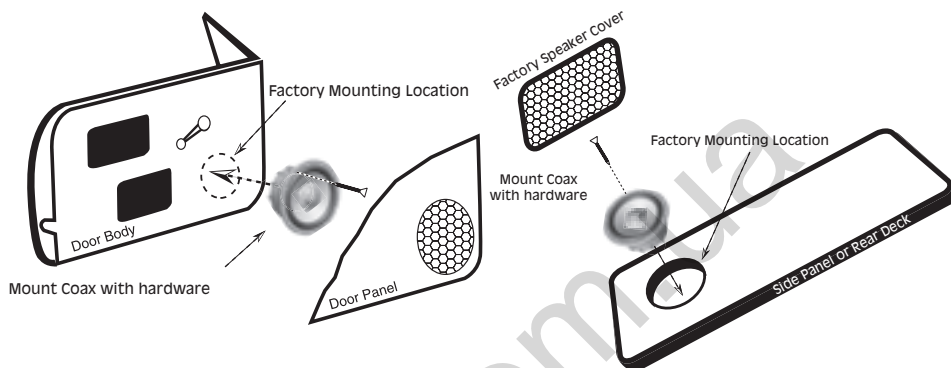


If custom mounting locations are desired for your drivers, check for interference from other mechanical systems in the vehicle. Watch for window mechanisms, hinges, trunk springs, wire harnesses, and anything that would be affected by the installation of these drivers. If metal must be cut to mount the speakers, try to avoid structural metal and braces. Once a location is chosen, cut the appropriate size hole for the drivers.

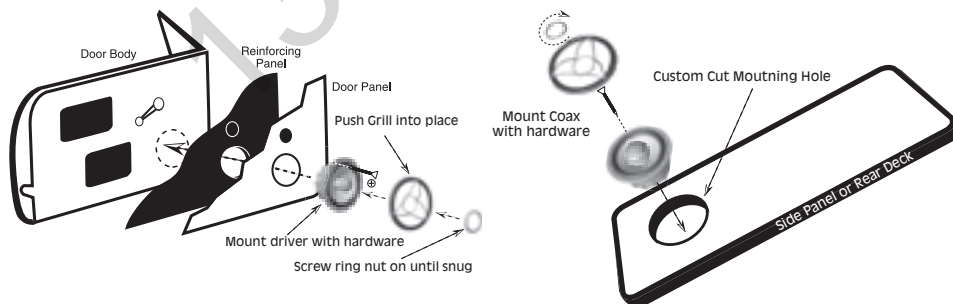


SEPARATES MOUNTING

If using the Separates mounting method for the tweeter and midrange you can mount the midrange under a factory speaker panel for protection and mount the tweeter separately.

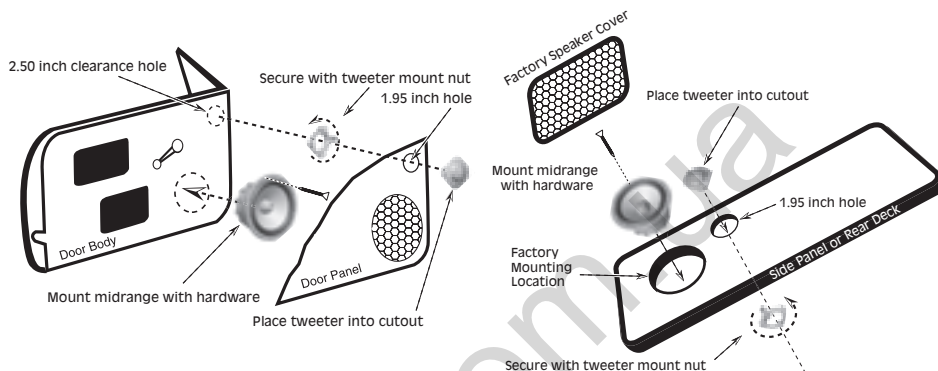


If custom mounting locations are desired for your drivers, check for interference from other mechanical systems in the vehicle. Watch for window mechanisms, hinges, trunk springs, wire harnesses, and anything that would be affected by the installation of these drivers. If metal must be cut to mount the speakers, try to avoid structural metal and braces. Once a location is chosen, cut the appropriate sized holes for the drivers.

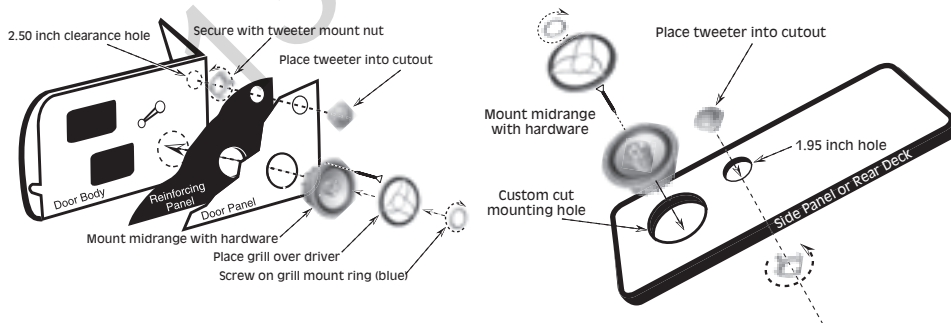


Crossover Mounting

YES

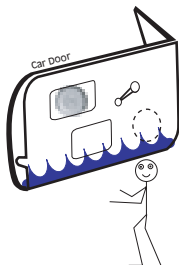

When choosing a location for your crossover keep in mind you will need access to it so you can connect your wiring and adjust the tweeter attenuator. Also, **DO NOT** place the crossover in any location where it will get wet or be in standing water. This will damage the unit!

NO!

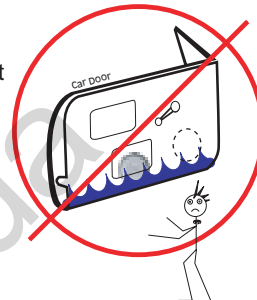


The bottom of the car door is not a good location. If you must mount the crossover in the car door, exercise caution as water can accumulate in the bottom of the car door. Keep the crossover high in the door and shielded from water.

Once you have selected a mounting location, remove the crossover's top by pulling it straight off the crossover. It is held in place with 3 clips at the indicated locations.

Using the supplied screws and hardware (or other method if required) mount the crossover.

Place the crossover top back on the crossover and press into place.

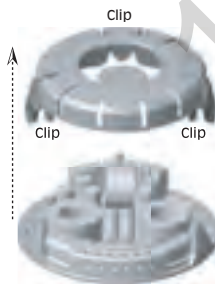


WIRING

There are three sets of high quality 16 Gauge speaker wire supplied with the Kicker SS Component Systems. The longest set of wires is for connecting your amplifier or source unit to the crossover network. One of the shorter pairs is to connect the midrange output of the crossover to the spring loaded binding posts on the Midrange Driver. The last set connects the tweeter output of the crossover to the short wire coming out of the tweeter; join using the supplied Butt Connectors.


If you wish to use your own wire or need to lengthen the wire to fit your needs, we recommend using at least 16 gauge wire.

Use the supplied Allen Wrench to loosen and tighten the connections at the crossover.

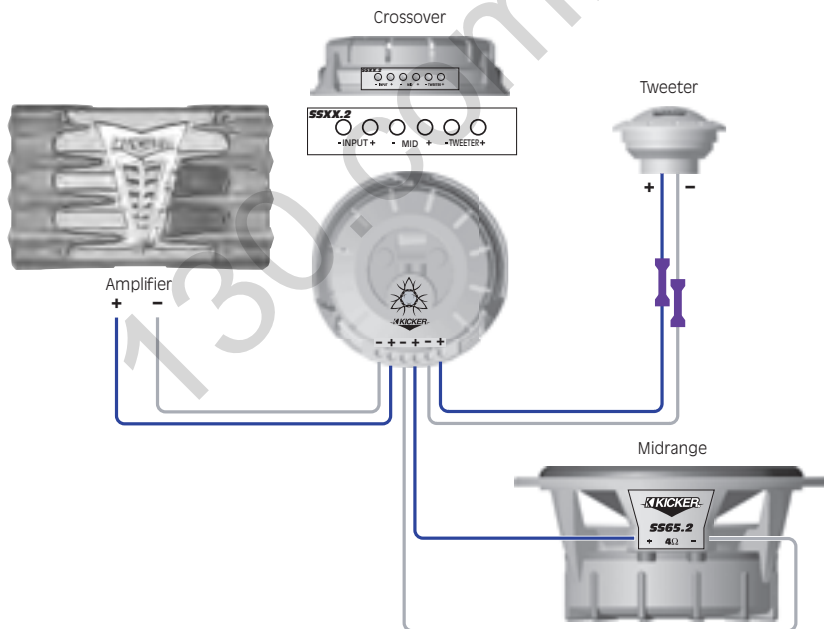

When installing the speaker wire into your car be sure to avoid sharp edges and the possibility of it getting pinched. Be careful to keep it out of the path of moving mechanical parts such as the steering column, brake pedal, gas pedal, clutch pedal, emergency brake, heater or AC control linkage and any other moving mechanical systems. Be careful when re-installing any kick panel, sill plate or other interior body panel removed to route the wire that you don't damage the wire with attachment clips or screws.

If running the wire into a door, an existing boot in the door jamb is the ideal place to run the wires, but sometimes this does not exist or is inaccessible. Drilling holes to run wires through is very tricky, and caution must be exercised not to drill into other wiring or mechanisms. Any time a wire is run through a bare hole, it is necessary to insert a rubber or plastic grommet to protect the wire.

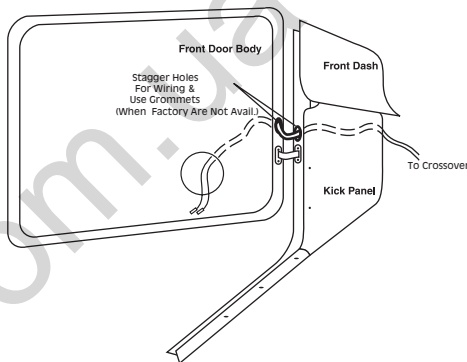

ADJUSTMENTS

The SS Series Component Crossover is a very high quality unit designed to offer the best combination of sound quality and driver protection.

The IPC (Illuminated Protection Circuit) is a proven design feature Kicker has used for many years in all our passive crossover networks where tweeters are involved. This circuit protects the tweeter from excessive amplifier power and amplifier clipping. It is normal for these to illuminate during operation.


The Tweeter Attenuation Switch is used to level match your tweeter's output level to the midrange based on varied mounting locations, car acoustics or your personal taste.

There are three positions to choose from:
+3 dB, +1.5 dB and +0 dB.

The +0 dB is the reference sound quality position. The +1.5 dB and +3 dB positions can be used if you need more tweeter output due to personal taste or car acoustics.

To change the output level simply slide the switch to the desired position.

After reading this manual, if you have any questions about the installation of your Kicker components, visit your local Authorized KICKER Dealer. You may also contact Kicker Technical Services directly by visiting the Support Section of our website at www.kicker.com. Want to talk instead? You can reach us by calling (405)624-8583 and asking for Technical Services.

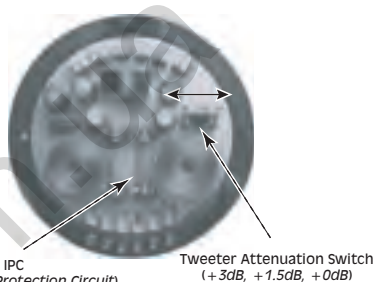

Performance

MODELS	SS56.2	SS65.2
Midrange/Midbass (in., cm)		
Outside Diameter	6-1/16" 15.4	6-7/16" 16.5
Mounting Hole	5-1/16" 12.8	5-7/16" 13.8
Mounting Depth	2-11/16" 6.8	2-13/16" 7.1
Tweeter (in., cm)		
Outside Diameter	2-5/16" 6.0	2-5/16" 6.0
Mounting Hole	1-15/16" 4.9	1-15/16" 4.9
Mounting Depth	1-1/8" 2.9	1-1/8" 2.9
Crossover (in., cm)		
Outside Diameter	5-5/8" 14.3	5-5/8" 14.3
Freq. Resp. (Hz)	50 - 22k	40 - 22k
Watts Peak	180	200
Watts RMS	90	100
Crossover Point (kHz)	2.8k	2.8k
Crossover Slope (dB/oct)	24 hi / 12 lo	24 hi / 12 lo
Sensitivity (dB 1W/1M)	86	87
System Impedance (Ω)	3	3

ACOUSTICS LIMITED WARRANTY

Kicker warrants this product to be free from defects in material and workmanship under normal use for a period of **THREE (3) MONTHS** from date of original purchase with receipt. When purchased from a Authorized KICKER Dealer it is warranted for **ONE (1) YEAR** from date of original purchase with receipt. In all cases you **must have the original receipt!** Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction during the warranty period, Kicker will repair or replace (at its discretion) the defective merchandise with equivalent merchandise at no charge. Warranty replacements may have cosmetic scratches and blemishes. Discontinued products may be replaced with more current equivalent products.

This warranty is valid only for the **original purchaser** and is not extended to owners of the product subsequent to the original purchaser. Any applicable implied warranties are limited in duration to a period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter. Some states do not allow limitations on implied warranties, therefore these exclusions may not apply to you.

This warranty gives you specific legal rights; however you may have other rights that vary from state to state.

WHAT TO DO IF YOU NEED WARRANTY OR SERVICE

Defective merchandise should be returned to your local Authorized Stillwater Designs (Kicker) Dealer for warranty. Assistance in locating an Authorized Dealer can be obtained by writing or calling Stillwater Designs direct. You can confirm that a dealer is authorized by asking to see a current authorized dealer window decal.

If it becomes necessary for you to return defective merchandise directly to Stillwater Designs (Kicker), call the Kicker Customer Service Department at (405)624-8510 for a Return Authorization (RMA) number. Package all defective items in the original container or in a package that will prevent shipping damage, and return to:

Stillwater Designs, 5021 North Perkins Road, Stillwater, OK 74075

The RMA number must be clearly marked on the outside of the package. Return only defective components. Return of entire cabinets, system packs, pairs, etc. increases your return freight charges. Non-defective items received will be returned freight collect.

Include a dated **proof-of-purchase** stating the Customer name, Dealer name, product purchased and date of purchase.

Warranty expiration on items without proof-of-purchase will be determined from type of sale and the manufacturing date code.

Freight must be prepaid; items received freight collect will be refused.

Failure to follow these steps may void your warranty. Any questions can be directed to the Kicker Customer Service Department at (405)624-8510.

WHAT IS NOT COVERED?

This warranty is valid only if the product is used for the purpose for which it was designed.

It does not cover:

- Damage due to improper installation.
- Subsequent damage to other components.
- Damage caused by exposure to moisture, excessive heat, chemical cleaners, and/or UV radiation.
- Damage through negligence, misuse, accident or abuse. (Repeated returns for the same damage may be considered abuse.)
- Any cost or expense related to the removal or reinstallation of product.
- Speakers damaged due to amplifier clipping or distortion.
- Items previously repaired or modified by any unauthorized repair facility.
- Return shipping on non-defective items.
- Products with tampered or missing barcode labels.
- Products returned without a Return Authorization (RMA) number.
- Freight Damage.
- The cost of shipping product to Kicker.
- Service performed by anyone other than Kicker.
- Speaker with any foreign caulk used for gasket material.

HOW LONG WILL IT TAKE?

Kicker strives to maintain a goal of 24-hour service for all acoustics (woofers, mids, tweets, etc.) returns. Delays may be incurred if lack of replacement inventory or parts is encountered.

INTERNATIONAL WARRANTY

Contact your International Kicker dealer or distributor concerning specific procedures for your country's warranty policies.



STILLWATER
Designs®

P.O. Box 459 • Stillwater, Oklahoma 74076 • U.S.A.
• 405 624-8510

WARNING:

KICKER drivers are capable of producing sound levels that can permanently damage your hearing! Turning up a system to a level that has audible distortion is more damaging to your ears than listening to an undistorted system at the same volume level. The threshold of pain is always an indicator that the sound level is too loud and may permanently damage your hearing. Please use common sense when controlling volume!



130.com.ua