

PHONES 0 (800) 800 130 (050) 462 0 130

(063) 462 0 130 (067) 462 0 130

Internet store of autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • CRS modules • CRS modules

- GPS NAVIGATORS Portable GPS Built-in GPS GPS modules GPS trackers Antennas for GPS navigators Accessories | VIDEO DVR TV sets and monitors Car TV tuners Cameras Videomodules Transcoders Car TV antennas Accessories | SECURITY SYSTEMS Car alarms Bike alarms Mechanical blockers Immobilizers Sensors Accessories | OPTIC AND LIGHT Xenon Bixenon Lamps
- LED Stroboscopes Optic and Headlights Washers Light, rain sensors Accessories | PARKTRONICS AND MIRRORS Rear parktronics Front parktronics Combined parktronics Rear-view mirrors Accessories | HEATING AND COOLING Seat heaters Mirrors heaters Screen-wipers heaters Engine heaters Auto-refrigerators Air conditioning units Accessories | TUNING Vibro-isolation
- Noise-isolation Tint films Accessories | ACCESSORIES Radar-detectors Handsfree, Bluetooth Windowlifters Compressors Beeps, loudspeakers Measuring instruments Cleaners Carsits
- Miscellaneous | MOUNTING Installation kits Upholstery Grilles Tubes Cable and wire Tools Miscellaneous | POWER Batteries Converters Start-charging equipment Capacitors
- Accessories | MARINE AUDIO AND ELECTRONICS Marine receivers Marine audio speakers Marine subwoofers Marine amplifiers Accessories | CAR CARE PRODUCTS Additives Washer fluid Care accessories Car polish Flavors Adhesives and sealants | LIQUID AND OIL Motor oil Transmission oil Brake fluid Antifreeze Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

https://130.com.ua

G.I.KRAFT

Owner's Manual

CE

GI35113

The equipment is approved by following car manufacturers
















Contents

1. Introduction ————————————————————————————————————	1
2. Specifications	2
3. Installation ————————————————————————————————————	3
4. Precautions	4
5、Controls	5
6. Operation	6-7
7. Repair and Maintenance	
7-1, Exploded View	8
7-2、Troubshooting	9
8 Electrical Diagram	10
9 、 Accessories and Spareparts List 10 、 Packing List	11

Introduction

Introduction

These models battery charger/booster are intended for charging and starting batteries $\,$, GI35113 $\,$ wi t hjum p-s t a rftu n c t,i that are usually used in cars, trucks, motorcycles, boats, etc.

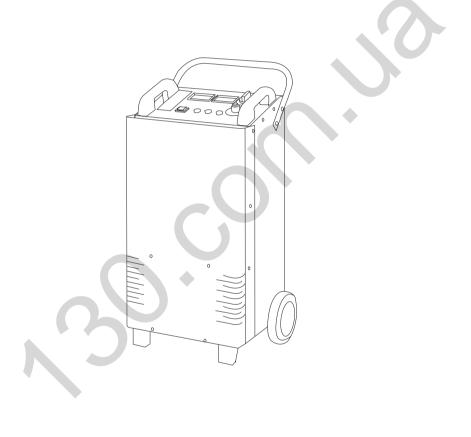


Specifications

M o de 1 Pa ram e t ers	GI35113
Input voltage (v)	380
Pow(KrVA)	2 /16
Charge voltage	12 / 2 4
	1 5 . 20 . 3 0 . 3 8
Effective charge c urrent(6gears)	4 5 . 60
o differe (ogedit)	4 3 . 00
Chrging direction (N degree)	8
Instant current(A)	1500
Reference Capacitance	35/120 0
Di m ensions (mm)	41 0 * 3 5 0 *795
Weight(kg)	51
Input cord length(mm)	300 0
Work cable length (m m)	3 0 0 0 +3000


Installation

- 1. Open package and find out Owner's Manual.
- $2\,\text{.}$ Check the supplied of accessories according to packing list that attached with Owner's Manual.
- 3. Properly install this equipment as following diagram. Inspect the unit for any damage. If so, contact your local distributor or service agency.

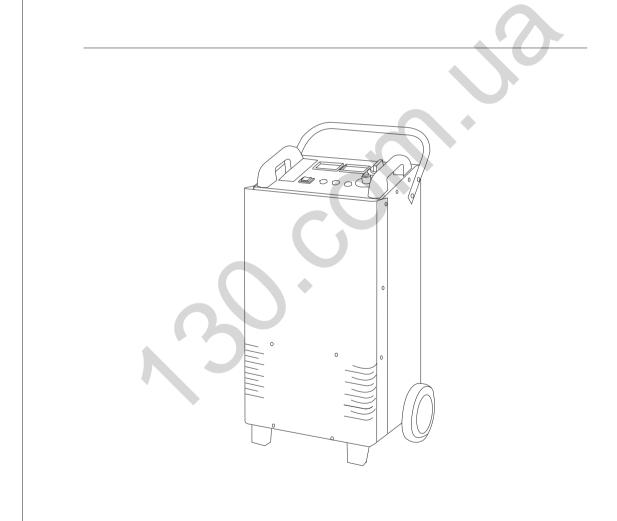

Pre cau t io n s


- 1. Select a correct location to place the unit
- 2. Do not move or operate unit where it could tip
- 3. Use cart or unit handle to move unit
- 4. Charging produces explosive gases, Never smoke or allow a spark or flame in vicinity of battery or engine.
- 5. Operate charger indoor with good ventilation. Do not operate charger to rain or snow or use when wet.
- 6. Disconnect input power before using charging clips.
- 7. Electricity arc and spark exist in some electrical component parts of charger such as power switch and relay during normal charging batteries. Keep charger away from inflammables and explosives
- 8. Do not stop charging suddenly before battery fully charged. Also, never allow clips touch each other.
- 9. Do not operate charger with damaged cord or plug—replace the cord or plug immediately
- 10. Never charge a frozen battery.
- 11. Use only qualified fuse.
- 12. Clean the battery which will be charged before charging. And check the initial voltage of the battery.
- 13. Never set Mode switch to "0" position for charging batteries.
- 14. Do not charge damaged battery ,otherwise it will damage the build-in protection
- 15. Do not switch charging current while battery is being charged.

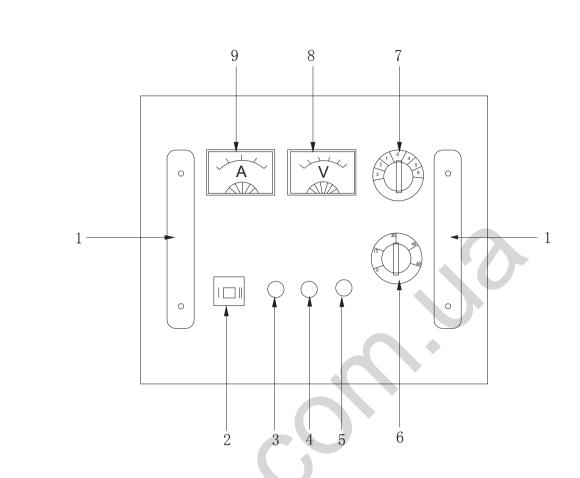

- 1, Handle
- 2, 12V/24V Selection
- 3, 12V indicator
- 4, 24V indicator
- 5, Power indicator
- 6, Timer
- 7、Current
- 8, Voltmeter
- 9, Ammeter

Operation

Charing Connections:

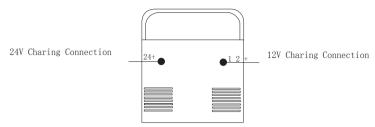


Charging:

- 1) Select 12Vor 24V.
- 2) Connect work cables to battery terminals.

 The work cable from front of machine is a 12V and 24V cathode cable, connect this cable to the negative terminal of battery.


 And then, connect another work cable from 12V or 24V Positive terminal of charger to the positive terminal of battery.
- 3) Select charging time and current. The position 1, 2, 3 of current adjustment knob are slow charge , and 4, 5, 6 are fast charge usually, time for fast charge is 60 mins.
 - 4) Connect input power, charging time can be set within 60 mins by timer, The charger stops automatically when it reaches pre-set time.

GI35113 Charing Connections:

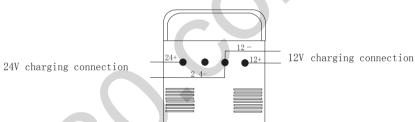


1. Charging

- 1) , Select 12V or 24V
- 2) . Connect work cables to battery charger terminals as above diagram, and then connect clips from battery charger to the terminals of battery
- 3) . Select charging time and current. The position 1,2,3 of current adjustment knob are slow charge ,and 4,5,6 are fast charge usually, time for fast charge is 60 mins.
- 4) . Connect input power, charging time can be set within 60 mins by timer ,The charger stops automatically when it reaches pre-set time.
- 5). The charger can be charge more than one battery at the same time, but the charging time will be extended

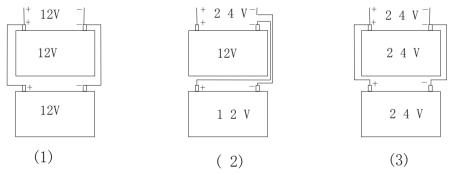

GI35113 jump-start connection

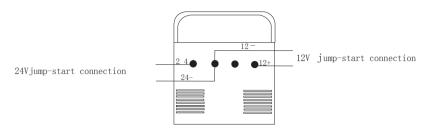


2 Jump-starting

- 1), Select 12V or 24V
- 2) . Connect work cables to battery charger terminals as above diagram, and then connect clips from battery charger to the terminals of battery
- 3) Connect input power.
- 4) For high power engines, fast charge the battery for 15mins before jump-starting to get the best result. For diesel engines, pre-heat spark plug before jump starting. For cables connections, connect negative post(-) first, and then positive post(-).
- 5) Connect work cables to battery charger terminals while current adjustment knob in 0" position, and then turn current adjustment knob to max. position to jump-start the engine. If car engine cannot start after 3-4 times jump-start operations. Please speedy charge the battery for 15 mins before jump-start again.


Note:

- 1. The positive clip from battery charger must connect to positive post (+) of battery, and connect negative clip to negative post (-)
- 2 . Do not use the connections of charging to jump-start engine, otherwise it will damage ammeter and fuse
- 3 . If charger can not jump start engines check input power cord to meet mannfacturer's requirements or the connections of work cables.

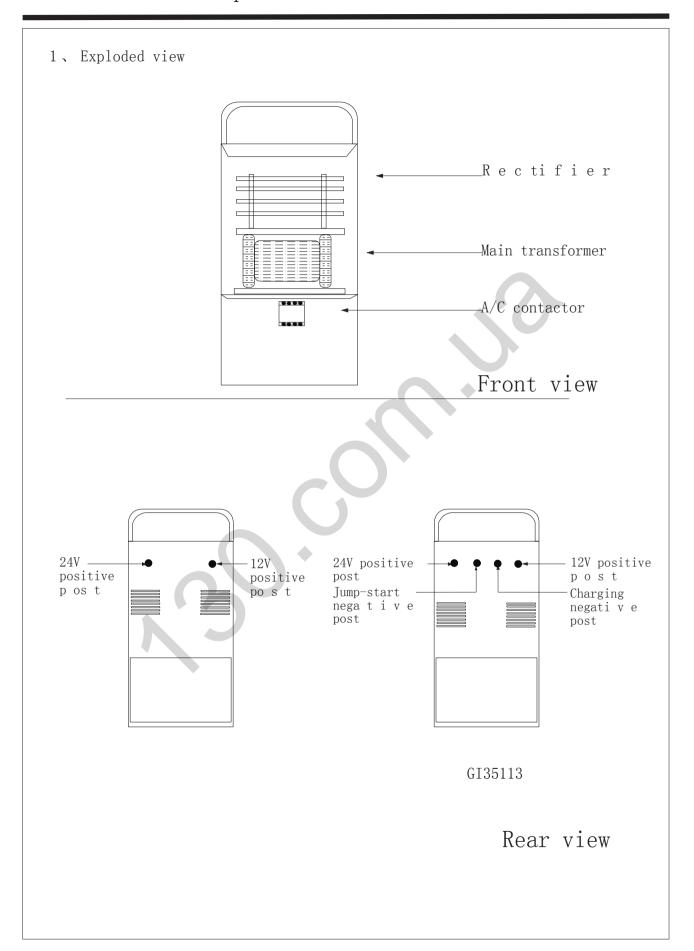


2. Troubleshooting

Trouble	Probable cause	Remedy
No input power	(1) incorrect input power connection(2) Power switch in off position	(1)Check input power connection (2)Turn power switch to "on" position
Timer does not work	(1) Charging time has not adjusted (2) Timer damaged	(1) Adjust charging time (2 Replace timer
Not enough electricity power of charged Batt- ery	(1) Improperly connect work cables or clamps (2) Not enough charging current (3) Not enough charging time (4) Ex cess charge rate of battery capacity	(1) Check cables connections and tighten clamps (2) increase charging current (3) increase charging time (4) Check correct charge rate for the battery being charged
Charger stops working while operating	(1)Timer reaches preset time (2)Charger over heat	(1) Adjust timer (2) Wait for charger temper- ature cool down
Voltmeter does not work	(1)Switches in "off" position (2)12V/24Vswitch in neutral	(1) Turn on power, adjust timer and current (2) S elect 12 Vor 24 V
Ammeter does not work	(1)No out put current	(1)mmeter works while under loading only
Cannot charging battery	 (1) Incorrect cables connec – tions (2)Switches in "off"position (3) Battery had been damaged 	(1)Check cables connections (2)Adjust switches to correct position (3)Check battery

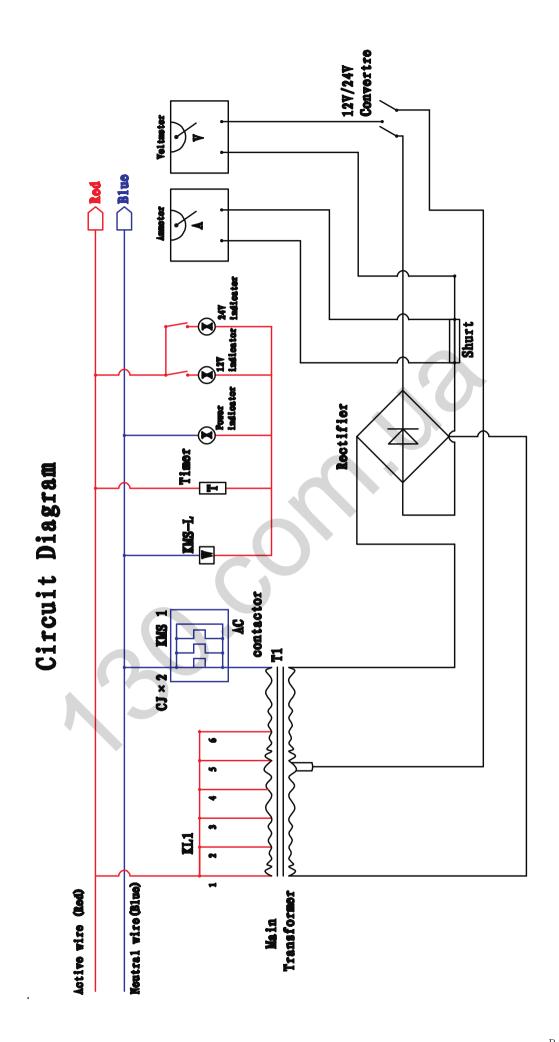

P age. 10

Accessories and spareparts list

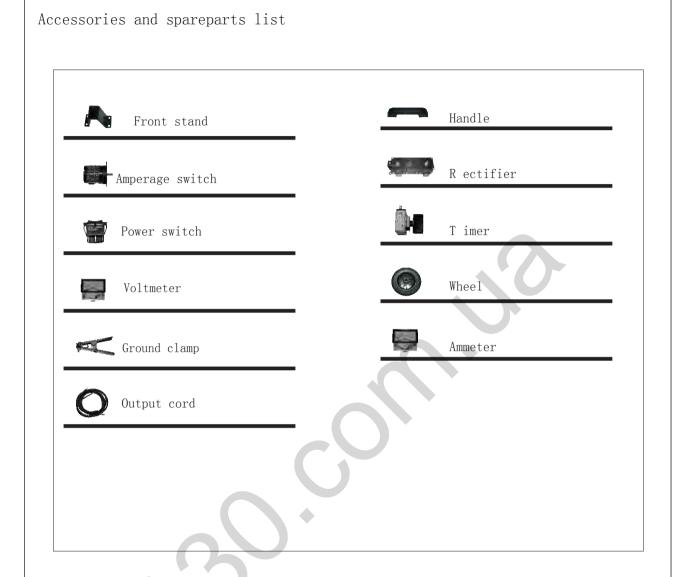

Remar k s:

- $1)\,0\mathrm{ptional}$ orders for above accessories and spareparts are a vail able .
- 2) Model and parts number required when ordering parts from your local distributor or service agency.