



PHONES

(044) 338-0-130  
(050) 332-0-130  
(063) 577-0-130  
(067) 353-0-130

130  
COM.UA

Internet store of  
autogoods



SKYPE  
km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |  
CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |  
GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules  
• Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps  
• LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors  
• Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation  
• Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits  
• Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors  
• Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid •  
Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<http://130.com.ua>

**GOXTREME**  
ACTION CAMS

**GOXTREME**  
**DISCOVERY**



Wide Angle  
Lens



HDMI



Full HD



Waterproof  
to 30m



Long-lasting  
battery

USER'S MANUAL

 
Autogoods "130"

 


## WARNINGS

1. Always take the appropriate steps to protect your camera from falls, shock or impact.
2. Ensure a suitable distance is kept from any objects with strong magnetic interference such as electrical machinery in order to avoid strong radio waves that may be damaging to the product and affect the sound or image quality.
3. Never expose the product directly to high temperatures and prolonged strong sunlight.
4. We recommend using high quality, class 10 or above Micro SD Card for the best results.
5. To avoid potential data error, avoid placing your Micro SD card near strong magnetic objects.
6. In the unlikely event of overheating, unwanted smoke or unpleasant smell from the device, unplug it immediately from the power outlet to prevent hazardous fire.
7. Keep the device out of reach of children while charging.
8. The device should be stored in a dry and dust free location at normal room temperature and out of direct sunlight.
9. The product should only be charged via laptop or computer USB port.
10. Before using your camera in the water please verify that all lids and locks are tightly closed and sealed on the camera and the underwater case.
11. After use, clean the housing of salt and chlorine water and then let it dry.
12. The camera should not be exposed to large temperature and humidity differences to avoid condensation inside the housing or behind the lens.
13. After underwater use, the case must be kept open to avoid condensation or rust.
14. **Recording times are dependant on resolution and frame rate settings.**  
**After reaching a max. video recording time (or file size\*) the camera will automatically stop. It can only be restarted manually.**  
**\*FAT32 file system has a maximum single file size limit of 4GB; 1080p/30fps: 29min. max.**
15. Battery life time - depending on settings and outdoor temperature - up to 90 min. under optimal conditions.

## THE BASICS

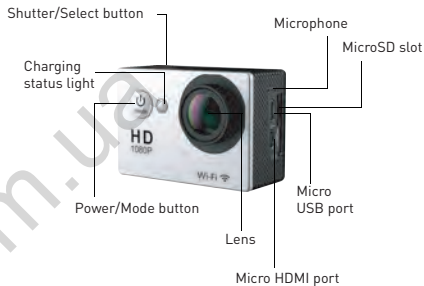

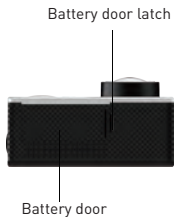


## WATERPROOF HOUSING





Autogoods "130"

## MOUNTING YOUR CAMERA

   Attach your camera to helmets, gear and equipment.

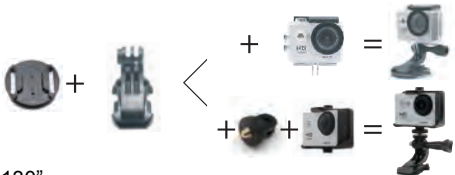

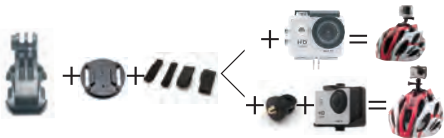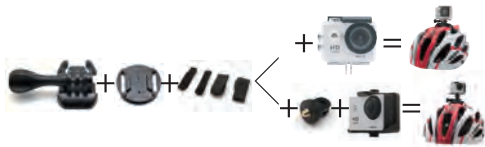


## GETTING STARTED







 To power ON:  
Press the **Power/Mode Button**.

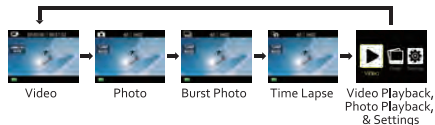To power OFF:  
Press and hold the **Power/Mode Button**.

## OVERVIEW

Turn the camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



	<b>Video</b>	Record Video
	<b>Photo</b>	Capture a single photo
	<b>Burst Photo</b>	Capture photo bursts
	<b>Time Lapse</b>	Shoot a series of photos at set time intervals
		Video & Photo Playback
		Adjust camera settings, resolution and more



Press the **Shutter/Select Button** to enter the settings menu. Repeatedly press the **Power/Mode Button** to cycle through options and press the **Shutter/Select Button** to select desired option. Or use the **Up/Playback** or **Down/Wi-Fi Button** to cycle through the various options.

Time Stamp: Off/Date/Date & Time  
 Exposure: +-2.0/+-1.7/+-1.3/+-1.0/+-0.7/+-0.3/0  
 Photo Resolution: 12M, 8M, 5M, 2M  
 Burst Photo: 3 Photos  
 Time Lapse: 2s/3s/5s/10s/20s/30s/60s  
 Continuous Lapse: Off/On  
 Power Frequency: 50Hz/60Hz/Auto  
 Language: English/Traditional  
 Chinese/Italian/Spanish/Portuguese/German/Dutch/  
 France/Czech/Polish/Turkish/Russian/Japanese/Korean/Thai  
 Date & Time: MM/DD/YY, DD/MM/YY, or YY/MM/DD  
 Sound Indicator: Shutter On/Off, Start Up 1/2/3/  
 None, Beep On/Off, Volume 0/1/2/3  
 Rotate Display: On/Off (For use when camera is mounted upside down)

Screen Saver: Off/1 min/3 min/5 min  
Power Saver: Off/1 min/3 min/5 min  
Format: No/Yes  
Reset: No/Yes  
Version: Displays current firmware version

---

## VIDEO MODE

---

### Video

To record Video, verify the camera is in Video mode. If the Video icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

#### **To start recording:**

Press the Shutter/Select Button. The camera will emit one beep and the Camera Status Lights will flash while recording.

#### **To stop recording:**

Press the Shutter/Select Button. The Camera Status Lights stop flashing and the camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your Video will be saved before the camera powers OFF.

**Recording times are dependant on resolution and frame rate settings.**

**After reaching a max. video recording time (or file size\*) the camera will automatically stop. It can only be restarted manually.**

**\*FAT32 file system has a maximum single file size limit of 4GB: 1080p/30fps: 29min. max.**

---

## PHOTO MODE

---

### Photo

To capture a Photo, verify the camera is in Photo mode. If the Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears.

#### **To take a photo:**

Press the Shutter/Select Button. The camera will emit the camera shutter sound.

---

## BURST PHOTO MODE

---

### Burst Photo

To capture a Burst Photo series, verify the camera is in Burst Photo mode. If the Burst Photo icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Burst Photo mode, your camera takes 3 photos in 1.5 seconds.

To take a Burst Photo series:

Press the Shutter/Select Button. The camera will emit camera shutter sounds.

---

## TIME LAPSE MODE

---

### Time Lapse

To capture a Time Lapse series, verify the Continuous Lapse is ON and camera is in Time Lapse mode. If the Time Lapse icon on your camera's LCD screen is not showing, press the Power/Mode Button repeatedly until it appears. In Time Lapse mode, your camera captures a series of photos at 2, 3, 5, 10, 20, 30 or 60 second intervals.

The intervals at which the camera will operate in Time Lapse mode must first be set using the settings screen before recording in Time Lapse mode.

#### **To take Time Lapse:**

Press the Shutter/Select Button. The camera initiates countdown and emits the camera shutter sound each time a Photo is taken.

---

## PLAYBACK

---

### **Playing Back Videos and Photo**

To enter the Playback menu:

1. Verify the camera is in Camera mode.
2. Press the Up/Playback Button to enter the Playback menu.
3. Repeatedly press the Power/Mode Button to cycle through Video and Photo.
4. Press the Shutter/Select Button to select desired option.
5. Use Up/Playback Button or Down/Wi-Fi Button to cycle through the various options.
6. Press the Shutter/Select Button.
7. To return to the Playback menu, press the Power/Mode Button.
8. To exit, hold down the Up/Playback Button for two seconds.

---

## STORAGE/MICRO SD CARDS

---

This camera is compatible with 16GB and 32GB capacity microSD, microSDHC, and microSDXC



memory cards. You must use a microSD card with at least a Class 10 speed rating. We recommend using brand name memory cards for maximum reliability in high-vibration activities.

---

## BATTERY

---

### Charging The Battery

1. Connect the camera to a computer or USB power supply.
2. The Charging Status Light remains ON while the battery is charging.
3. The Charging Status Light will turn OFF when the battery is fully charged.

Charging Time: 5 hours

---

## COMPATIBILITY

---

Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.

---

## CAMERA APP

---

### Connecting to the Ez iCam App

The **Ez iCam App** lets you control your camera remotely using a smartphone or tablet. Features include full camera control, live preview, photo playback and sharing of select content and more.

1. Download the Ez iCam App to your smartphone or tablet at the Google Play or Apple App Store.
2. Press the Power/Mode Button to power camera ON.
3. Make sure the camera is in Camera mode.
4. Press the Down/Wi-Fi Button to turn on Wi-Fi\*.
5. In your smartphone or tablet's Wi-Fi settings, connect to the network called "Discovery" followed by a series of numbers.
6. Enter the password "1234567890".
7. Open the Ez iCam App on your smartphone or tablet.

\* Press and hold the Down/Wi-Fi Button for three seconds to turn OFF Wi-Fi.

The **Ez iCam App** is compatible with smartphones and tablets listed below:

#### For Apple iOS

- \* iPhone5, 5s, 6 (Plus), & 6s (Plus) (iOS9)
- \* iPad Air & Mini (iOS9)

#### For Android

- \* Android 4X Quad-core devices



iOS / Android  
App Download

---

## 2.4G Remote

---



Photo Button

Video Button

\*Splashproof

#### Video

To record **Video**, verify the camera is in **Video** mode.

#### To start recording:

Press the **Grey Video Button**. The camera will emit three beeps and the **Camera Light** will flash while recording.

#### To stop recording:

Press the **Grey Video Button** again. The **Camera Light** will stop flashing while recording.

## Photo

To capture a **Photo**, verify the camera is in **Photo** or **Video** mode.

### To take a photo:

Press the **Red Photo Button**. The camera will emit a camera shutter sound.

## Burst Photo

To capture a **Burst Photo** series, verify the camera is in **Burst Photo** mode.

### To take a Burst Photo series:

Press the **Red Photo Button**. The camera will emit camera shutter sounds.

## Time Lapse

To capture a **Time Lapse** series, verify the Continuous Lapse is **ON** and camera is in **Time Lapse** mode.

### To take Time Lapse:

Press the **Red Photo Button**. The camera initiates countdown and emits a camera shutter sound each time a **Photo** is taken.

---

### \*To power OFF camera:

Press and hold the **Red Photo Button**.

---

## NOTE

---

Before using your camera in the water please verify that all lids and locks are tightly closed and sealed on the camera and the underwater case.

After use, clean the housing of salt and chlorine water and then let it dry.

The camera should not be exposed to large temperature and humidity differences to avoid condensation inside the housing or behind the lens. After underwater use, the case must be kept open to avoid condensation or rust.

### DECLARATION OF CONFORMITY

easypix hereby declares that the product GoXtreme Discovery is in conformity to all the essential requirements of Directive 1999/5/EC. The declaration of conformity can be downloaded here:  
[http://www.easypix.info/download/pdf/doc\\_goxtreme\\_discovery.pdf](http://www.easypix.info/download/pdf/doc_goxtreme_discovery.pdf)  
For technical help please visit our support area on [www.easypix.eu](http://www.easypix.eu).



**easypix**  
LIFESTYLE ELECTRONICS