

PHONES 0 (800) 800 130 (050) 462 0 130

(063) 462 0 130 (067) 462 0 130

Internet store of autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • CRS modules •

- GPS NAVIGATORS Portable GPS Built-in GPS GPS modules GPS trackers Antennas for GPS navigators Accessories | VIDEO DVR TV sets and monitors Car TV tuners Cameras Videomodules Transcoders Car TV antennas Accessories | SECURITY SYSTEMS Car alarms Bike alarms Mechanical blockers Immobilizers Sensors Accessories | OPTIC AND LIGHT Xenon Bixenon Lamps
- LED Stroboscopes Optic and Headlights Washers Light, rain sensors Accessories | PARKTRONICS AND MIRRORS Rear parktronics Front parktronics Combined parktronics Rear-view mirrors Accessories | HEATING AND COOLING Seat heaters Mirrors heaters Screen-wipers heaters Engine heaters Auto-refrigerators Air conditioning units Accessories | TUNING Vibro-isolation
- Noise-isolation Tint films Accessories | ACCESSORIES Radar-detectors Handsfree, Bluetooth Windowlifters Compressors Beeps, loudspeakers Measuring instruments Cleaners Carsits
- Miscellaneous | MOUNTING Installation kits Upholstery Grilles Tubes Cable and wire Tools Miscellaneous | POWER Batteries Converters Start-charging equipment Capacitors
- Accessories | MARINE AUDIO AND ELECTRONICS Marine receivers Marine audio speakers Marine subwoofers Marine amplifiers Accessories | CAR CARE PRODUCTS Additives Washer fluid Care accessories Car polish Flavors Adhesives and sealants | LIQUID AND OIL Motor oil Transmission oil Brake fluid Antifreeze Technical lubricant




In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

https://130.com.ua

HD 5/12 C, HD 5/12 CX HD 5/13 C, HD 5/13 CX HD 5/15 C, HD 5/15 CX HD 5/17 C, HD 5/17 CX HD 6/13 C, HD 6/13 CX



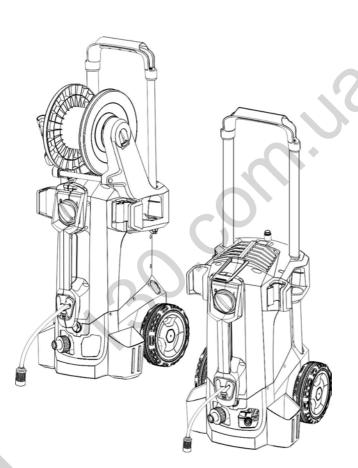

Deutsch 6 English 18 Français 30 Italiano 42 Nederlands 54 Español 66 Português 78 Dansk 90 Norsk 101 Svenska 112 Suomi 124 Ελληνικά 135 Türkçe 148 Русский 160 Magyar 173 Čeština 185 Slovenščina 197 Polski 208 Românește 220 Slovenčina 232 Hrvatski 244 Srpski 256 Български 268 Eesti 281 293 Latviešu Lietuviškai 305 Українська 317 中文 330 العربية 356







Please read and comply with these original instructions prior to the initial operation of your appliance and store them for later use or subsequent owners.

Contents		
Device elements	ΕN	1
Safety instructions	ΕN	1
Proper use	ΕN	2
Safety Devices	ΕN	2
Environmental protection	ΕN	2
Before Startup	ΕN	3
Start up	ΕN	3
Operation	ΕN	4
Transport	ΕN	5
Storage	ΕN	6
Care and maintenance	ΕN	6
Troubleshooting	ΕN	6
Accessories and Spare Parts .	ΕN	7
Warranty	ΕN	7
EU Declaration of Conformity .	ΕN	8
Technical specifications	ΕN	9

Device elements

Please unfold the front picture side

- 1 Nozzle
- 2 Marking of the nozzle
- 3 Spray lance
- 4 Trigger gun
- 5 Safety lever
- 6 Lever for trigger gun
- 7 High pressure hose
- 8 Rubber band (not with appliances with hose drum)
- 9 Spray lance holder with clamping, for transportation
- 10 Power switch
- 11 Carrying handle
- 12 Quiver for spray lance
- 13 High pressure connection
- 14 Handle
- 15 Water connection
- 16 Detergent suction hose with filter and detergent dosing
- 17 Sieve
- 18 Hose hub
- 19 Union joint
- 20 Wheel cap

- 21 Skid/parking runner
- 22 Nozzle rack for rotor nozzle (rotor nozzle is only included in the scope of delivery with model HD...Plus)
- 23 Nozzle rack for triple nozzle
- 24 Transport bracket for surface cleaner
- 25 Unlocking device push handle
- 26 Push handle, bottom (slid in)
- 27 Push handle, top (extended)
- 28 Storage compartment for hoses
- 29 Cable clamp
- 30 Spray lance holder without clamping
- 31 Hose drum
- 32 Crank

Colour coding

- The operating elements for the cleaning process are yellow.
- The controls for the maintenance and service are light gray.

Safety instructions

- Before first start-up it is definitely necessary to read the operating instructions and safety indications Nr. 5.951-949.0!
 - Please follow the national rules and regulations for fluid spray jets of the respective country.
- Please follow the national rules and regulations for accident prevention of the respective country. Fluid spray jets must be tested regularly and the results of these tests must be documented in writing.

Hazard levels

△ DANGER

Pointer to immediate danger, which leads to severe injuries or death.

△ WARNING

Pointer to a possibly dangerous situation, which can lead to severe injuries or death.

△ CAUTION

Pointer to a possibly dangerous situation, which can lead to minor injuries.

ATTENTION

Pointer to a possibly dangerous situation, which can lead to property damage.

Symbols on the machine



High-pressure jets can be dangerous if improperly used. The

jet may not be directed at persons, animals, live electrical equipment or at the appliance itself.

According to applicable regulations, the appliance must never be used on the drinking water net without a system separator. A suitable system separator by KÄRCHER or alternatively a system separator according to EN 12729 type BA must be used. Water that was flowing through a system separator is considered non-drinkable.

Proper use

Use this high pressure cleaner exclusively for

- Cleaning using low pressure jet and detergent (for e.g. for cleaning machines, cars, buildings, tools),
- For cleaning using high pressure jet without detergent (for e.g. for cleaning facades, terraces, garden appliances).

For stubborn soiling we recommend the use of a rotor nozzle (only included in the scope of delivery with model HD...Plus)

Quality requirements for water: *ATTENTION*

Only clean water may be used as high pressure medium. Impurities will lead to increased wear and tear or formation of deposits in the appliance.

If recycled water is used, the following limit values must not be exceeded.

pH value	6,59,5
electrical conductivity *	Conductivity fresh water +1200 µS/cm
settleable solids **	< 0,5 mg/l
total suspended solids ***	< 50 mg/l
Hydrocarbons	< 20 mg/l
Chloride	< 300 mg/l
Sulphate	< 240 mg/l
Calcium	< 200 mg/l

Total hardness	< 28 °dH
	< 50 °TH
	< 500 ppm
	(mg CaCO ₃ /I)
Iron	< 0,5 mg/l
Manganese	< 0,05 mg/l
Copper	< 2 mg/l
Active chloride	< 0,3 mg/l
free of bad odours	
* Maximum total 2000 µS	5/cm
** Test volume 11 settlin	a time 30 min

^{**} Test volume 1 I, settling time 30 min

Safety Devices

Safety devices serve for the protection of the user and must not be put out of operation or bypassed with respect to their function.

Pressure switch

If the lever on the trigger gun is released the pressure switch turns off the pump, the high pressure jet is stopped. If the lever is pulled the pump is turned on again.

Environmental protection



The packaging material can be recycled. Please do not throw the packaging material into household waste; please send it for recycling.



Old appliances contain valuable materials that can be recycled; these should be sent for recycling. Batteries, oil, and similar substances must not enter the environment. Please dispose of your old appliances using appropriate collection systems.

Notes about the ingredients (REACH)
You will find current information about the ingredients at:

www.kaercher.com/REACH

^{**} no abrasive substances

Before Startup

Attaching the Accessories

- → Attach the wheel caps.
- → Mount the nozzle on the spray lance (markings on the adjustment ring at the top).
- → Connect spray lance to trigger gun.
- → Release the unlocking device of the push handle.
- → Pull the push handle out to its end position

In devices without hose drum:

→ Fasten the high pressure hose to the high pressure connection.

In devices with hose drum:

- → Insert the crank in the hose drum shaft and lock it in.
- → Before rolling up, stretch out the high pressure hose.
- → Wind the high pressure hose in uniform layers on the hose drum by rotating the crank. Select the rotation direction in such a way that the high pressure hose does not get bent.

Start up

Electrical connection

△ DANGER

20

Danger of injury by electric shock.

- It is imperative to connect the appliance to the electric mains by means of a plug.
 It is forbidden to permanently connect the appliance to the power supply. The plug serves for the disconnection from the mains.
- The plug and coupling of the extension cable used must be watertight.
- Use the extension cord that has an adequate cross-section (see "Technical Data") and unwind it fully from the cable drum.

For connection values, see type plate/technical data.

- → Unwind the mains cable and place it on the floor.
- → Insert the mains plug into a socket.

Water connection

Connection to the water supply

△ WARNING

Observe regulations of water supplier.
According to applicable regulations, the appliance must never be used on the drinking water net without a system separator. A suitable system separator by KÄRCHER or alternatively a system separator according to EN 12729 type BA must be used.
Water that was flowing through a system separator is considered non-drinkable.

△ CAUTION

Always connect the system separator to the water supply, never directly to the appliance!

For connection values refer to technical specifications.

→ Connect the supply hose (min. length 7.5 m, minimum diameter 1/2") to the water connection point of the machine and at the water supply point (for e.g. a tap).

Note:

The supply hose is not included.

→ Open the water supply.

Drawing in water from open reservoirs

- → Screw the suction hose with filter (order no. 4.440-238.0) to the water connection.
- → Appliance ventilation: Unscrew the nozzle from the spray lance.
 - Switch on the appliance and let it run until the water exiting is bubble-free. Let the appliance run for 10 seconds then switch off the appliance switch. Repeat the procedure several times.
- Switch off the appliance and fit the nozzle again.

Operation

△ DANGER

Risk of explosion!

Do not spray flammable liquids.

If the appliance is used in hazardous areas (e.g. filling stations) the corresponding safety regulations must be observed.

△ DANGER

Long hours of using the appliance can cause circulation problems in the hands on account of vibrations.

It is not possible to specify a generally valid operation time, since this depends on several factors:

- Proneness to blood circulation deficiencies (cold, numb fingers).
- Low ambient temperature. Wear warm gloves to protect hands.
- A firm grip impedes blood circulation.
- Continuous operation is worse than an operation interrupted by pauses.

In case of regular, long-term operation of the device and in case of repeated occurrence of the symptoms (e.g. cold, numb fingers) please consult a physician.

△ CAUTION

Clean engines only at places with corresponding oil separators (environmental safety).

High pressure operation

The appliance can be operated in a vertical or horizontal position.

Note:

The appliance is equipped with a pressure switch. The motor starts up only when the lever of the pistol is pulled

- → Device with hose drum:

 Roll off the high pressure hose totally from the hose drum.
- → Set the appliance switch to "I".
- → Unlock the trigger gun and pull the lever of the gun.

Select spray type

- → Close the hand spray gun.
- → Turn the casing of the nozzle till the desired symbol matches the marking.

 High pressure circular spray (0°) for specially stubborn dirt
Flat low pressure spray (CHEM) for operating using detergents or cleaning at low pressure.
High pressure flat spray (25°) for large dirt areas

Operation with detergent

△ WARNING

Unsuitable detergents can cause damage to the appliance and to the object to be cleaned. Use only those detergents that have been approved by Kärcher. Observe the dosage and other instructions provided with these detergents. For considerate treatment of the environment use detergent economically.

Follow the safety instructions for using detergents.

Kärcher detergents ensure smooth functioning. Please consult us or ask for our catalogue or our detergent information sheets.

- → Take out detergent suck hose.
- → Adjust the suction volume of the detergent solution at the detergent filter.
- → Suspend end of suction hose in a container filled with detergent.
- → Set nozzle to "CHEM".

Recommended cleaning method

- → Spray the detergent sparingly on the dry surface and allow it to react, but not to dry.
- → Spray off loosened dirt with the highpressure ray.
- → Set the suction flow on the detergent filter to the maximum quantity after operation.
- → Start the appliance and rinse for one minute.

Interrupting operation

→ Release the lever of the trigger gun; the device will switch off.

Note:

When switching off the appliance, the water pressure is reduced by approx. 70%. This reduces the actuating force of the hand spray gun and the service life of the appliance is increased.

→ Pull again the lever of the trigger gun; the device will switch on again.

Turn off the appliance

- → Set the appliance switch to "0".
- → Disconnect the mains plug from the socket
- → Shut off water supply.
- → Activate trigger gun until device is pressure-less.
- → Press the safety lever of the trigger gun to secure the lever of the pistol against being released accidentally.

Storing the Appliance

- → Place the spray lance with the trigger gun into the quiver for the spray lance and snap it into place in the spray lance holder.
- → Wind the connection cable around the cable holder.
- → Coil up the high pressure hose, hang it over the hose rack and secure it by means of the rubber band.

or

Coil up the high-pressure hose on the hose drum. Fold down the handle of the crank.

- → Fasten the plug with the mounted clip.
- → Press the unlocking device of the push handle and slide the push handle in.

Frost protection

ATTENTION

Frost will destroy the not completely water drained device.

Store the appliance in a frost free area.

If you cannot store it in a frost-free place:

- → Drain water.
- → Pump in conventional frost protection agents through the appliance.

Note:

Use normal glycol-based anti-freezing agents for automobiles.

Observe handling instructions of the antifreeze agent manufacturer.

→ Operate device for max. 1 minute until the pump and conduits are empty.

Transport

△ CAUTION


Risk of personal injury or damage! Mind the weight of the appliance during transport.

- → In order to transport the appliance over longer distances, pull it behind you holding on to the push handle.
- → In order to carry the appliance, hold on to the handles.
- → In order to climb stairs, pull the appliance up step by step. The skids protect the casing from damage.
- → When transporting in vehicles, secure the appliance according to the guidelines from slipping and tipping over.

Transport bracket for surface cleaner

- → Attach the connecting piece of the surface cleaner to the bolt at the high-pressure cleaner.
- Screw on the union nut by approx. 1 rotation.

Transport by crane

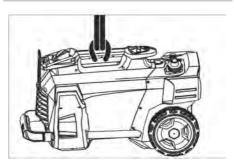

→ Attach the lifting device to the carrying handle of the appliance.

Safety information about cranes

△ DANGER

Risk of injury due to machine dropping.

- Adhere to the local accident prevention guidelines and safety notes.
- Check the carrying handle for damage prior to every transportation by crane.
- Check the lifting unit for damage prior to each transport by crane.
- Only lift the appliance using the carrying handle.
- Do not use stop chains.
- Protect the lifting device from inadvertent load release.
- Remove spray lance with trigger gun, nozzles, surface cleaner and other loose objects prior to transportation by crane.
- Do not transport any articles on the appliance during the lifting process.
- The appliance must only be transported by properly trained crane personnel.
- Do not stand below the load.
- Ensure that no persons are present in the immediate vicinity of the crane.
- Do not leave the appliance on the crane unattended.

Storage

△ CAUTION

Risk of personal injury or damage! Consider the weight of the appliance when storing it.

This appliance must only be stored in interior rooms.

Care and maintenance

△ DANGER

Risk of injury by inadvertent startup of appliance and electrical shock.

Prior to all work on the appliance, switch off the appliance and pull the power plug.

Safety inspection/ maintenance contract

You can sign with your dealer a contract for regular safety inspection or even sign a maintenance contract. Please take advice on this matter.

Before each use

- → Check connection cable for damages (risk of electrical shock); get the damaged connection cable replaced immediately by an authorised customer service person/ electrician.
- → Check the high pressure hose for damages (risk of bursting). Please arrange for the immediate exchange of a damaged high-pressure hose.
- → Check appliance (pump) for leaks. 3 drops per minute are permitted and can come out from the lower side of the appliance. Call Customer Service if there is heavy leakage.

Weekly

- → Clean the sieve in the water connection.
- → Clean filter at the detergent suck hose.

Clean the sieve in the water connection

- → Unscrew the covering nut.
- → Pull out the hose nipple with the sieve.
- → Clean the sieve from the outside and rinse it.

Note:

Align the hexagon of the hose nipple in the appliance for connection.

→ Insert the hose nipple with the sieve and tighten the union nut.

Troubleshooting

△ DANGER

Risk of injury by inadvertent startup of appliance and electrical shock.

- Prior to all work on the appliance, switch off the appliance and pull the power plug.
- Get the electrical components checked and repaired only by authorised customer service persons.
- Contact an authorised customer service person in case of problems not mentioned in this chapter or if you are in doubt or when you have been explicitly asked to do so.

Appliance is not running

- → Check connection cable for damages.
- → Check the supply voltage.
- → If the appliance is overheated: Set the appliance switch to "0". Allow machine to cool down at least for 15 minutes.

Set the appliance switch to "1".

→ Call Customer Service in case of electrical defects.

Pressure does not build up in the appliance

- → Set nozzle to "High pressure".
- → Deaerate the appliance (see "Start-up")
- → Clean the sieve in the water connection.
- → Check water supply level (refer to technical data).
- → Clean the nozzle.
- → Replace the nozzle.
- → Contact Customer Service if needed.

Pump leaky

3 drops of water per minute are permitted and can leak from the bottom of the appliance.

→ With stronger leak, have device checked by customer service.

Pump is vibrating

- → Check suction pipes for water and detergent and ensure that they are leakproof.
- → Set the suction flow on the detergent filter to the minimum quantity.
- → Deaerate the appliance (see "Start-up")
- → Contact Customer Service if needed.

Detergent is not getting sucked in

- → Set nozzle to "CHEM".
- → Increase the suction flow at the detergent filter.
- → Check/ clean detergent suction hose with filter.
- → Contact Customer Service if needed.

Accessories and Spare Parts

- Only use accessories and spare parts which have been approved by the manufacturer. The exclusive use of original accessories and original spare parts ensures that the appliance can be operated safely and trouble free.
- At the end of the operating instructions you will find a selected list of spare parts that are often required.
- For additional information about spare parts, please go to the Service section at www.kaercher.com.

Warranty

The warranty terms published by the relevant sales company are applicable in each country. We will repair potential failures of your appliance within the warranty period free of charge, provided that such failure is caused by faulty material or defects in manufacturing. In the event of a warranty claim please contact your dealer or the nearest authorized Customer Service centre. Please submit the proof of purchase.

EU Declaration of Conformity

We hereby declare that the machine described below complies with the relevant basic safety and health requirements of the EU Directives, both in its basic design and construction as well as in the version put into circulation by us. This declaration shall cease to be valid if the machine is modified without our prior approval.

Product: High pressure cleaner

Type: 1.520-xxx Relevant EU Directives 2006/42/EC (+2009/127/EC)

2014/30/EU 2000/14/EC

Applied harmonized standards

EN 60335-1 EN 60335-2-79

EN 55014-1: 2006+A1: 2009+A2: 2011

EN 55014-2: 2015 EN 62233: 2008 EN 61000-3-2: 2014 EN 61000-3-3: 2008

HD 5/12 C, HD 5/12 CX, HD 513 C, HD 5/

13 CX

EN 61000-3-11: 2000

HD 5/15 C, HD 5/15 CX, HD 5/17 C, HD 5/

17 CX, HD 6/13 C, HD 6/13 CX

Applied conformity evaluation method

2000/14/EC: Appendix V Sound power level dB(A)

HD 5/12 C, HD 5/13 C, HD 5/15 C, HD 5/17

C, HD 6/13 C Measured: 86 Guaranteed: 88

HD 5/12 CX, HD 5/13 CX, HD 5/17 CX, HD

6/13 CX

Measured: 89 Guaranteed: 92 HD 5/15 CX Measured: 87 Guaranteed: 90

The signatories act on behalf of and with the authority of the company management.

H. Jenner
Chairman of the Board of Management

S. Reiser
Director Regulatory Affairs & Certification

Documentation supervisor:

S. Reiser

Alfred Kärcher SE & Co. KG Alfred-Kärcher-Straße 28-40 71364 Winnenden (Germany)

Tel.: +49 7195 14-0 Fax: +49 7195 14-2212

Winnenden, 2019/04/01

Technical s	specif	ications		
Туре			HD 5/12 C	HD 5/12 C
		EU		
Maire Occurrents		EU	GB	CH
Main Supply	\ /	000	000 040	000
Voltage	V	230	230240	230
Current type	Hz		1~ 50	
Connected load	kW	2,5	2,5	2,2
Protection (slow, char. C)	Α	16	13	10
Type of protection			IPX5	
Extension cord 30 m	mm ²		2,5	
Water connection				
Max. feed temperature	°C		60	
Min. feed volume	l/min		12	
Suck height from open container (20 °C)	m		0,5	
Max. feed pressure	MPa		1	
Performance data				
Working pressure	MPa	12	12	11,5
Nozzle size	(035	035	038
Max. operating over-pressure	MPa	17,5	17,5	17,1
Water flow rate	l/min		8,3	1
Detergent suck in	l/h		025	
Max. recoil force of trigger gun	N		21,3	
Values determined as per EN 60335-2-79)	1		
Hand-arm vibration value	m/s ²		3,6	
Uncertainty K	m/s ²		0,9	
Sound pressure level L _{pA} (CX)	dB(A)		72 (75)	
Uncertainty K _{pA}	dB(A)	3		
Sound pressure level L_{WA} + Uncertainty K_{WA} (CX)	dB(A)	88 (92)		
Dimensions and weights		1		
Length	mm		380	
Width (CX)	mm	360 (370)		
Height	mm	930		
Typical operating weight (CX)	kg		23,7 (26)	

Туре		HD 5/12 C	HD 5/12 C	HD 5/12 C	HD 5/13 C
		HD 5/12 CX			HD 5/13 CX
		AU	KAP	SA	EU
Main Supply					
Voltage	V	240	22	20	230
Current type	Hz	1~ 50	1~	60	1~50
Connected load	kW	2,2	2	,4	2,6
Protection (slow, char. C)	Α	10	15	13	16
Type of protection			IP:	X5	I
Extension cord 30 m	mm²		2	,5	
Water connection					
Max. feed temperature	°C		6	0	
Min. feed volume	I/min		1	2	
Suck height from open container (20 °C)	m	0,5			
Max. feed pressure	MPa			1	
Performance data		I			
Working pressure	MPa	11,5	1	2	13
Nozzle size		038	03	36	034
Max. operating over-pressure	MPa	17,1	1	8	17,5
Water flow rate	I/min		8	,3	
Detergent suck in	l/h		0	.25	
Max. recoil force of trigger gun	N	21,3 22,2		22,2	
Values determined as per EN 60	335-2-	79			I
Hand-arm vibration value	m/s ²	3,6	4	,2	3,6
Uncertainty K	m/s ²		0	,9	
Sound pressure level L _{pA} (CX)	dB(A)	72 (75)	7	4	72 (75)
Uncertainty K _{pA}	dB(A)	3			
Sound pressure level L_{WA} + Uncertainty K_{WA} (CX)	dB(A)	88 (92)	9	0	88 (92)
Dimensions and weights					
Length	mm	380			
Width (CX)	mm	360 (370)			
Height	mm	930			
Typical operating weight (CX)	kg	23,7 (26)	25	5,2	23,7 (26)

Туре		HD 5/15 C	HD 5/17 C	HD 5/17 C	HD 6/13 C
		HD 5/15 CX	HD 5/17 CX	HD 5/17 CX	HD 6/13 CX
		EU	EU	KAP	EU
Main Supply					
Voltage	V	23	30	220	230
Current type	Hz	1~	50	1~60	1~ 50
Connected load	kW	2,8	3,0	3,0	2,9
Protection (slow, char. C)	Α	1	6	15	16
Type of protection			IP.	X5	ı
Extension cord 30 m	mm²		2	,5	
Water connection					
Max. feed temperature	°C		6	0	
Min. feed volume	I/min		12		13
Suck height from open container (20 °C)	m	0,5			
Max. feed pressure	MPa			1	
Performance data					
Working pressure (CX)	MPa	15 (15)	17 (17)	16,5 (16,5)	13 (13)
Nozzle size		032	027	030	038
Max. operating over-pressure	MPa		20		19
Water flow rate	l/min	8,3	8,1	8,0	9,8
Detergent suck in	l/h		0	.25	
Max. recoil force of trigger gun	N	23,8	25	5,4	26,6
Values determined as per EN	60335	-2-79			1
Hand-arm vibration value	m/s²	\limits	2,4		4,1
Uncertainty K	m/s ²		0,7		0,9
Sound pressure level L _{pA} (CX)	dB(A)	72 (74)	72 (75)	75	72 (75)
Uncertainty K _{pA}	dB(A)	3			
Sound pressure level L_{WA} + Uncertainty K_{WA} (CX)	dB(A)	88 (90)	88 (92)	91 (91)	88 (92)
Dimensions and weights					
Length	mm	380			
Width (CX)	mm	360 (370)			
Height	mm	930			
Typical operating weight (CX)	kg	25,2 (27,5)			

Туре		HD 6/13 C	HD 6/13 C	HD 6/13 C	HD 6/13 C
			HD 6/13 CX		
		AR	GB	KAP	SA
Main Supply					
Voltage	V	220	230240	2:	20
Current type	Hz	1~	50	1~	60
Connected load	kW	2	,9	2,9	2,8
Protection (slow, char. C)	Α	16	13	15	13
Type of protection			IPX	(5	
Extension cord 30 m	mm ²		2,	5	
Water connection	1				
Max. feed temperature	°C		60)	
Min. feed volume	I/min		13	3	
Suck height from open container (20 °C)	m	0,5			
Max. feed pressure	MPa	1			
Performance data	1			7	
Working pressure	MPa		13		12,5
Nozzle size		038		042	043
Max. operating over-pressure	MPa	19 18		8	
Water flow rate	l/min	9,8 10,0			0,0
Detergent suck in	l/h	025			
Max. recoil force of trigger gun	N	26,6			
Values determined as per EN 6	0335-2	2-79			
Hand-arm vibration value					
Hand-arm vibration value	m/s ²	4,1 3,7		,7	
Uncertainty K	m/s ²		0,0	9	
Sound pressure level L _{pA} (CX)	dB(A)	72 (75) 73		3	
Uncertainty K _{pA}	dB(A)	3			
Sound pressure level L_{WA} + Uncertainty K_{WA} (CX)	dB(A)	88 (92) 89		9	
Dimensions and weights		II.		I	
Length	mm	380			
Width (CX)	mm	360 (370)			
Height	mm	930			
Typical operating weight (CX)	kg	25,2 (27,5) 25,2			5,2