



PHONES

(044) 338-0-130
 (050) 332-0-130
 (063) 577-0-130
 (067) 353-0-130

130
 COM.UA

Internet store of
 autogoods



SKYPE
 km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules
 • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps
 • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors
 • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation
 • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits
 • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors
 • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid •
 Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<http://130.com.ua>

KENWOOD

GPS INTEGRATED DASHBOARD CAMERA


KCA-DR300

Quick Start Guide

JVCKENWOOD Corporation




1

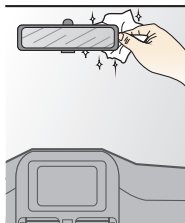


2



3

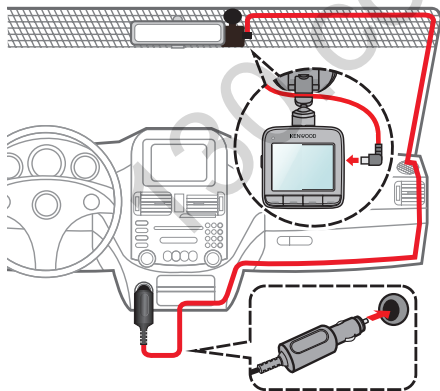


4

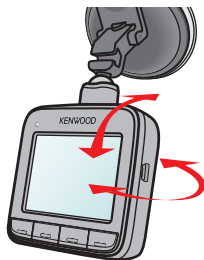

Getting to know the recorder

Note: The screenshots and other presentations shown in this manual may differ from the actual screens and presentations generated by the actual product.

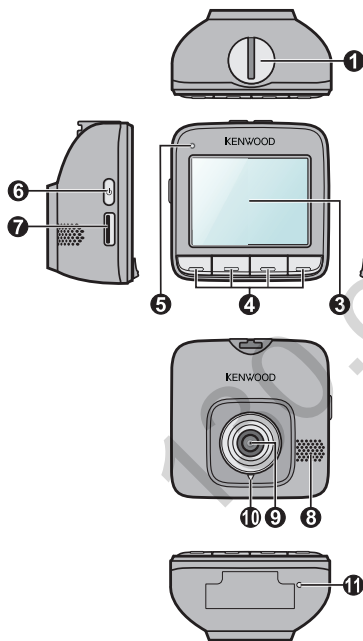

①	Device mount socket
②	Mini-USB connector
③	LCD screen
④	Function keys
⑤	LED indicator 1
⑥	Power key
⑦	Memory card slot
⑧	Speaker
⑨	Camera lens
⑩	LED indicator 2
⑪	Microphone

Setting up the recorder

Using your recorder in a vehicle


Instructions on how to mount the device and accessories in your vehicle can be found at the start of this guide.

- To ensure the highest quality recordings, you are advised to place the recorder near the rear view mirror.
- Select an appropriate location for mounting the device in a vehicle. Never place the device where the driver's field of vision is blocked.
- If the car's windscreen is tinted with a reflective coating, it may be athermic and impact the GPS reception. In this instance, please mount your device where there is a "clear area."
- The system will automatically calibrate the G sensor of the device during boot up. To avoid G sensor malfunction, always turn the device on AFTER you mount it in the vehicle properly.

Inserting a memory card

You must insert a memory card (may be sold separately) before you can start recording.

1. Hold the card by the edges and gently insert it into the slot with the label facing the rear side of the recorder.
2. To remove a card, gently push the top edge of the card inwards to release it, and pull it out of the slot.

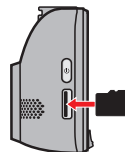

CAUTION:


- DO NOT apply pressure to the centre of the memory card.
- You are advised to use a Class 6 memory card with at least 8GB capacity. The recorder supports memory cards with up to 32GB capacity.
- The manufacturer does not guarantee the product's compatibility with memory cards from all manufacturers.
- Before you start recording, please format the memory card to avoid malfunction caused by files not created by the recorder. You can format the card on your computer or on the recorder (by selecting **Settings Menu > Format**).
- You are recommended to turn the device off before removing the memory card.

Operating basics

Turning the recorder ON and OFF

Complete the installation and then connect the recorder to the car charger according to the instructions in the previous section.



- Once the vehicle engine is started, the recorder automatically turns on. By default, the recording will automatically start in few seconds after start-up.
- When a GPS fix is established, the GPS signal icon  will show on the top-right corner of the screen. The number of the vertical bars in the icon indicates the strength of the signal.
- When the recorder is turned on, press the Power key to switch the LCD screen on/off.
- To manually turn the recorder on and off, press and hold the Power key for 2 seconds.



Restarting the recorder

Occasionally, you may need to perform a hardware reset when the recorder stops responding; or appears to be “frozen” or unresponsive.

- To restart the recorder, press and hold the Power key until the system is shut down; press the Power key again to turn the recorder on.



Recording in driving mode (Continuous recording)

When the recorder is powered on, it will start continuous recording automatically. The recording may be divided into several video clips; recording will not stop between video clips.

- When continuous recording is in progress, you can manually stop recording by pressing . Press  to return to the recording screen; the system will start continuous recording automatically.
- The continuous recordings can be found in the "Video" category for file playback.




Recording in driving mode (Emergency recording)


By default, if an event happens, such as sudden impact, high-speed driving, an aggressive turn or an accidental crash, the G sensor will prompt the recorder to start an emergency recording.


- If you want to manually start an emergency recording while continuous recording is in progress, press . To stop emergency recording and resume continuous recording, press .
- The emergency recordings can be found in the "Emergency" category for file playback.

Recording in Parking mode

Your recorder supports recording in Parking mode. Parking mode is disabled by default. You have to enable the function by selecting **Settings Menu > Parking Mode > Detection > On**.

Note: If the parking mode icon is not shown, please check your device memory storage allocation. Go to **Settings Menu > System > Storage allocation** and use  /  to set an allocation, then  to save. Changing the allocation will erase the memory card, so save any videos or photos to your computer first.


- When Parking mode is enabled and the device is powered off (e.g. the vehicle engine is stopped or the power cable is disconnected) or the car stops moving for 5 minutes, the system starts parking recording.
- If you want to manually start parking recording while continuous recording is in progress, press .

To stop Parking mode and resume continuous recording, press .

- Once the movements were detected and recorded during Parking mode, you will be asked to watch the video when you stop Parking mode. Follow the on-screen prompts to watch videos or resume continuous recording.
- The parking recordings can be found in the "Parking" category for file playback.




Camera mode

The recorder allows you to take a photo.


- If the recording is in progress, press  to take a photo.
- The photos can be found in the "Photo" category for viewing.

Playback mode

To select a video or photo for playback:

1. Press  to access the Settings Menu.
2. Select File Playback and press .
3. Select the desired type and press .

The types include: Video (continuous recordings), Emergency, Parking (parking recordings) and Photo.

4. Select the desired file from the list, and then press  to start playback.

System settings

To customise the system settings, press .


Item	Description
File Playback	Plays the recorded videos and photos.
Record Sound	Sets if you want to include sounds in the recordings.
Parking Mode	Allows you to change the settings of Parking mode.
Video Recording	Changes the settings of recording.
G-Sensor Sensitivity	When enabled, the G sensor will prompt the recorder to start recording automatically if an event happens.
System	Allows you to change the system settings of the device.
Format	Formats a memory card. (All data will be erased.)

KENWOOD DRIVE-VIEW PLAYER

KENWOOD DRIVE-VIEW PLAYER is a tool for you to view the videos recorded on the recorder.

Playing the recording files

1. Insert the attached CD-ROM into the disc drive of your computer. Double-click Setup.exe (Windows) or KENWOOD DRIVE-VIEW PLAYER_*****.dmg (MAC) and install KENWOOD DRIVE-VIEW PLAYER by following the on-screen prompts.
2. Remove the memory card from the recorder and access the card on the computer via a card reader. You are advised to copy the recording files to your computer for backup and playback.
Or connect the recorder with the memory card inserted to your computer via a USB cable.
3. Start KENWOOD DRIVE-VIEW PLAYER on the computer.

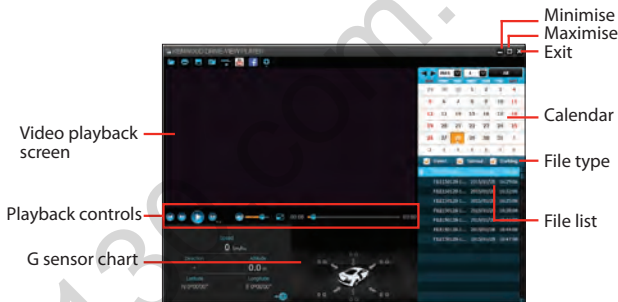

4. Double-click the desired file on the file list to start playback.

For more information

For the detailed instructions on how to use the recorder, please refer to the User Manual that you can download on our website: www.kenwood.com/cs/ce/

Precautions and notices

- For your own safety, do not operate the controls of the product while driving.
- A window mount is needed when using the recorder in a car. Make sure that you place the recorder in an appropriate place, so as not to obstruct the driver's view or deployment of airbags.
- Make sure that no object is blocking the camera lens and no reflective material appears near the lens. Please keep the lens clean.
- If the car's windscreen is tinted with a coating, it may impact the recording quality.

Safety precautions

About charging

- Use only the charger supplied with your device. Use of another type of charger may result in malfunction and/or danger.
- This product is intended to be supplied by a LISTED Power Unit marked with "LPS", "Limited Power Source" and output rated + 5 V dc / 1.0 A.
- Use a specified battery in the equipment.

About the charger

- Do not use the charger in a high moisture environment. Never touch the charger when your hands or feet are wet.
- Allow adequate ventilation around the charger when using it to operate the device or charge the battery. Do not cover the charger with paper or other objects that will reduce cooling. Do not use the charger while it is inside a carrying case.
- Connect the charger to a proper power source. The voltage requirements are found on the product case and/or packaging.
- Do not use the charger if the cord becomes damaged.
- Do not attempt to service the unit. There are no serviceable parts inside. Replace the unit if it is damaged or exposed to excess moisture.

About the battery

- Use a specified battery in the equipment.
- CAUTION: This unit contains a non-replaceable internal Lithium Ion battery. The battery can burst or explode, releasing hazardous chemicals. To reduce the risk of fire or burns, do not disassemble, crush, puncture, or dispose of in fire or water.
- Important instructions (for service personnel only)
 - Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
 - Replace only with the same or equivalent type recommended by the manufacturer.
 - The battery must be recycled or disposed of properly.
 - Use the battery only in the specified equipment.