



PHONES

0 (800) 800 130
 (050) 462 0 130
 (063) 462 0 130
 (067) 462 0 130



SKYPE

km-130

130

COM.UA

Internet store of autogoods

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules
 • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps
 • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronics • Front parktronics • Combined parktronics • Rear-view mirrors
 • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation
 • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits
 • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors
 • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid •
 Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<https://130.com.ua>



NAM1700r

AV Media Receiver

User Manual

Nakamichicaraudio.com

Nakamichi.Global

Nakamichi.caraudio

CONTENTS

Introduction of Touch Key Function-----	1 EN
Introduction to Key Function of Remote Controller -----	2 EN
Safety instructions -----	2 EN
Functional application -----	2 EN
Main menu -----	3 EN
Radio -----	4 EN
USB, card -----	4 EN
Input -----	5 EN
Mobile Internet -----	5 EN
Bluetooth -----	6 EN
Set up -----	7 EN
Wire link -----	8 EN
Technical specification-----	9 EN
Common Troubleshooting Guidelines -----	10EN


INTRODUCTION OF TOUCH KEY FUNCTION

Accessory List

- 1、Power cable ----- 1 PCS
- 2、Remote controller ----- 1 PCS
- 3、User manual ----- 1 PCS
- 4、Loading bracket ----- 1 PCS
- 5、Loading screw ----- 12 PCS



- 1、TF CARD: Files can be read from TF Card
- 2、Knob key: Rotating left and right can reduce and increase the volume;Short press: silence;
long press: shutdown
- 3、Home menu: Press to enter the main menu
- 4、Return key: press to return to the previous page
- 5、USB: You can read files from USB

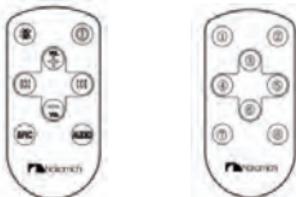

INTRODUCTION TO KEY FUNCTION OF REMOTE CONTROLLER

Serial	Name	Operational and control modes
1		Mute unit or cancel mute.
2		On / off
3	VOL+	Press to increase volume, long press increases volume continuously.
4		Radio - Switch to the previous radio preset. USB/SD/Bluetooth Music - Switch to the previous track
5		Radio - Switch to the next radio preset. USB/SD/Bluetooth Music - Switch to the next track.
6	VOL-	Press to decrease volume, long press decreases volume continuously.
7	SRC	Switch modes.
8	AUDIO	Select left, right, or stereo mode.

FUNCTIONAL APPLICATION

Safety instructions

1. In order for safe driving and to avoid violating any traffic regulations, please do not watch any videos and do not operate the unit while driving.
2. In order to drive safely and avoid violating traffic rules, do not watch the program and operate the machine while driving.
3. In order to avoid short circuit, do not expose the equipment to rain.
4. In order to avoid short circuiting the unit, please do not expose the unit to rain or any other source of water.
5. In order to avoid short circuiting the unit, please do not expose the unit to any bare metal during installation.
6. Do not attempt to dismantle the unit for maintenance, all service and maintenance should be performed by an authorized service centre or technician.
7. When the engine is turned off, avoid using the unit for an extended period of time as this might drain the car's battery.
- 8.

FUNCTIONAL APPLICATION

Main interface

Upon booting, the unit will default to the main menu, as shown below.



The functions are as follows:



: Click to enter the radio interface



: Click to enter the mobile phone
connection interface



: Click to enter the Bluetooth interface



: Click to enter the USB interface



: Click to enter the external audio/video interface



: Click to enter the TF Card Interface



: Click to enter SWC settings interface



: Click to enter the settings interface



: Click to enter the sound settings interface



FUNCTIONAL APPLICATION

Radio

Touch the radio in the main menu to enter the radio interface.



Touch the  icon to return to the main menu.

Touch the  icon to switch FM1/FM2/FM3/AM1/AM2.

Touch the  icon and press it to scan and save the station. Long press this icon to automatically search and save the station with the strongest signal.

Touch  can turn on/off ST function.


Touch  can turn on/off LOC function.

Touch  to open the keyboard for precise frequency input.

Touch  to enter the sound settings interface.

USB / Card


Upon inserting a compatible USB or CARD, the unit will default to the following interface.

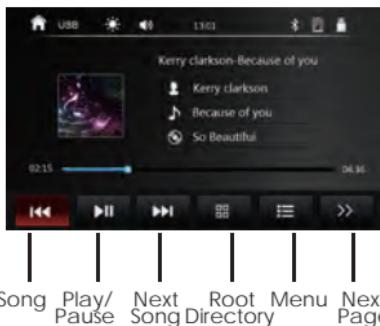

FUNCTIONAL APPLICATION

Input

Plug in video or audio input into the corresponding jack, then press the AUX icon to enter the Input interface.

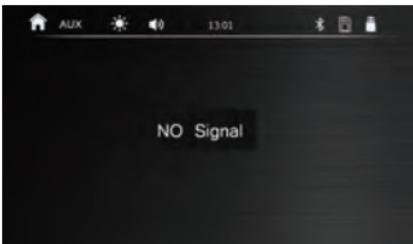

Mobile Internet


Plug in video or audio input into the corresponding jack, then press the AUX icon to enter the Input interface.



Bluetooth

After connecting your mobile phone to your unit using bluetooth, you will be able to make phone calls and play music. Press the Bluetooth icon to enter the Bluetooth interface.


Telephone directory

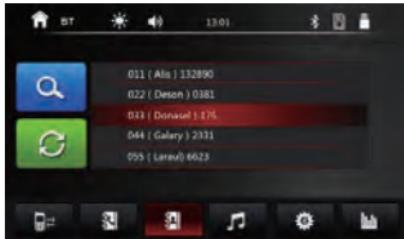

FUNCTIONAL APPLICATION

Bluetooth connection

Touch the icon and enter the Bluetooth connection interface

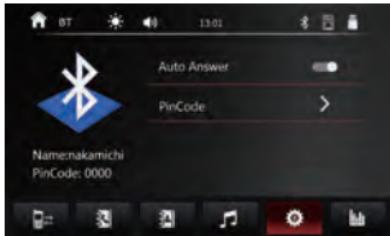


Call record

This interface allows you to view call records




Bluetooth music

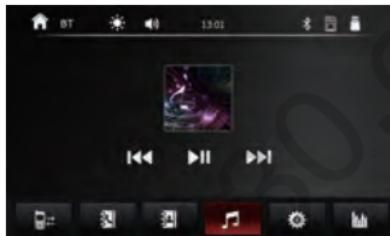

Play music from your Bluetooth connected device from this interface.

Call up

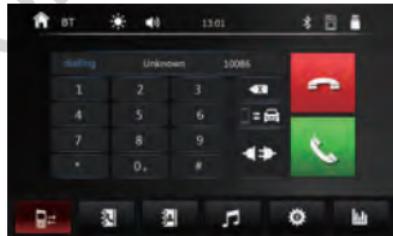


In this interface, calls can be dialed or answered locally

FUNCTIONAL APPLICATION

Steering wheel

Update SWC settings in this interface.

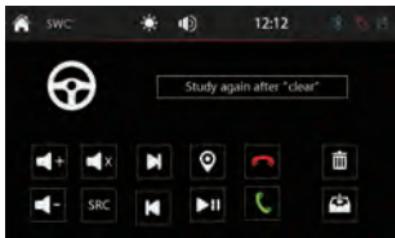

Click Start Settings;.

Click on the function icon corresponding to this interface, and the icon will flicker. Press the button on the SWC panel for a long time. When the corresponding function icon stops flickering, loosen your finger. Indicates that the setup was successful;

Click on the icon to save, you can use the corresponding button on the SWC panel.

Set up

Touch the Settings icon to enter the main interface



System language: Touch [Language] Icon to enter Language Set up the interface and choose the language you need.

Radio:Touch the radio icon to enter the radio area settings

Display settings

Adjust screen settings and touch calibration in this interface..



Touch Adjustment: Recalibrate touch coordinates.

Background Settings: Replace background settings in this interface.

Sound settings




EQ settings:Touch icon into EQ settings, can switch EQ mode: User/Rock/Classic /Popular, etc.

Boot Volume:The default boot can be selected after touching in.

Reversing Volume: Select Reversing Screen after Touch Entry Volume level.

WIRE LINK

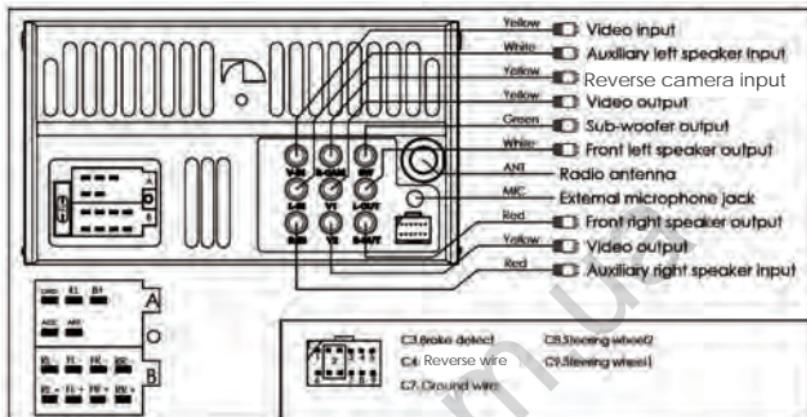

	Color	Function
A	Red	ACC / Ignition wire
	Black	Ground wire
	Blue	ANT wire
	Orange	Light on signal / backlight adjustment
	Yellow	Power supply
B	Green	Rear left Speaker (+)
	Green/Black	Rear left Speaker (-)
	Green	Front Left Speaker (+)
	Green/Black	Front Left Speaker (-)
	Gray	Front right Speaker (+)
C	Grey/Black	Front right Speaker (-)
	Violet	Rear right Speaker (+)
	Purple/Black	Rear right Speaker (-)
	Pink	C3: Brake
	Brown	C4: Reverse wire
	Black	C7: Earth wire
	Green	C8: Steering wheel control line 2
	White	C9: Steering wheel control line 1

TECHNICAL PARAMETERS

Routine

Voltage: 14.4V (10.5-16V)

size (WxHxD):

178x100x60MM

Working temperature: -10 C -+70 C

Storage temperature: -20 C -+80 C

Net weight: 0.5Kg

TFT Display Options

Display size: 7"

Display resolution: 800x480 RGB

Contrast degree: 500

Radio Options

FM Frequency Modulation

FM Range: 87.5-108.0MHZ

AM FM Range: 522-1620KHZ

Supporting Video Format

H264/WMV/DIVX/MKV/FLV

Audio format support

MP3/WMA/FLAC

USB interface options

Pre USB: Read (rechargeable 5V/1A)

Video options

External Video Input System:

NTSC/PAL/SECAM

External Video Input: 1VP-P/75Ω

Audio options

Maximum power: 4x50W

Front output(V):4V/10KΩ

Pre-output impedance: ≤600Ω

Speaker impedance: 4-8Ω

Bluetooth options

Communication system: BT4.0 +EDR

Output: Bluetooth Standard Power

Level 2 Maximum communication

range: About 5 meters.

Band: 2.4G




COMMON TROUBLESHOOTING GUIDELINES

Fault	Reason	Solution
Unable to boot	Power supply fuse burned out	Replacement of the same type of fuse
	Other factors cause microprocessors to work abnormally	Reboot by pressing the reset hole on the panel with the pointed object point
When the ignition switch is turned off, all the information of setting is lost.	Replacement of batteries or fuses	Reset the information and keep it
The radio is ineffective	Weak radio signal	Re-search by moving the car to another location
	Failure to connect radio antennas leads to weak signals	Connect the antenna and retrieve the station
No image	Other factors cause microprocessors to work abnormally	Reboot by pressing the reset hole on the panel with the point of the pointed object
Silent output	Small voice	Increase the volume required
	Output line incorrectly connected	Check Output Line Connection

PRECAUTIONS ON POWER SUPPLY AND SPEAKER CONNECTIONS:

Do not connect the speaker leads of the power cord to the car battery; otherwise, the unit will be seriously damaged.

BEFORE connecting the speaker leads of the power cord to the speakers, check the speaker wiring in your car.

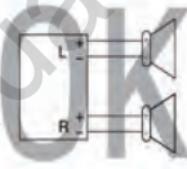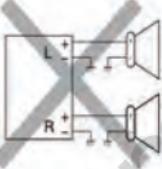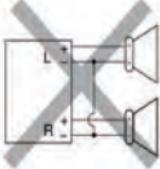



NAM1700r

AV媒體接收器

用戶手冊

Nakamichicaraudio.com

Nakamichi.Global Nakamichi.caraudio

目錄

觸摸按鍵功能介紹-	1 CN
遙控器按鍵功能介紹	2 CN
安全說明	2 CN
功能應用	2 CN
主菜單	3 CN
收音機	4 CN
U盤、卡	4 CN
輸入	5 CN
手機互聯	5 CN
藍牙	6 CN
設置	7 CN
線材鏈接	8 CN
技術規格	9 CN
常見故障排除指南	10 CN


觸摸按鍵功能介紹

附件清單

- 1、電源線-----1套
- 2、遙控器-----1個
- 3、用戶手冊-----1本
- 4、裝車支架-----1套
- 5、裝車螺絲-----12顆



- 1、TF CARD : 可以從TF Card讀取文件
- 2、旋鈕鍵：左右旋轉可減小和加大音量；
短按：靜音；長按：關機
- 3、主菜單鍵：按下進入主菜單
- 4、返回鍵：按下返回前一頁面
- 5、USB:可以從USB讀取文件

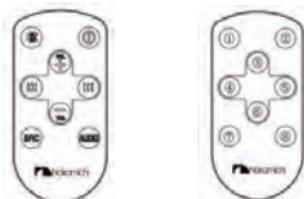

1 CN

遙控器按鍵功能介紹

序号	名称	操作和控制模式
1	Ⓐ	打開靜音或取消靜音
2	Ⓑ	開/關
3	VOL+	短按逐步增加音量，長按可持續增加音量
4	Ⓜ	收音機—切換到上一個預設 USB/SD/藍牙音樂—切換到上一個
5	Ⓝ	收音機—切換到下一個預設 USB/SD/藍牙音樂—切換到下一個
6	VOL-	短按可逐步減小音量 長按可持續減小音量
7	SRC	按下後進行模式切換
8	AUDIO	按下後選擇左聲道，右聲道和立體聲

功能應用

安全說明

- 1、使用本機前請閱讀說明書，不遵守說明書所造成的損壞將不享受保修。
- 2、為了安全駕駛並避免違反交通規則，請勿在駕駛時觀看程序並操作本機。
- 3、為避免短路，請勿將設備暴露在雨中。
- 4、為避免短路，請勿將設備或任何遺留的金屬物品放入。
- 5、請勿自行打開機器進行維修，請到專業維修站進行維修。
- 6、發動機關閉時，請勿長時間使用汽車音響，否則電池可能會耗盡。
- 7、請勿在設備的通風口和其他開口處插入任何物品。
- 8、小心擦拭屏幕！不用使用尖銳的物體推，擦，劃屏幕。

功能應用

主菜单

第一次開機默認進入主菜單，如下圖所示



功能如下：

-  : 點擊進入收音機界面
-  : 點擊進入手機連接界面
-  : 點擊進入藍牙界面
-  : 點擊進入USB讀取界面
-  : 點擊進入外部音頻/視頻界面
-  : 點擊進入卡讀取界面
-  : 方向盤學習界面
-  : 點擊進入設置界面
-  : 點擊進入音效設置界面



功能應用

收音机

觸摸主菜單中的“收音機”進入收音機界面。

觸摸【】圖標，可返回主菜單。

觸摸【】圖標，可切換FM1/FM2/FM3/AM1/AM2。

觸摸【】圖標，短按即可掃描並保留站長按可以自動搜索，並在菜單中保存最強信號站。

觸摸【】可以打開/關閉ST功能。

觸摸【】可以打開/關閉LOC功能。


觸摸【】可以打開鍵盤輸入頻點。

觸摸【】進入音效設置。



U盘/卡

當插入USB或卡時，本機可以播放視頻/音頻/圖片文件，默認切入下面界面：

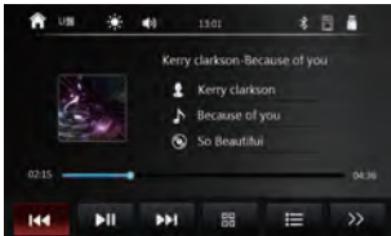

上一曲 播放/暫停 下一曲 根目錄 菜單 下一頁
 | | | | |
 | | | | |

功能應用

輸入

將視頻輸入接口插入視頻輸入插口，音頻輸入接口插入音頻輸入插口，在主菜單觸摸“AUX”圖標進入輸入界面。



藍牙


本系統支持手機藍牙連接，連接藍牙後，可實現撥號/接聽/電話薄/音樂播放等 功能。觸摸藍牙圖標進入BT界面。

手機互聯

觸摸主菜單中的“手機互聯”進入手機連接界面，可將手機畫面投射到本機。



電話簿

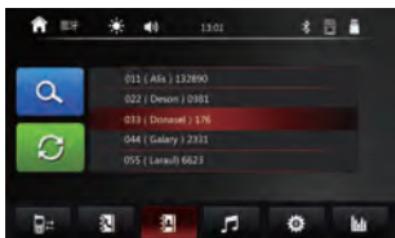


功能應用

藍牙連接界面

觸摸圖標後進入藍牙連接界面



藍牙音樂

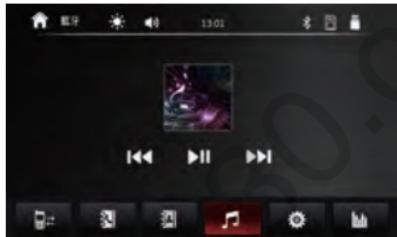

點擊可播放手機音樂

通話記錄

在此界面可查看通話記錄



撥打電話




在此界面可通過本機撥號或接聽來電

功能應用

方向盤

主界面觸摸“方向盤”圖標進入設置界面

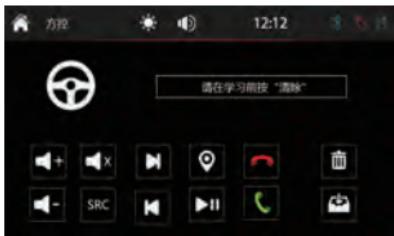

点击  开始设置

点击SWC Setting界面对应的功能图标，图标会闪烁。此时长按SWC面板上面的按键，当对应的功能图标停止闪烁，松开手指。表示设置成功；

点击  保存设置就可以使用SWC面板上面的对应功能按钮。

設置

主界面觸摸“設置”圖標進入



系統語言：觸摸【語言】圖標進入語言設置界面，選擇所需語言。

收音機：觸摸【收音機】圖標進入收音區域設置

顯示設置

屏幕調整：觸摸圖標進入屏幕調整界面，可調整顯示效果



觸摸調整：觸摸圖標進入觸摸調整界面可重新校准觸摸坐標背景設置：進入後，可更換其他背景


聲音設置



EQ設置：觸摸圖標進入EQ設置，可切換EQ模式：用戶/搖滾/古典/流行等開機音量：觸摸進入後可選擇默認開機音量等級。

倒車音量：觸摸進入後可選擇倒車畫面音量等級

線材鏈接

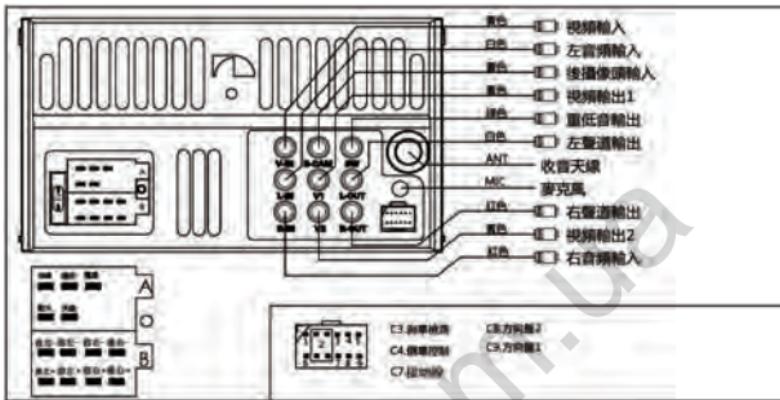

	顏色	功能
A	紅色	點火線
	黑色	接地線
	藍色	ANT自動天線
	橙色	燈控
	黃色	電源
B	綠色	後左喇叭(+)
	綠色/黑色	後左喇叭(-)
	綠色	前左喇叭(+)
	綠色/黑色	前左喇叭(-)
	灰色	前右喇叭(+)
C	灰色	前右喇叭(-)
	紫色	後右喇叭(+)
	紫色/黑色	後右喇叭(-)
	粉色	C3 : 制動
	棕色	C4 : 後退控制
	黑色	C7 : 接地線
	綠色	C8 : 方向線2
	白色	C9 : 方向線1

技術參數

常規

電壓：14.4 (10.5-16V)

尺寸 (WxHxD):

178x100x60MM

工作溫度：-10°C-+70 °C

儲存溫度：-20°C-+80 °C

淨重： 0.5Kg

TFT顯示器選項

顯示器尺寸：7寸

顯示分辨率：800x480 RGB

對比度：500

收音機選項

FM調頻範圍：87.5-108.0MHZ

AM調頻範圍：522-1620KHZ

支持視頻格式

H264/WMV/DIVX/MKV/FLV

支持音頻格式

MP3/WMA/FLAC

USB界面選項

前置USB：讀取 (可充電5V/1A)

視頻選項

外部視頻輸入系統：

NTSC/PAL/SECAM

外部視頻輸入：1VP-P/75Ω

音頻選項

最大功率：4x50W

前置輸出(V):4V/10KΩ

前置輸出阻抗：≤600Ω

揚聲器阻抗：4-8Ω

藍牙選項

通信系統：BT4.0版 +EDR

輸出:藍牙標準功率2級

最大通信範圍：大概5米



頻段：2.4G

常見故障排除指南

故障	原因	解决方法
不能開機	電源供電保險絲燒壞	更換同型號保險絲
	其他因素造成微處理器工作異常	用尖端物點按面板上的複位孔，重新開機
點火開關關閉後，設置的信息全部丟失	更換蓄電池或保險絲	重新設置信息並保持
收音收臺效果差	電臺信號弱	將車移動到另外一個位置重新搜索
	收音天線未連接好導致信號弱	連接好天線重新搜臺
無圖像	其他因素造成微處理器工作異常	用尖端物體點按面板上的複位孔，重新開機
無聲音輸出	聲音小	加大到所需的音量
	輸出線未正確連接	檢查輸出線連接

電源和揚聲器接線注意事項

切勿把揚聲器導線接頭接至電池，否則本機將會嚴重損壞。
在把揚聲器導線接頭接至揚聲器之前，檢查您汽車上的揚
聲器線路。

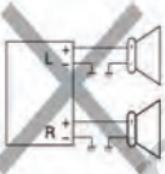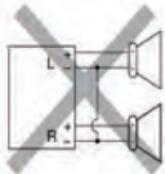

130.com.ua

130.com.ua

FIND US ON

-  www.nakamichicaraudio.com
-  Nakamichi.Global
-  Nakamichi.caraudio