



#### PHONES

(044) 360-7-130  
 (050) 336-0-130  
 (063) 788-0-130  
 (067) 233-0-130  
 (068) 282-0-130

# 130

COM.UA

## Internet store of autogoods



#### ICQ

294-0-130  
 597-0-130

SKYPE  
 km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |  
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |  
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<http://130.com.ua>





 
# RUE-4191

## Universal Remote Controller

## Owner's Manual

### Installation of Remote Control Holder

- Do not leave the remote control mounted on the holder, if it is direct sunlight. Remove the remote control from the holder and put it in the glove compartment.
- If double-sided adhesive tape cannot install the holder securely, use screws.

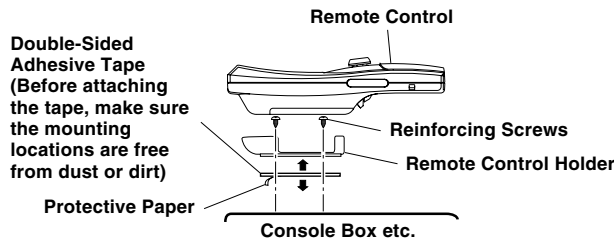

### Battery Replacement

Applicable battery: Use two "AAA" sized dry batteries or equivalent.

- Opening the battery cover.**  
Push on the cover and slide it as indicated by the arrows then the cover will be removed.
- Replacing the batteries.**  
Remove the old batteries. Insert new ones matching the (+) and (-) polarities as shown in the diagram inside the remote control.
- Closing the cover.**  
Push the cover in the arrow direction until a click is heard.

### In Case of Difficulty

 
 
Problem	Cause	Solution
Remote Control Inoperative.	Reverse placement of battery.	Place the battery correctly into its cradle in the compartment.
	Dead battery.	Replace the battery with a new one.
	Remote Control not pointed toward the head unit or monitor.	Point the remote control directly toward your head unit or monitor.

### Specifications

Battery Type .....	AAA size batteries
Battery Quantity .....	2
Dimensions (W × H × D) .....	56 × 142.5 × 37 mm (2-1/4" × 5-5/8" × 1-7/16")
Weight (without battery) .....	72 gr (2.6 oz)

### Accessories

Battery (AAA) .....	2
Remote Control Holder .....	1 set
Double-Sided Adhesive Tape .....	1 set
Screw .....	2

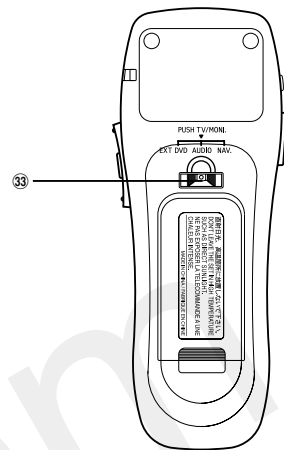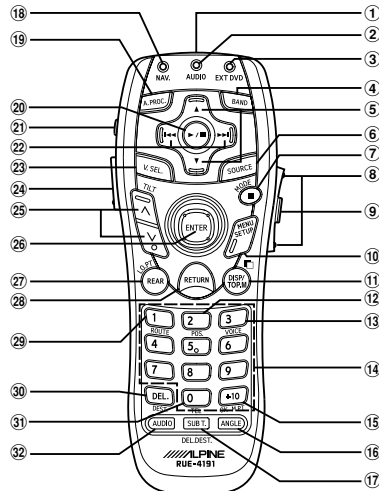

### Head Unit Control Mode

When operating the Head Unit, set the EXT DVD/AUDIO/NAV. Switch to the "AUDIO" side.

- Remote Control Transmitter
- Status indicator for AUDIO mode
- 
- BAND button
- Radio mode: Preset Selection  
Changer mode: Disc Selection  
MP3 mode: Folder Select  
Tape mode: Programme Sensor
- SOURCE button
- 
- VOLUME UP/DOWN button
- MUTE button
- 
- 
- 
- 
- 
- 
- 
- A.PROC. button
- PLAY/PAUSE button
- Power ON/OFF button
- Radio mode: SEEK UP/DOWN  
CD/MD/Changer mode: Music Sensor, BW/FF (press and hold)
- Tape mode: REW/FF
- 
- LIGHT Button for Remote Controller
- Display Angle UP/DOWN button
- 
- 
- 
- 
- 
- 
- 
- EXT DVD/AUDIO/NAV. Switch  
TV/MONI. button (Push)

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.

### Map/Arrow type Navigation Control Mode

When operating the navigation, set the EXT DVD/AUDIO/NAV. Switch to the "NAV." side.

- Remote Control Transmitter
- 
- 
- 
- 
- 
- MODE button
- VOLUME UP/DOWN button  
(When connected with the Ai-NET Head Unit)
- MUTE button  
(When connected with the Ai-NET Head Unit)
- MENU button
- button (MAP Type only)
- POS. button
- VOICE button
- Numeric Keypad
- OK/M.PT button
- 
- DEL. DEST. button
- Status indicator for NAV. mode
- 
- 
- Power ON/OFF button
- 
- 
- LIGHT button for Remote Controller
- Zoom (Wide/Detail) button (Map Type only)
- Joystick/ENTER button
- LO.PT button
- RETURN button
- ROUTE button
- DEL./DEST. button
- TEL. button (Map Type only)
- 
- EXT DVD/AUDIO/NAV. Switch  
TV/MONI. button (Push)

Notes:

- Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.
- After pressing the MODE button, press the following buttons while the status indicator is blinking:  
Numeric Keypad (0 to 9). DEL. button, OK button

### AV Head Unit Control Mode

When operating the AV Head Unit, set the EXT DVD/AUDIO/NAV. Switch to the "AUDIO" side.

- Remote Control Transmitter
- Status indicator for AUDIO mode
- 
- BAND button
- Radio mode: Preset Selection  
Changer mode: Disc Selection
- SOURCE button
- 
- VOLUME UP/DOWN, Audio Adjust button
- MUTE button
- 
- 
- 
- 
- 
- Function button (1 to 7)
- 
- 
- 
- 
- A.PROC. button
- Audio mode Selection (VOL./BASS/TRE/BAL/FAD)  
Press and hold for 2 seconds to LOUD ON/OFF
- Power ON/OFF button
- Radio mode: SEEK UP/DOWN  
CD/MD/Changer mode: Music Sensor, BW/FF (press and hold)
- V.SEL. button
- LIGHT button for Remote Controller
- Display Angle UP/DOWN button
- 
- 
- 
- 
- 
- 
- EXT DVD/AUDIO/NAV. Switch  
TV/MONI. button (Push)

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.

### TV/Monitor Control Mode

When controlling the Monitor, press the EXT DVD/AUDIO/NAV. Switch to activate the TV/MONI. mode.

Check which TV Tuner or Monitor functions corresponds to which buttons on the remote control and attach the appropriate seal (supplied).

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.

### DVD Player/DVD Changer Control Mode

When operating the External DVD Player/DVD Changer, set the EXT DVD/AUDIO/NAV. Switch to the "EXT DVD" side.

- Remote Control Transmitter
- 
- Status indicator for EXT DVD mode
- 
- DVD Changer mode: Disc Selection
- Audio SOURCE button  
(When connected with the Ai-NET Head Unit)
- (STOP) button
- VOLUME UP/DOWN  
(When connected with the Ai-NET Head Unit)
- MUTE button (When connected with the Ai-NET Head Unit)
- MENU button
- Press and hold for 2 seconds to display the setup menu.
- Searching by Title/Chapter/elapsed time  
Press and hold for 2 seconds to display the DVD menu/Title menu.
- 
- 
- 
- Numeric Keypad
- ANGLE button
- SUB T. (Subtitle) button  
Press and hold this for 2 seconds to turn the subtitles ON and OFF.
- 
- A.PROC. button  
(When connected with the Digital Audio Processor)
- Playback,  
Press and hold for 2 seconds to playback the slow motion.
- Power ON/OFF button
- Chapters and tracks skip  
Press and hold for 2 seconds to BW/FF.
- 
- LIGHT button for Remote Controller
- Display angle UP/DOWN button  
(When connected with the Ai-NET Head Unit)
- Joystick/ENTER button
- 
- RETURN button
- 
- 
- 
- AUDIO button
- EXT DVD/AUDIO/NAV. Switch  
TV/MONI. button (Push)

Note: Depending on the unit, some operations cannot be performed. For details, see the Owner's Manual for the unit.

## CAUTION

This symbol means important instructions. Failure to heed them can result in injury or material property damage.

### DO NOT MIX NEW BATTERIES WITH OLD BATTERIES. INSERT WITH THE CORRECT BATTERY POLARITY.

When inserting the batteries, be sure to observe proper polarity (+ and -) as instructed. Rupture or chemical leakage from the battery may cause fire or personal injury.

### Handling Precautions

Do not drop or apply shock to the unit. It may get permanently damaged.

Keep the unit away from water and moisture, direct sun and heat, and excessive dust.

Never use scouring pads, steel wool, abrasive powders or harsh chemical agents, such as lye solution, for cleaning.

Clean with a soft, lint-free cloth or cotton swab slightly dampened with a mild solution of detergent and water.

Do not operate this unit in a manner that could distract you from driving safely.



ALPINE ELECTRONICS MARKETING, INC.  
1-1-8 Nishi Gotanda,  
Shinagawa-ku,  
Tokyo 141-0031, Japan  
Phone 03-5496-8231

ALPINE ELECTRONICS OF AMERICA, INC.  
19145 Gramercy Place, Torrance,  
California 90501, U.S.A.  
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF CANADA, INC.  
7300 Warden Ave., Suite 203, Markham,  
Ontario L3R 9Z6, Canada  
Phone 1-800-ALPINE-1 (1-800-257-4631)

ALPINE ELECTRONICS OF AUSTRALIA PTY. LTD.  
6-8 Fiveways Boulevard Keysborough,  
Victoria 3173, Australia  
Phone 03-9769-0000

ALPINE ELECTRONICS GmbH  
Kreuzerkamp 7,  
40878 Ratingen, Germany  
Phone 02102-4550

ALPINE ELECTRONICS OF U.K. LTD.  
Alpine House  
Fletchamstead Highway, Coventry CV4 9TW, U.K.  
Phone 0870-33 33 763

ALPINE ELECTRONICS FRANCE S.A.R.L.  
(RCS PONTOISE B 338 101 280)  
98, Rue de la Belle Etoile, Z.I. Paris Nord II,  
B.P. 50016, 95945 Roissy Charles de Gaulle Cedex, France  
Phone 01-48638989

ALPINE ITALIA S.p.A.  
Viale C. Colombo 8, 20090 Trezzano  
Sul Naviglio (MI), Italy  
Phone 02-484781

ALPINE ELECTRONICS DE ESPAÑA, S.A.  
Portal de Gamarra 36, Pabellón, 32  
01013 Vitoria (Alava)-APDO 133, Spain  
Phone 945-283588

68P20877Y89-A  
Printed in China (Y)