



PHONES

(044) 360-7-130
 (050) 336-0-130
 (063) 788-0-130
 (067) 233-0-130
 (068) 282-0-130

130

COM.UA

Internet store of autogoods



ICQ

294-0-130
 597-0-130

SKYPE
 km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Car seats • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to choose the very particular thing. We are waiting for you at the address

<http://130.com.ua>

BEDIENUNGSANLEITUNG
INSTRUCTION MANUAL



130.com.ua

esprit

E10

Digital Mono Amplifier

E40

4-Channel Tube Amplifier

AUDIOTEC
FISCHER
GERMANY

Sehr geehrter Kunde,

wir gratulieren Ihnen zum Kauf dieser hochwertigen HELIX ESPRIT-Endstufe. Dieser Verstärker wurde nach neuesten

technischen Erkenntnissen entwickelt und zeichnet sich durch hervorragende Verarbeitung und überzeugende Technologie aus. Nach mehr als 27 Jahren Erfahrung in der

Forschung und Entwicklung von Audiokomponenten setzt er neue Maßstäbe in puncto Preis-Leistungsverhältnis. Das

neue, extravagante HELIX ESPRIT-Design macht ihn zu einem außergewöhnlichen, klangstarken Verstärker der

Spitzenklasse. Viel Freude an diesem Produkt wünscht

Ihnen das Team von

AUDIOTEC FISCHER

Allgemeines zum Einbau von HELIX-Verstärkern

Um alle Möglichkeiten optimal ausschöpfen zu können, lesen Sie bitte sorgfältig die nachfolgenden Installationshinweise. Wir garantieren, dass jedes Gerät vor Versand auf seinen einwandfreien Zustand überprüft wurde.

Vor Beginn der Installation unterbrechen Sie den Minusanschluss der Autobatterie. Wir empfehlen Ihnen, die Installation von einem Einbauspezialisten vornehmen zu lassen, da der Nachweis eines fachgerechten Einbaus und Anschlusses des Gerätes Voraussetzung für die Garantieleistungen sind.

Installieren Sie Ihren Verstärker an einer trockenen Stelle im Auto und vergewissern Sie sich, dass der Verstärker am Montageort genügend Kühlung erhält. Montieren Sie das Gerät nicht in zu kleine, abgeschlossene Gehäuse ohne Luftzirkulation oder in der Nähe von wärmeabstrahlenden Teilen oder elektronischen Steuerungen des Fahrzeuges.

Im Sinne der Unfallsicherheit muß der Verstärker professionell befestigt werden. Dieses geschieht über die 4 beiliegenden Schrauben, die in eine Montagefläche eingeschraubt werden, die genügend Halt bieten muss. Bevor Sie die Schrauben im Montagefeld befestigen, vergewissern Sie sich, daß keine elektrischen Kabel und Komponenten, hydraulische Bremsleitungen, der Benzintank etc. dahinter verborgen sind. Diese könnten sonst beschädigt werden. Achten Sie darauf, daß solche Teile sich auch in der doppelten Wandverkleidung verbergen können.

Allgemeines zum Anschluss der Verstärker


Der Verstärker darf nur in Kraftfahrzeuge eingebaut werden, die den 12V-Minuspol an Masse haben. Bei anderen Systemen können der Verstärker und die elektrische Anlage des Kfz beschädigt werden.

Die Plusleitung für die gesamte Anlage sollte in einem Abstand von max. 30 cm von der Batterie mit einer Hauptsicherung abgesichert werden. Der Wert der Sicherung errechnet sich aus der maximalen Stromaufnahme der Car-Hifi-Anlage. Die Kabelverbindungen müssen so verlegt sein, dass keine Klemm-, Quetsch- oder Bruchgefahr besteht. Bei scharfen Kanten (Blechdurchführungen) müssen alle Kabel gegen Durchscheuern gepolstert sein.

Ferner dürfen die Stromversorgungskabel niemals mit Zuleitungen zu Vorrichtungen des Kfz (Lüftermotoren, Brandkontrollmodulen, Benzinleitungen etc.) verlegt werden.

Um eine sichere Installation zu gewährleisten, sollte auf hohe Qualität der verwendeten Anschlussmaterialien geachtet werden.

AUSSTATTUNG UND BEDIENELEMENTE ESPRIT E10

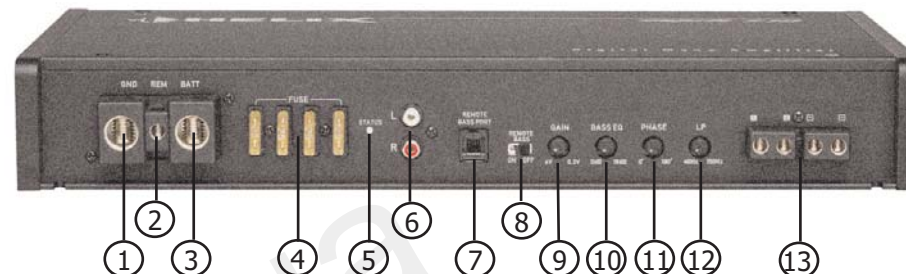

- 1 Anschluss Massekabel
- 2 Anschluss Remoteleitung
- 3 Anschluss Batteriekabel
- 4 Sicherungen 4 x 20 Ampere
- 5 Power / Status LED
- 6 Signaleingänge

- 7 Bass Remote-Anschluss
- 8 Schalter für Bass Remote
- 9 Levelregler für Eingangsempfindlichkeit
- 10 Bass-Equalizer
- 11 Phasenregler
- 12 Frequenzeinstellregler für Tiefpass
- 13 LS-Anschlussklemmen

1 Anschluss Massekabel

Das Massekabel sollte am zentralen Massepunkt (dieser befindet sich dort wo der Minuspol der Batterie zum Metallchassis des Kfz geerdet ist) oder an einer blanken, von Lackresten befreiten Stelle des Kfz-Chassis angeschlossen werden.

2 Anschluss Remoteleitung

Die Remoteleitung wird mit dem automatischen Antennenanschluss des Steuergerätes (Radio) verbunden. Dieser ist nur aktiviert, wenn das Steuergerät EIN-geschaltet ist. Somit wird der Verstärker mit dem Steuergerät ein- und ausgeschaltet.

3 Anschluss Batteriekabel

Das +12V-Versorgungskabel ist am Pluspol der Batterie anzuschließen. Empfohlener Querschnitt: min. 25 mm².

4 Sicherungen

Die Eingangssicherungen sind parallel geschaltet und schützen vor einem geräteinternen Fehler, d. h. die Anlage muß mit einer zusätzlichen Sicherung in Nähe der Batterie (max. 30 cm entfernt) abgesichert werden. Die Sicherungswerte betragen 4 x 20 Ampere für die E10.

5 Power / Status LED

Die blaue LED zeigt den Betriebszustand der Endstufe an.

6 Signaleingänge

Die Esprit-Verstärker haben RCA-Anschlüsse zum Kontaktieren von Cinchkabeln, die mit den Vorverstärkerausgängen der Line-Outputs des Steuergerätes oder eines Vorverstärkers verbunden werden. Diese Anschlüsse sind vergoldet um eine bessere NF-Übertragung zu gewährleisten.

7 Bass Remote-Anschluss

Mit der Bass Remote Control lässt sich die Basslautstärke vom Fahrersitz aus kontrollieren.

8 Schalter für Bass Remote


Zur Einschaltung der Bass Remote Control.

9 Levelregler für Eingangsempfindlichkeit

Mit Hilfe dieser Regler kann die Eingangsempfindlichkeit der Kanäle an die Ausgangsspannung des angeschlossenen Steuergerätes angepasst werden. Diese Regler sind keine Lautstärkeregler, sondern dienen nur der Anpassung. Der Regelbereich ist 300 mV bis 6 V.

10 Bass-Equalizer

Mit Hilfe dieses Reglers kann das Basssignal bei 45 Hz von 0 bis 18 dB angehoben werden.

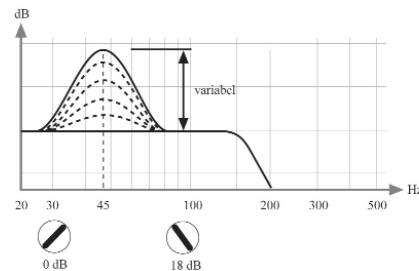

11 Phasenregler

Mit Hilfe dieses Reglers kann die Phase des Basssignals um bis zu 180 Grad verschoben werden, um so eine optimale Laufzeitanpassung zu den anderen Kanälen zu erreichen.

12 Frequenzeinstellregler für den Tiefpass

Regler zur Einstellung der Trennfrequenz von 40 Hz bis 150 Hz.

13 Lautsprecheranschlussklemmen

Zum Ankleben der Lautsprecherleitungen.


Verbinden Sie niemals die Lautsprecherleitungen mit der Kfz-Masse (Fahrzeugkarosserie). Dieses kann Ihren Verstärker zerstören. Achten Sie darauf, dass alle Lautsprechersysteme phasenrichtig angeschlossen sind, d.h. Plus zu Plus und Minus zu Minus. **Vertauschen von Plus und Minus hat einen Totalverlust der Basswiedergabe zur Folge.** Der Pluspol ist bei den meisten Lautsprechern gekennzeichnet.

Die Impedanz pro Kanal sollte 2 Ohm nicht unterschreiten, da sonst eine zu hohe Wärmeentwicklung den Verstärker zum Abschalten bringen kann.

TECHNISCHE DATEN ESPRIT E10

Ausgangsleistung pro Kanal an 4 Ohm	1 x 350 Watt RMS
Ausgangsleistung pro Kanal an 2 Ohm	1 x 550 Watt RMS
Ausgangsleistung pro Kanal an 1 Ohm	1 x 700 Watt RMS
Frequenzbereich	27 Hz - 150 Hz
Regelbereich Tiefpass	40 Hz - 150 Hz
Klirrfaktor	< 0,1%
Geräuschspannungsabstand	> 90 dB
TIM	< 0,02%
Dämpfungsfaktor	> 150
Eingangsimpedanz	20 kOhm
Eingangsempfindlichkeit	300 mV - 6 V
Sicherung	4 x 20 Ampere
Bass Boost	0 - 18 dB
Abmessungen (H x B x T) in mm	58 x 395 x 217
Gewicht netto	4,5 kg

AUSSTATTUNG UND BEDIENELEMENTE ESPRIT E40

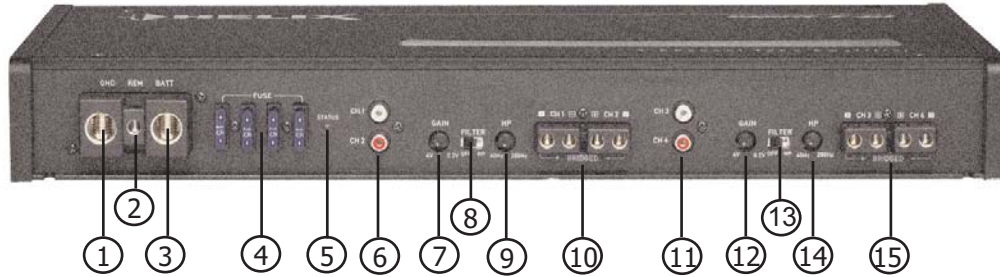

- | | |
|---|--|
| 1 Anschluss Massekabel | 11 Signaleingänge CH 3 + CH 4 |
| 2 Anschluss Remoteleitung | 12 Levelregler für Eingangsempfindlichkeit |
| 3 Anschluss Batteriekabel | 13 Schalter für Hochpassfilter |
| 4 Sicherungen 4 x 15 Ampere | 14 Frequenzeinstellregler für Hochpass |
| 5 Power / Status LED | 15 LS-Anschlussklemmen CH 3 + CH 4 |
| 6 Signaleingänge CH 1 + CH 2 | |
| 7 Levelregler für Eingangsempfindlichkeit | |
| 8 Schalter für Hochpassfilter | |
| 9 Frequenzeinstellregler für Hochpass | |
| 10 LS-Anschlussklemmen CH 1 + CH 2 | |

1 Anschluss Massekabel

Das Massekabel sollte am zentralen Massepunkt (dieser befindet sich dort wo der Minuspol der Batterie zum Metallchassis des Kfz geerdet ist) oder an einer blanken, von Lackresten befreiten Stelle des Kfz-Chassis angeschlossen werden.

2 Anschluss Remoteleitung

Die Remoteleitung wird mit dem automatischen Antennenanschluss des Steuergerätes (Radio) verbunden. Dieser ist nur aktiviert, wenn das Steuergerät EIN-geschaltet ist. Somit wird der Verstärker mit dem Steuergerät ein- und ausgeschaltet.

3 Anschluss Batteriekabel

Das +12V-Versorgungskabel ist am Pluspol der Batterie anzuschließen. Empfohlener Querschnitt: min. 25 mm².

4 Sicherungen

Die Eingangssicherungen sind parallel geschaltet und schützen vor einem geräteinternen Fehler, d. h. die Anlage muß mit einer zusätzlichen Sicherung in Nähe der Batterie (max. 30 cm entfernt) abgesichert werden. Die Sicherungswerte betragen 4 x 15 Ampere für die E40.

5 Power / Status LED

Die blaue LED zeigt den Betriebszustand der Endstufe an.

6 Signaleingänge CH 1 + CH 2

Die Esprit-Verstärker haben RCA-Anschlüsse zum Kontaktieren von Cinchkabeln, die mit den Vorverstärkerausgängen der Line-Outputs des Steuergerätes oder eines Vorverstärkers verbunden werden. Diese Anschlüsse sind vergoldet um eine bessere NF-Übertragung zu gewährleisten.

7 Levelregler für Eingangsempfindlichkeit CH 1 + CH 2


Mit Hilfe dieser Regler kann die Eingangsempfindlichkeit der Kanäle an die Ausgangsspannung des angeschlossenen Steuergerätes angepasst werden. Diese Regler sind keine Lautstärkereglern, sondern dienen nur der Anpassung. Der Regelbereich ist 200 mV bis 4 V.

8 Schalter für Hochpassfilter CH 1 + CH 2

Zur Einschaltung der internen, aktiven Frequenzweiche auf Hochpass. Wird dieser Schalter auf **HPF (Hochpass)** gestellt, so kann mit Hilfe des **Reglers 9** die exakte Übernahmefrequenz für den Hochpass eingestellt werden.

9 Frequenzeinstellregler für den Hochpass CH 1 + CH 2

Regler zur Einstellung der Trennfrequenz von 40 Hz bis 200 Hz

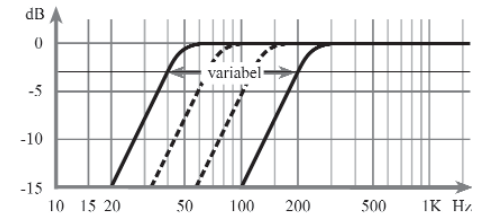

10 Lautsprecheranschlussklemmen CH 1 + CH 2

Zum Anklempen der Lautsprecherleitungen.

11 Signaleingänge CH 3 + CH 4

Die Esprit-Verstärker haben RCA-Anschlüsse zum Kontaktieren von Cinchkabeln, die mit den Vorverstärkerausgängen der Line-Outputs des Steuergerätes oder eines Vorverstärkers verbunden werden. Diese Anschlüsse sind vergoldet um eine bessere NF-Übertragung zu gewährleisten.

12 Levelregler für Eingangsempfindlichkeit CH 3 + CH 4

Mit Hilfe dieser Regler kann die Eingangsempfindlichkeit der Kanäle an die Ausgangsspannung des angeschlossenen Steuergerätes angepasst werden. Diese Regler sind keine Lautstärkereglern, sondern dienen nur der Anpassung. Der Regelbereich ist 200 mV bis 4 V.

13 Schalter für Hochpassfilter CH 3 + CH 4

Zur Einschaltung der internen, aktiven Frequenzweiche auf Hochpass. Wird dieser Schalter auf **HPF (Hochpass)** gestellt, so kann mit Hilfe des **Reglers 9** die exakte Übernahmefrequenz für den Hochpass eingestellt werden.

14 Frequenzeinstellregler für den Hochpass CH 3 + CH 4

Regler zur Einstellung der Trennfrequenz von 40 Hz bis 200 Hz.

15 Lautsprecheranschlussklemmen CH 3 + CH 4

Zum Anklempen der Lautsprecherleitungen.

Verbinden Sie niemals die Lautsprecherleitungen mit der Kfz-Masse (Fahrzeugkarosserie). Dieses kann Ihren Verstärker zerstören. Achten Sie darauf, dass alle Lautsprechersysteme phasenrichtig angeschlossen sind, d.h. Plus zu Plus und Minus zu Minus. **Vertauschen von Plus und Minus hat einen Totalverlust der Basswiedergabe zur Folge.** Der Pluspol ist bei den meisten Lautsprechern gekennzeichnet.

Die Impedanz pro Kanal sollte 2 Ohm nicht unterschreiten, da sonst eine zu hohe Wärmeentwicklung den Verstärker zum Abschalten bringen kann.

TECHNISCHE DATEN ESPRIT E40

Ausgangsleistung pro Kanal an 4 Ohm	4 x 85/100 Watt RMS/Musik
Ausgangsleistung pro Kanal an 2 Ohm	4 x 110/150 Watt RMS/Musik
Ausgangsleistung gebrückt an 4 Ohm	2 x 220/300 Watt RMS/Musik
Frequenzbereich	20 Hz - 20 kHz
Regelbereich Hochpass	40 Hz - 200 Hz
Klirrfaktor	< 0,05%
Geräuschspannungsabstand	> 90 dB
TIM	< 0,02%
Dämpfungsfaktor	> 150
Eingangsimpedanz	20 kOhm
Eingangsempfindlichkeit	200 mV - 4 V
Sicherung	4 x 15 Ampere
Abmessungen (H x B x T) in mm	58 x 470 x 217
Gewicht netto	5,1 kg

GARANTIEBESTIMMUNGEN

Helix Produkte genießen aufgrund ihres hohen Qualitätsniveaus international einen ausgezeichneten Ruf. Daher gewähren wir eine Garantiezeit von 2 Jahren.

Die Produkte werden während der gesamten Fertigung ständig kontrolliert und geprüft. Bitte beachten Sie im Servicefall folgende Hinweise:

1. Die 2-jährige Garantiezeit beginnt mit Kauf des Produktes und gilt nur für den Erstbesitzer.
2. Während der Garantiezeit beseitigen wir etwaige Mängel, die nachweislich auf Material- oder Fabrikationsfehlern beruhen, nach unserer Wahl durch Austausch oder Nachbesserung der defekten Teile. Weitergehende Ansprüche, insbesondere auf Minderung, Wandlung, Schadenersatz oder Folgeschäden sind ausgeschlossen. Ersetzte Teile gehen in das Eigentum von Audiotec Fischer über. Die Garantiezeit wird von einer Garantieleistung durch uns nicht berührt.
3. Am Produkt dürfen keine unsachgemäßen Eingriffe vorgenommen worden sein.
4. Bei Inanspruchnahme der Garantie wenden Sie sich bitte zuerst an Ihren Fachhändler. Sollte es notwendig sein, das Produkt an uns einzuschicken, so beachten Sie bitte folgende Hinweise:

- a) Das Produkt muss in einwandfreier Originalverpackung verschickt werden.
 - b) Die Garantiekarte muss ausgefüllt dem Produkt beiliegen.
 - c) Das Produkt muss frachtfrei zugestellt werden, d. h. Porto und Risiko gehen zu Ihren Lasten
 - d) Die Kaufquittung muss beiliegen.
5. Von der Garantie ausgenommen sind:
- a) Transportschäden, sichtbar oder unsichtbar (Reklamationen für solche Schäden müssen umgehend bei der Transportfirma eingereicht werden)
 - b) Kratzer in Metallteilen, Frontabdeckungen usw. Diese Defekte müssen innerhalb von 5 Tagen nach Kauf direkt bei Ihrem Händler reklamiert werden.
 - c) Fehler, die durch fehlerhafte Aufstellung, falschen Anschluss, unsachgemäße Bedienung, Beanspruchung oder äußere gewaltsame Einwirkung entstanden sind.
 - d) Unsachgemäß reparierte oder geänderte Geräte, die von anderer Seite als von uns geöffnet wurden.
 - e) Folgeschäden an fremden Geräten
 - f) Kostenerstattung bei Schadensbehebung durch Dritte ohne unser vorheriges Einverständnis
 - g) Geräte mit entfernten Typenschildern oder Seriennummern.

ENGLISH

Dear Customer,

congratulations on your purchase of this high-quality HELIX

ESPRIT amplifier. This series highlights best quality, excel-

lent manufacturing and state-of-the-art technology. After

27 years of experiences in the research & development of

audio products this amplifier generation sets new stan-

dards. The attractive typical HELIX ESPRIT design makes

this amplifier an outstanding and top of the class product.

We wish you many hours of enjoyment with your new

HELIX amplifier.

Yours

AUDIOTEC FISCHER Team

General installation instructions for HELIX amplifiers

To find out how HELIX amplifiers work best for you, read this manual carefully and follow the instructions for installation. We guarantee that this product has been checked for proper functioning before shipping.

Before you start installation, disconnect the car battery at the minus pole. We would urge you to have the installation work carried out by a specialist as verification of correct installation and connection of the unit is a prerequisite for warranty cover of the HELIX amplifier.

Install your amplifier at a dry location where there is sufficient air circulation to ensure adequate cooling of the equipment. For safety reasons, the amplifier must be secured in a professional manner. This is performed by means of four fixing screws screwed into a mounting surface offering sufficient retention and stability.

Before drilling the holes for the screws, carefully examine the area around the installation position and make sure that there are no electrical cables or components, hydraulic brake lines or any part of the petrol tank located behind the mounting surface - otherwise these could be damaged. You should be aware of the fact that such components may also be concealed in the double-skin trim panels/mouldings.

General instruction for connecting the amplifiers

The HELIX amplifiers may only be installed in motor vehicles which have a 12-volt minus pole connected to the chassis ground. Any other system could cause damage to the amplifier and the electrical system of the vehicle.


The plus cable from the battery for the complete system should be provided with a main fuse at a distance of max. 30 cm from the battery. The value of the fuse is calculated from the maximum total current input of the car audio system.

Install the cabling in a manner which precludes any danger of the leads being exposed to shear, crushing or rupture forces. If there are sharp edges in the vicinity (e.g. holes in the bodywork) all cables must be cushioned and protected to prevent fraying.

Never lay the power supply cables adjacent to leads and lines connecting other vehicle equipment (fan motors, fire detection modules, gas lines etc.).

In order to ensure safe installation, use only high-quality connections and materials. Ask your dealer for high quality accessories.

EQUIPMENT FEATURES AND CONTROL ELEMENTS ESPRIT E10

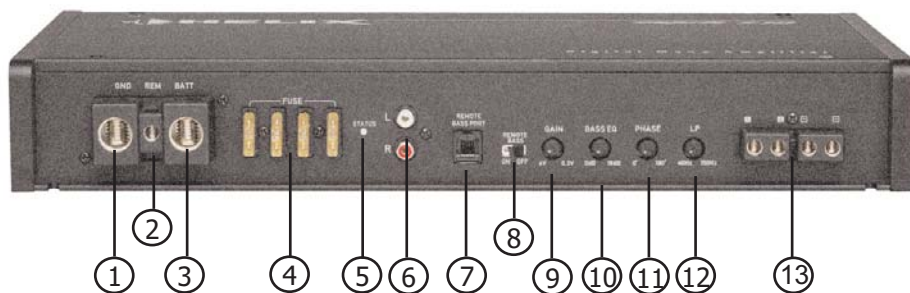

- 1 Connecting the ground cable
- 2 Connecting the remote lead
- 3 Connecting the battery cable
- 4 Fuses 4 x 20 ampere
- 5 Power LED
- 6 Signal inputs

- 7 Connecting Bass Remote
- 8 Bass Remote control
- 9 Level control for input sensitivity
- 10 Bass equalizer
- 11 Phase control
- 12 Lowpass control
- 13 Speaker terminals

1 Connecting the ground cable

The ground cable should be connected to a central ground reference point (this is located where the negative terminal of the battery is grounded at the metal body of the vehicle), or to a bright bare-metal location on the vehicle chassis, i.e. an area which has been cleaned of all paint residues.

2 Connecting the remote lead

The remote lead is connected to the automatic antenna (aerial positive) output of the head unit (radio). This is only activated if the head unit is switched ON. Thus the amplifier is switched on and off with the head unit.

3 Connecting the battery cable

Connect the +12 V power cable to the positive terminal of the battery. Recommended cross section: min. 25mm².

4 Fuses

The input fuses are connected in parallel and provide protection against an internal equipment fault, i.e. the system must be additionally protected by a further line fuse located in the vicinity of the battery (max. distance from battery: 30 cm). The fuse rating for ESPRIT E10 is 4 x 20 amperes.

5 Power LED

Shows the operation mode of the amplifier.

6 Signal inputs

The ESPRIT amplifiers have RCA connectors for RCA cables that can be connected with the pre-amplifier output of the line-outputs of the headunit or with a pre-amplifier. These connectors are gold-plated to ensure a better signal transmission.

7 Bass remote connector

To control the bass level from the driver position.

8 Bass remote control


To set Bass remote on/off.

9 Level controls for input sensitivity

These controls can be used to match the input sensitivity of the individual channels to the output voltage of the connected head unit. These controls are not volume controls and are solely intended for the purpose of sensitivity trimming. The control range extends from 300 mV to 6 V.

10 Bass equalizer

To raise the bass signal from 0 to 18 dB at 45 Hz.

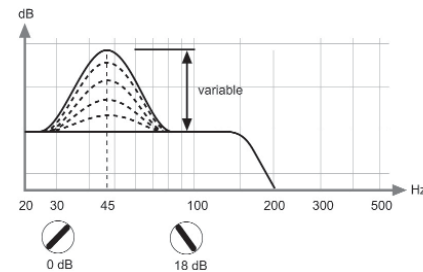

11 Phase control

This control enables the phase of the bass signal to be shifted by 180° in order to achieve optimum delay equalization with the other channels.

12 Lowpass control

To adjust the crossover frequency from 40 Hz to 150 Hz.

13 Speaker terminals

To connect the speaker cables.

Never connect the loudspeaker cables with the car chassis ground. It damages your amplifier. Ensure that the loudspeaker systems are correctly connected (phase), i.e. plus to plus and minus to minus. Exchanging plus and minus causes a total loss of bass reproduction. The plus pole is indicated on most speakers.

The impedance per channel should not be lower than 2 ohms as overheating could cause a shut down of the amplifier

TECHNICAL DATA ESPRIT E10

Cont. power rating at 4 Ohms per channel	1 x 350 Watts RMS
Cont. power rating at 2 Ohms per channel	1 x 550 Watts RMS
Cont. power rating at 1 Ohm per channel	1 x 700 Watts RMS
Frequency response	27 Hz - 150 Hz
Setting range lowpass	40 Hz - 150 Hz
Total harmonic distortion (THD)	< 0,1%
Signal to noise ratio	> 90 dB
TIM distortion	< 0,02%
Damping factor	> 150
Input impedance	20 kOhms
Input sensitivity	.300 mV - 6 V
Fuse	4 x 20 Ampere
Dimensions (H x W x D) in mm	58 x 395 x 217
Weight net.	4,5 kg

WARRANTY REGULATION


Due to the high quality standard Helix products achieved an excellent international reputation. Therefore we grant a warranty period of 2 years.

The products checked and tested carefully during the entire production process. In the case of service note the following:

- 1) The 2 years warranty period commences with the purchase of the product and is applicable only to the original owner.
- 2) During the warranty period we will rectify any defects due to faulty material or workmanship by replacing or repairing the defective part at our decision.
Further claims, and in particular those for price reduction, cancellation of sale, compensation for damages or subsequent damages, are excluded. The warranty period is not altered by the fact that we have carried out warranty work.
- 3) Unauthorized tampering with the product will invalidate this warranty.
- 4) Consult your authorized dealer first, if warranty service is needed. Should it be necessary to return the product to the factory, please ensure that

- a) the product is packed in original factory packing in good condition
- b) the warranty card has been filled out and attached to the product
- c) the product is shipped prepaid, i.e. at your expense and risk
- d) the receipt/invoice as proof of purchase is enclosed
- 5) Excluded from the warranty are:
 - a) Shipping damages, either readily apparent or concealed (claims for such damages must be immediately notified to the forwarding agent).
 - b) Scratches in metal parts, front panels or covers etc. This must be notified to your dealer within 5 days of purchase.
 - c) Defects caused by incorrect installation or connection, by operation errors, by overloading or by external force.
 - d) Products which have been repaired incorrectly or modified or where the product has been opened by other persons than us.
 - e) Consequential damages to other equipments.
 - f) Reimbursement when repairing damages by third parties without our previous permission.

EQUIPMENT FEATURES AND CONTROL ELEMENTS ESPRIT E40

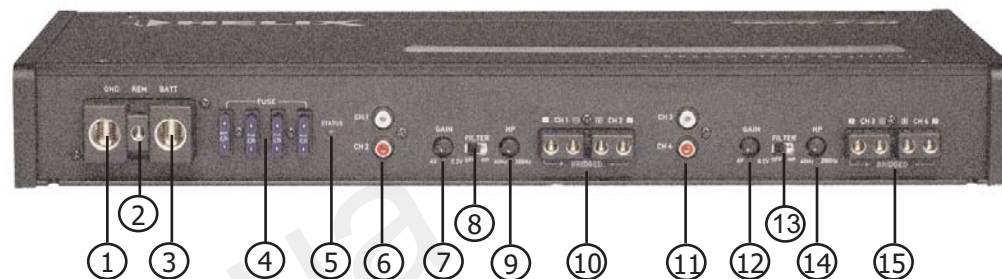

- 1 Connecting the ground cable
- 2 Connecting the remote lead
- 3 Connecting the battery cable
- 4 Fuses 4 x 15 ampere
- 5 Power LED
- 6 Signal inputs CH 1 + CH 2
- 7 Level controls for input sensitivity
- 8 Highpass on/off
- 9 Highpass control
- 10 Speaker terminals CH 1 + CH 2
- 11 Signal inputs CH 3 + CH 4
- 12 Level controls for input sensitivity
- 13 Highpass on/off
- 14 Highpass control
- 15 Speaker terminals CH 3 + CH 4

1 Connecting the ground cable

The ground cable should be connected to a central ground reference point (this is located where the negative terminal of the battery is grounded at the metal body of the vehicle), or to a bright bare-metal location on the vehicle chassis, i.e. an area which has been cleaned of all paint residues.

2 Connecting the remote lead

The remote lead is connected to the automatic antenna (aerial positive) output of the head unit (radio). This is only activated if the head unit is switched ON. Thus the amplifier is switched on and off with the head unit.

3 Connecting the battery cable

Connect the +12 V power cable to the positive terminal of the battery. Recommended cross section: min. 25mm².

4 Fuses

The input fuses are connected in parallel and provide protection against an internal equipment fault, i.e. the system must be additionally protected by a further line fuse located in the vicinity of the battery (max. distance from battery: 30 cm). The fuse rating for ESPRIT E40 is 4 x 15 amperes.

5 Power LED

Shows the operation mode of the amplifier.

6 Signal inputs CH 1 + CH 2

The ESPRIT amplifiers have RCA connectors for RCA cables that can be connected with the pre-amplifier output of the line-outputs of the headunit or with a pre-amplifier. This connectors are gold-plated to ensure a better signal transmission.

7 High- and low level signal switch CH 1 + CH 2


To change the input signals from low level (head unit or pre-amplifier) to high level (speaker outputs of head unit). In both cases RCA cables function as line-inputs.

8 Highpass on/off control CH1 + CH 2

If this switch is set on the crossover frequency for the highpass can be adjusted with **control 9**.

9 Level controls for input sensitivity CH 1 + CH 2

These controls can be used to match the input sensitivity of the individual channels to the output voltage of the connected head unit. These controls are not volume controls and are solely intended for the purpose of sensitivity trimming. The control range extends from 200 mV to 4 V.

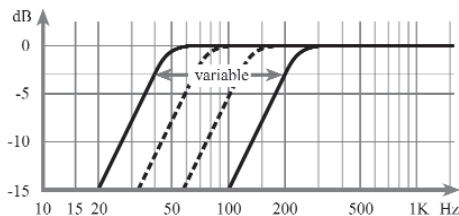

10 Speaker terminals CH 1 + CH 2

To connect the speaker cables.

11 Signal inputs CH 3 + CH 4

The ESPRIT amplifiers have RCA connectors for RCA cables that can be connected with the pre-amplifier output of the line-outputs of the headunit or with a pre-amplifier. This connectors are gold-plated to ensure a better signal transmission.

12 High- and low level signal switch CH 3 + CH 4

To change the input signals from low level (head unit or pre-amplifier) to high level (speaker outputs of head unit). In both cases RCA cables function as line-inputs.

13 Highpass on/off control CH 3 + CH 4

If this switch is set on the crossover frequency for the highpass can be adjusted with **control 9**.

14 Level controls for input sensitivity CH 3 + CH 4

These controls can be used to match the input sensitivity of the individual channels to the output voltage of the connected head unit. These controls are not volume controls and are solely intended for the purpose of sensitivity trimming. The control range extends from 200 mV to 4 V.

10 Speaker terminals CH 3 + CH 4

To connect the speaker cables.

Never connect the loudspeaker cables with the car chassis ground. It damages your amplifier. Ensure that the loudspeaker systems are correctly connected (phase), i.e. plus to plus and minus to minus. Exchanging plus and minus causes a total loss of bass reproduction. The plus pole is indicated on most speakers.

The impedance per channel should not be lower than 2 ohms as overheating could cause a shut down of the amplifier.

TECHNICAL DATA ESPRIT E40

Cont. power rating at 4 Ohms per channel	4 x 85/110 Watts RMS/Music
Cont. power rating at 2 Ohms per channel	4 x 110/150 Watts RMS/Music
Cont. power rating at bridged at 4 Ohms	2 x 220/300 Watts RMS/Music
Frequency response	20 Hz - 20 kHz
Setting range highpass	40 Hz - 200 kHz
Total harmonic distortion (THD)	< 0,05%
TIM distortion	< 0,02%
Signal to noise ratio	> 90 dB
Damping factor	> 150
Input impedance	20 kOhms
Input sensitivity	200 mV - 4 V
Fuse	4 x 15 Ampere
Dimensions (H x W x D) in mm	58 x 470 x 217
Weight net.	5,1 kg

AUDIOTEC
FISCHER

Gewerbegebiet Lake II · Hünegräben 26 · D-57392 Schmallenberg
Tel.: ++49 (0) 29 72-97 88 0 · Fax: ++49 (0) 29 72-97 88 88
E-mail: info@audiotec-fischer.com · Internet: www.audiotec-fischer.com