



PHONES

(044) 360-7-130
 (050) 336-0-130
 (063) 788-0-130
 (067) 233-0-130
 (068) 282-0-130

130

COM.UA

Internet store of autogoods



ICQ

294-0-130
 597-0-130


SKYPE
 km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<http://130.com.ua>

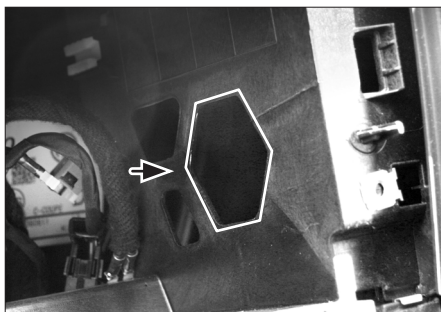


5. **If necessary** : Rasp hexagonal pocket to AF44 in order to use hexagonal bar AF43,6



6. Connect all required circuit points
Push Alpine INE-W928R into dash board.

Golf VI only: Fix screws on top

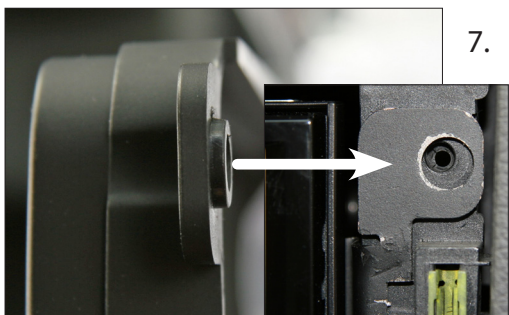

7. Place fascia plate

Put dome of fascia plate exactly over the holes of mounting frames (see arrow)

Fix fascia plate with 4 screws



8. Place OEM panel over fascia plate to finish installation.



Installation Manual INE-W928R Kit

colour: black


- VW Eos
- VW Golf V / VI
- VW Jetta V / VI

- VW Passat / Passat CC
- VW Polo 6R
- VW Scirocco

part-no.:
KIT-8VW
KIT-8VWD


Compatible with these Alpine navigation devices

INE-W928R

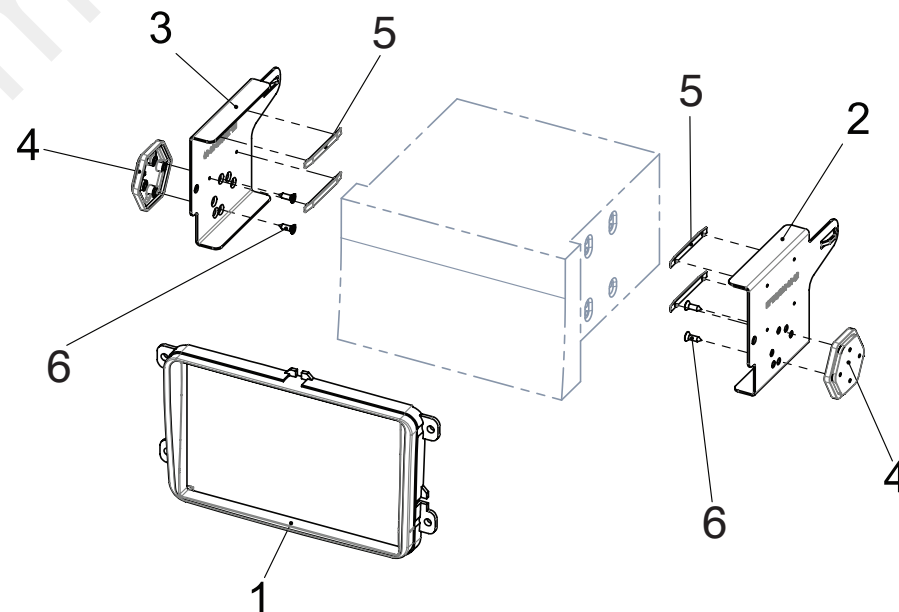

- (1) fascia plate
- (2) mounting bracket right
- (3) mounting bracket left

- (4) hexagonal bar (AF43,6) / (AF37,2)
- (5) slider
- (6) countersunk flat head tapping screw

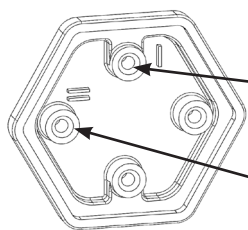


Hexagonal Bar

standard unit position :
screw position I


alternative unit position :
screw position II

Hexagonal Bar
AF43,6

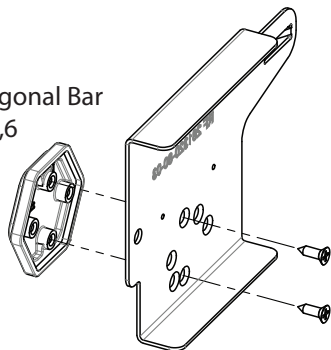


5.


VW Golf V
VW Golf VI
VW Jetta V
VW Jetta VI
VW Passat

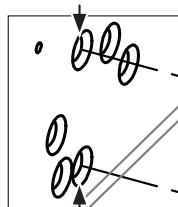


Hexagonal Bar
AF37,2

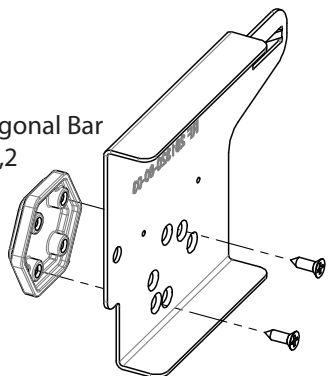


VW Polo 6R

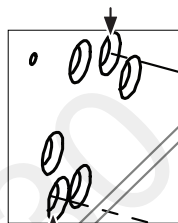

Hexagonal Bar
AF43,6

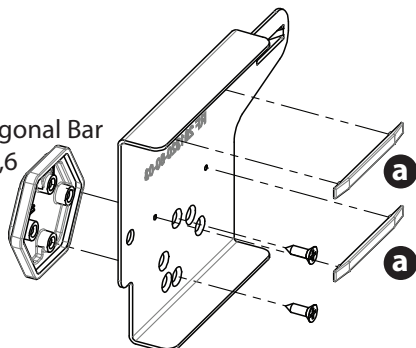

VW Eos
VW Scirocco

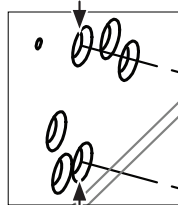

fix sliders (a) with glue

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.




1. Unclip and remove OEM panel




2. Remove 4 screws of OEM head unit



3. Remove OEM head unit

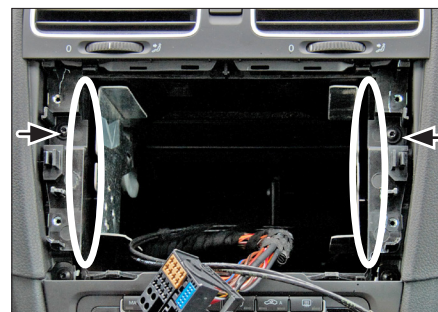

4. Put mounting frames in dash board.
Golf VI only: Release screws on top (see arrows) in order to clear space for Alpine INE-W928R
If necessary:
Cut away plastic to clear space for Alpine INE-W928R

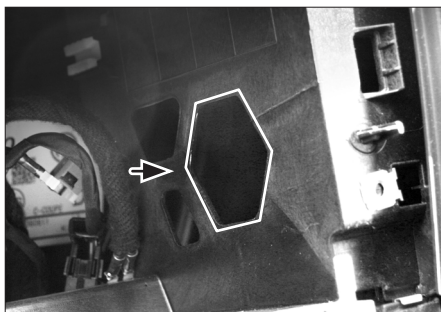


5. **If necessary** : Rasp hexagonal pocket to AF44 in order to use hexagonal bar AF43,6



6. Connect all required circuit points
Push Alpine INE-W928R into dash board.

Golf VI only: Fix screws on top

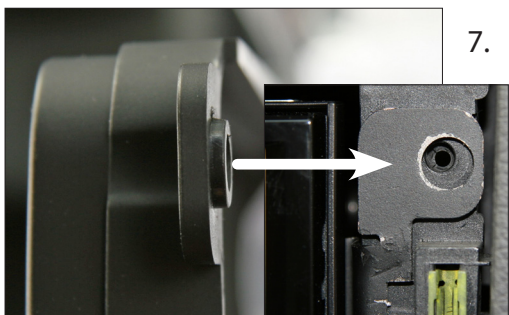

7. Place fascia plate

Put dome of fascia plate exactly over the holes of mounting frames (see arrow)

Fix fascia plate with 4 screws



8. Place OEM panel over fascia plate to finish installation.



Installation Manual INE-W928R Kit

colour: black


- VW Eos
- VW Golf V / VI
- VW Jetta V / VI

- VW Passat / Passat CC
- VW Polo 6R
- VW Scirocco

part-no.:
KIT-8VW
KIT-8VWD


Compatible with these Alpine navigation devices

INE-W928R

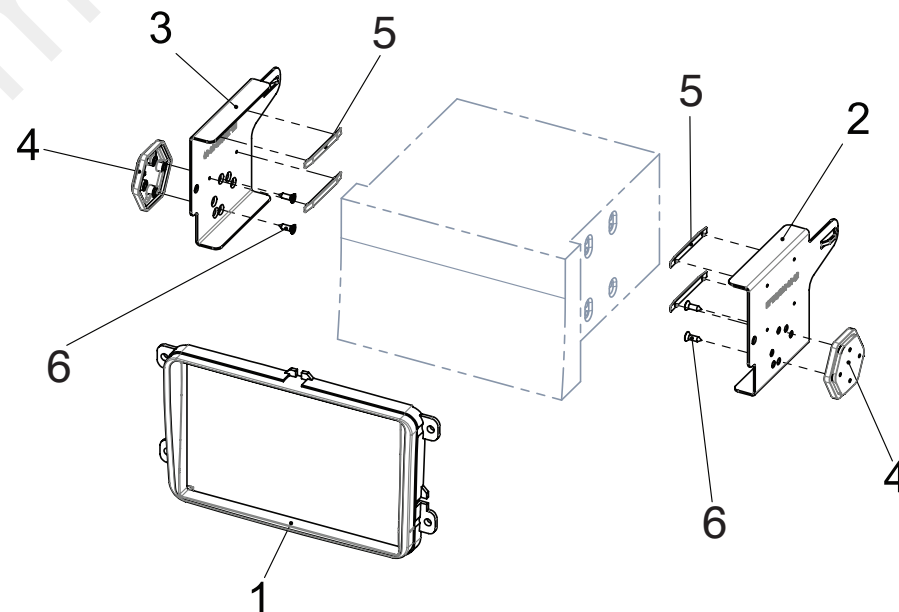

- (1) fascia plate
- (2) mounting bracket right
- (3) mounting bracket left

- (4) hexagonal bar (AF43,6) / (AF37,2)
- (5) slider
- (6) countersunk flat head tapping screw

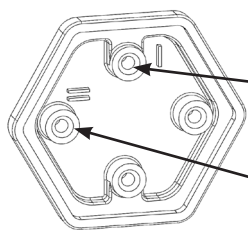


Hexagonal Bar

standard unit position :
screw position I


alternative unit position :
screw position II

Hexagonal Bar
AF43,6

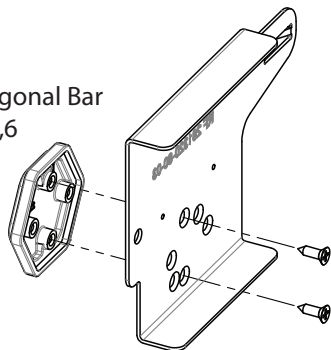


5.


VW Golf V
VW Golf VI
VW Jetta V
VW Jetta VI
VW Passat

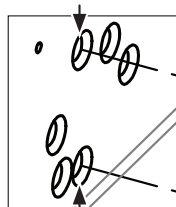


Hexagonal Bar
AF37,2

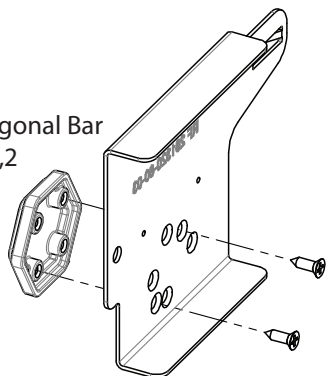


VW Polo 6R

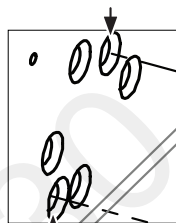

Hexagonal Bar
AF43,6

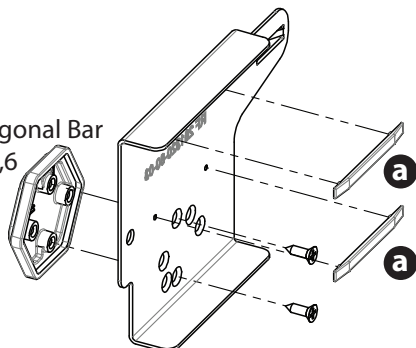

VW Eos
VW Scirocco

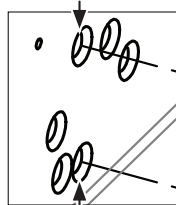

fix sliders (a) with glue

All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.




1. Unclip and remove OEM panel



2. Remove 4 screws of OEM head unit



3. Remove OEM head unit

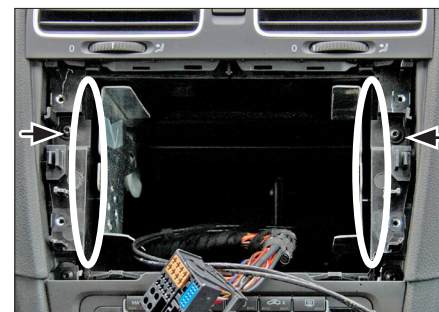

4. Put mounting frames in dash board.
Golf VI only: Release screws on top (see arrows) in order to clear space for Alpine INE-W928R
If necessary:
Cut away plastic to clear space for Alpine INE-W928R



Installation Manual INE-W928R Kit


colour: black

- Seat Alhambra (6N)
- Škoda Fabia II
- Škoda Octavia II
- Škoda Roomster
- VW Caddy
- VW Sharan
- VW Tiguan
- VW Touran

part-no.:
KIT-8VWT
KIT-8VWTD

Compatible with these Alpine navigation devices

INE-W928R

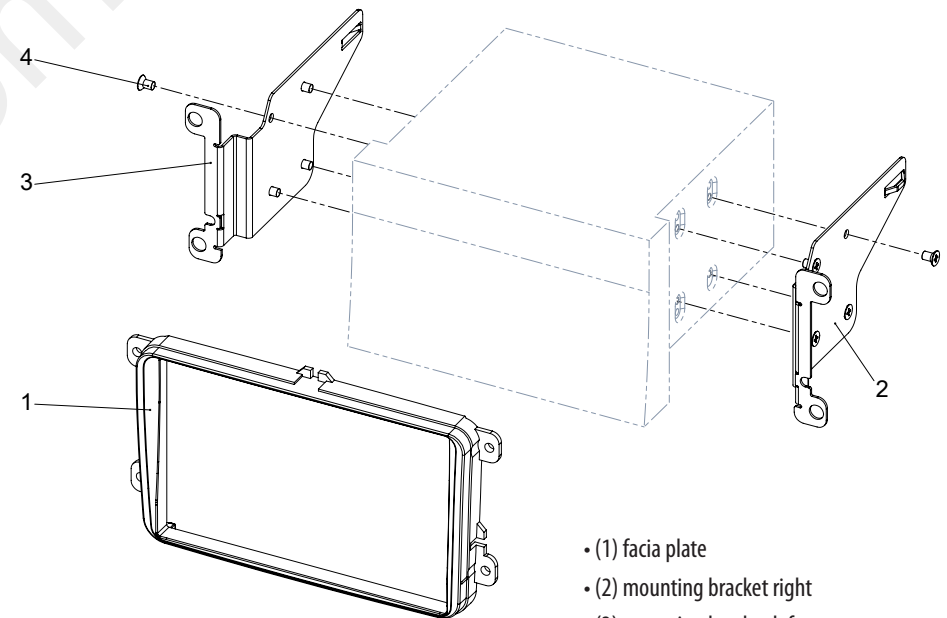

- (1) facia plate
- (2) mounting bracket right
- (3) mounting bracket left
- (4) recessed countersunk flat head screw

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran




1. Unclip and remove OEM panel
(see arrows)



2. Remove 4 screws

Remove head unit

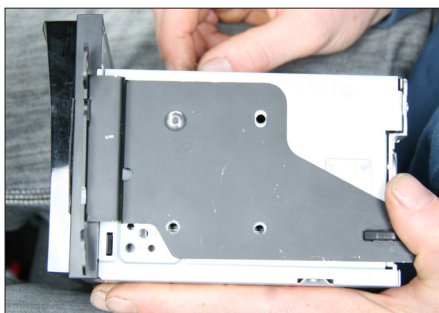


3. Attach mounting frames to
Alpine INE-W928R




4. Connect all required circuit points

Place Alpine INE-W928R
on dashboard

VW Tiguan

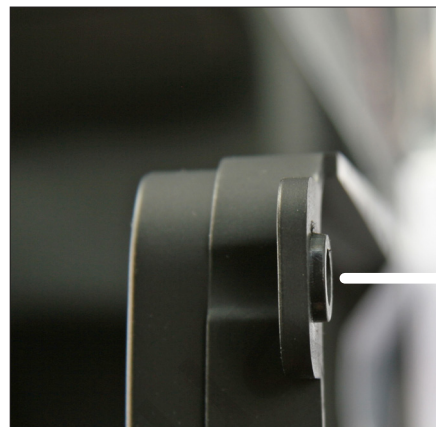

5. Connect all required
circuit points
Place Alpine INE-W928R
on dashboard

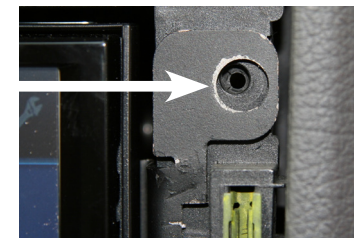

Place fascia plate
*Put dome of fascia plate
exactly over the holes of
mounting frames
(see arrow above)*

Install OEM panel to finish
installation

VW Tiguan




1. Unclip and remove OEM panel (see arrows)

Remove 4 screws of OEM head unit




2. Remove 4 screws

Remove head unit

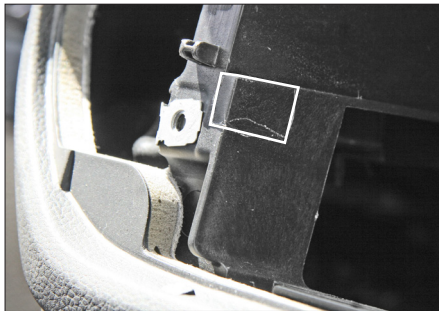


3. Cut away plastic to clear space for Alpine INE-W928R

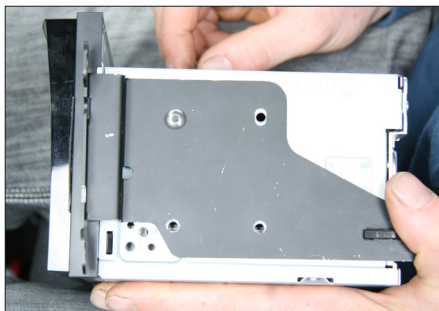


4. Attach mounting frames to Alpine INE-W928R


Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran

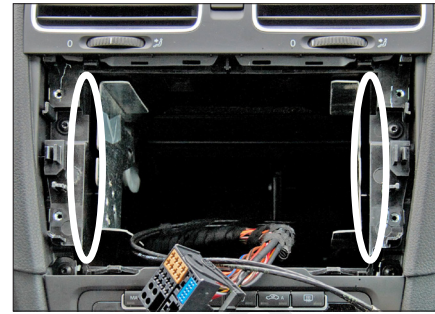

5. **If necessary:**
Cut away plastic to clear space for Alpine INE-W928R

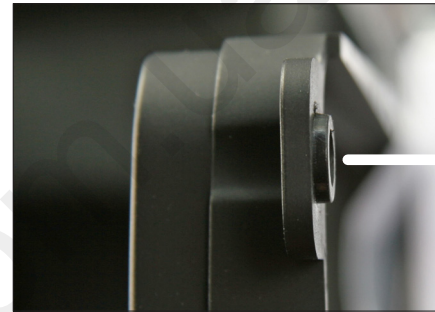

6. Place fascia plate

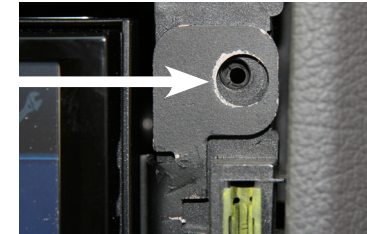

Put dome of fascia plate exactly over the holes of mounting frames (see arrow above)

Fix fascia plate with 4 screws



7. Install OEM panel to finish installation



Seat Alhambra / VW Sharan



1. Open top shelf
Remove 2 screws



2. Remove top shelf inlay
Remove 2 screws on top




3. Remove OEM panel

Seat Alhambra / VW Sharan




4. Remove 4 screws
Remove OEM head unit


If necessary:
Cut away plastic to clear space
for Alpine INE-W928R

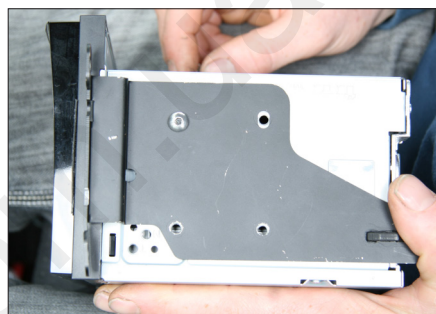

5. Attach mounting frames to
Alpine INE-W928R

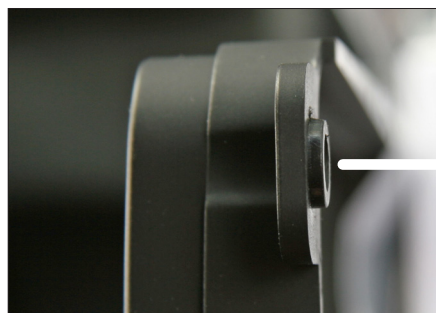

6. Place facia plate

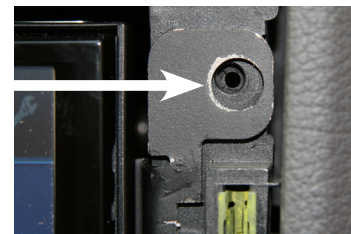

7. Connect all required circuit
points
Place Alpine INE-W928R
on dashboard



Fix facia plate with 4 screws
Install everything in reverse
order to finish installation



Installation Manual INE-W928R Kit

colour: black


- Seat Alhambra (6N)
- Škoda Fabia II
- Škoda Octavia II
- Škoda Roomster

- VW Caddy
- VW Sharan
- VW Tiguan
- VW Touran

part-no.:
KIT-8VWT
KIT-8VWTD

Compatible with these Alpine navigation devices

INE-W928R

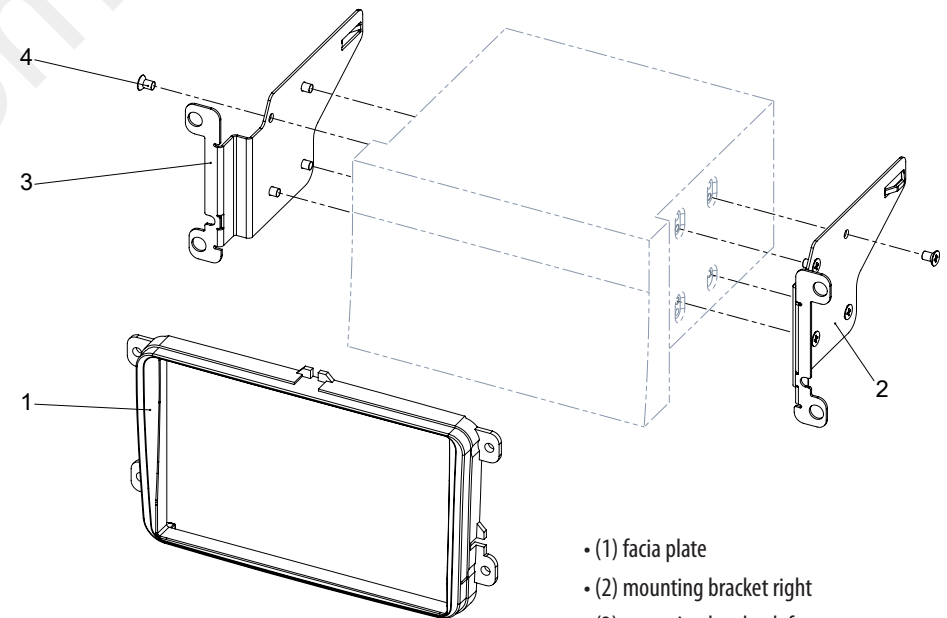

- (1) facia plate
- (2) mounting bracket right
- (3) mounting bracket left
- (4) recessed countersunk flat head screw

*All installation work must be performed by a qualified professional installer only.
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.*

Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran




1. Unclip and remove OEM panel
(see arrows)



2. Remove 4 screws

Remove head unit

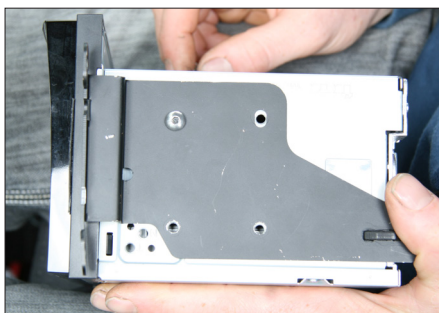


3. Attach mounting frames to
Alpine INE-W928R




4. Connect all required circuit points

Place Alpine INE-W928R
on dashboard

VW Tiguan

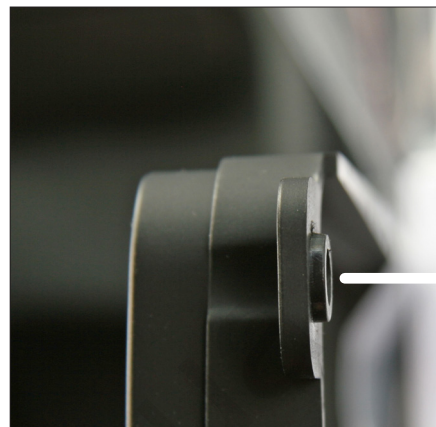

5. Connect all required
circuit points
Place Alpine INE-W928R
on dashboard

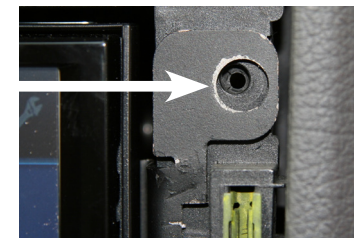

Place fascia plate
*Put dome of fascia plate
exactly over the holes of
mounting frames
(see arrow above)*

Install OEM panel to finish
installation

VW Tiguan




1. Unclip and remove OEM panel (see arrows)

Remove 4 screws of OEM head unit




2. Remove 4 screws

Remove head unit

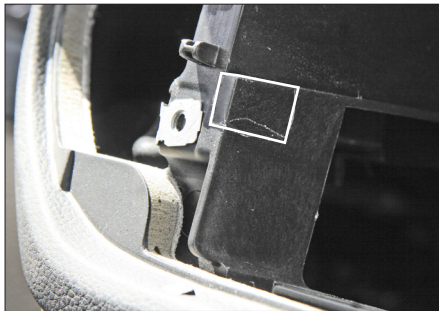


3. Cut away plastic to clear space for Alpine INE-W928R

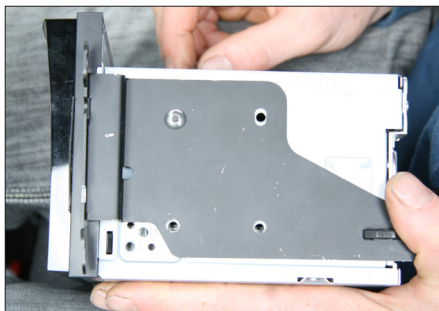


4. Attach mounting frames to Alpine INE-W928R


Škoda Fabia II / Octavia II / Roomster / VW Caddy / Touran

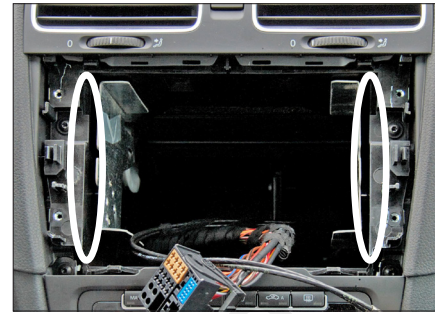

5. **If necessary:**
Cut away plastic to clear space for Alpine INE-W928R

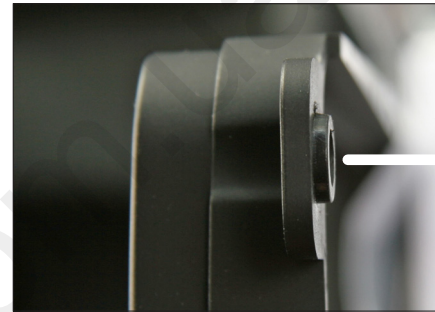

6. Place fascia plate

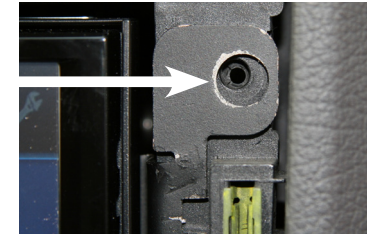

Put dome of fascia plate exactly over the holes of mounting frames (see arrow above)

Fix fascia plate with 4 screws



7. Install OEM panel to finish installation



Seat Alhambra / VW Sharan



1. Open top shelf
Remove 2 screws



2. Remove top shelf inlay
Remove 2 screws on top




3. Remove OEM panel

Seat Alhambra / VW Sharan




4. Remove 4 screws
Remove OEM head unit


If necessary:
Cut away plastic to clear space
for Alpine INE-W928R

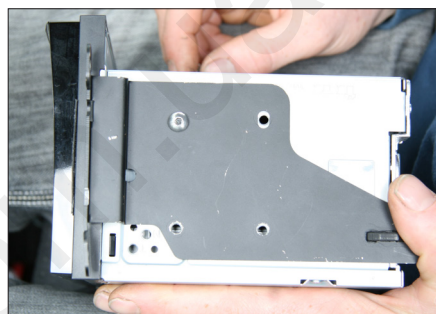

5. Attach mounting frames to
Alpine INE-W928R

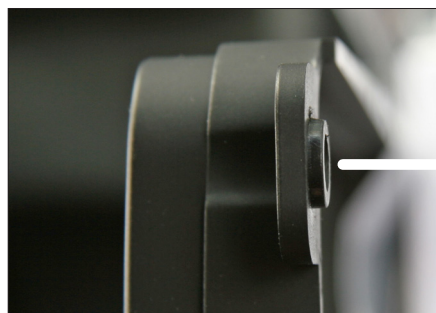

6. Place facia plate

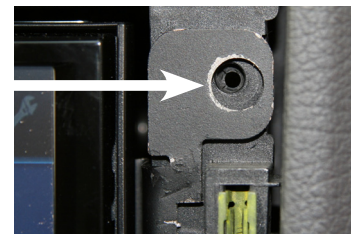

7. Connect all required circuit
points
Place Alpine INE-W928R
on dashboard



Fix facia plate with 4 screws
Install everything in reverse
order to finish installation