

PHONES 0 (800) 800 130 (050) 462 0 130

(063) 462 0 130 (067) 462 0 130

# 130 Internet store of autogoods



**SKYPE** 

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • CRS medules •

- GPS NAVIGATORS Portable GPS Built-in GPS GPS modules GPS trackers Antennas for GPS navigators Accessories | VIDEO DVR TV sets and monitors Car TV tuners Cameras Videomodules Transcoders Car TV antennas Accessories | SECURITY SYSTEMS Car alarms Bike alarms Mechanical blockers Immobilizers Sensors Accessories | OPTIC AND LIGHT Xenon Bixenon Lamps
- LED Stroboscopes Optic and Headlights Washers Light, rain sensors Accessories | PARKTRONICS AND MIRRORS Rear parktronics Front parktronics Combined parktronics Rear-view mirrors Accessories | HEATING AND COOLING Seat heaters Mirrors heaters Screen-wipers heaters Engine heaters Auto-refrigerators Air conditioning units Accessories | TUNING Vibro-isolation
- Noise-isolation Tint films Accessories | ACCESSORIES Radar-detectors Handsfree, Bluetooth Windowlifters Compressors Beeps, loudspeakers Measuring instruments Cleaners Carsits
- Miscellaneous | MOUNTING Installation kits Upholstery Grilles Tubes Cable and wire Tools Miscellaneous | POWER Batteries Converters Start-charging equipment Capacitors
- Accessories | MARINE AUDIO AND ELECTRONICS Marine receivers Marine audio speakers Marine subwoofers Marine amplifiers Accessories | CAR CARE PRODUCTS Additives Washer fluid Care accessories Car polish Flavors Adhesives and sealants | LIQUID AND OIL Motor oil Transmission oil Brake fluid Antifreeze Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

https://130.com.ua

# BassPro II

powered subwoofer system owner's manual

# **THANK YOU**

for choosing the JBL BassPro\* II.
BassPro II has been designed to
deliver great bass performance from
a compact, easily installed powered
subwoofer enclosure.

To get the best performance from your BassPro II, we strongly recommend that installation be entrusted to a qualified professional. Although these instructions explain how to install BassPro II in a general sense, they do not show specific installation methods that may be required for your particular vehicle. If you do not have the necessary tools or experience, do not attempt the installation yourself. Instead, please ask your authorized JBL car audio dealer about professional installation.

In order that we may better serve you should you require warranty service, please retain your original sales receipt and register your BassPro II online at www.jbl.com.





# **INSTALLATION**

WARNING: Playing loud music in an automobile can hinder your ability to hear traffic and permanently damage your hearing. We recommend listening at low or moderate levels while driving your car. JBL accepts no liability for hearing loss, bodily injury or property damage resulting from the use or misuse of this product.

#### **INSTALLATION** WARNINGS AND TIPS:

- · Always wear protective eyewear when using tools.
- Disconnect the vehicle's negative (-) battery terminal before starting the installation.
- · Check clearances on both sides of a planned mounting surface. Be sure that screws or wires will not puncture brake lines, fuel lines or wiring harnesses, and that wire routing will not interfere with the safe operation of the vehicle.
- · When making electrical connections, make sure they are secure and properly insulated.
- If BassPro II's fuse must be replaced, be sure to use the same type of fuse and current rating as that of the original.

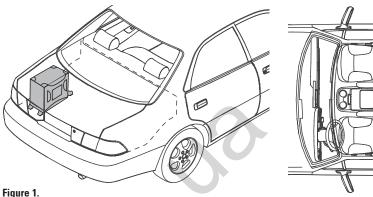

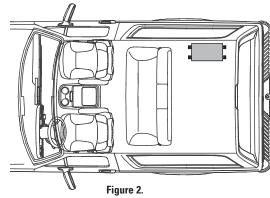

### **CHOOSING A MOUNTING** LOCATION FOR **BASSPROII:**

Choose a mounting location that doesn't interfere with cargo, the folddown rear seat or the trunk lid. The best location is usually a corner of the trunk or cargo area, as shown in Figures 1 and 2.

Securely mount BassPro II to the mounting surface using the four enclosed self-tapping screws. Choose a mounting location in the front of the vehicle for the remote level control.

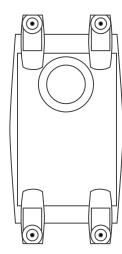


Figure 3. Bottom view of BassPro II.



# **INSTALLING THE REMOTE**

Choose a mounting location that

allows easy access to the control,

the mounting surface. Drill a 9/32"

the Subwoofer Level Control's

hole in the mounting surface. Feed

potentiometer shaft (with the knob

removed) through the hole and use the

Washer

Hex Nut

Knob

nut and washer provided to hold the control in place (Figure 5).

and provides 1-3/4" clearance behind

The Subwoofer Level Control may be mounted under the dash or dismantled and mounted in the dash for a factoryinstalled appearance.

#### **UNDER-DASH MOUNTING**

Select a mounting location that allows easy access to the control while driving. Using the Subwoofer Level Control as a template, mark and drill holes in the mounting surface. Attach the Subwoofer Level Control using the mounting screws provided (Figure 4).

#### IN-DASH MOUNTING

Disassemble the Subwoofer Level Control by removing the two Phillipshead screws on the front panel, rear panel and on top. Remove the Subwoofer Level Control's bottom and side panels. Slide the Subwoofer Level Control's PC board forward to release the RJ11 connector from the back panel and remove the board along with the potentiometer, knob and connector as a single assembly.

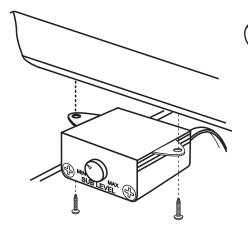


Figure 4. Under-dash mounting of the Subwoofer Level Control.

# **CONNECTING THE SUBWOOFER** LEVEL CONTROL TO BASSPRO II

Route the cable behind the dash or other interior panels and under the carpet. Do not route the cable outside the vehicle. Connect the RJ11 cable between the RJ11 receptacle on the BassPro II and the receptacle on the Subwoofer Level Control (Figure 6).

Socket


for

Control Cable

Level-


Control Circuit **Board** 

Figure 5. In-dash mounting of the Subwoofer Level Control.

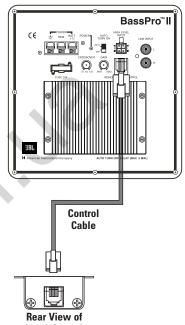

**BassPro II Connection Panel** 

Figure 6. Subwoofer Level Control electrical connection.

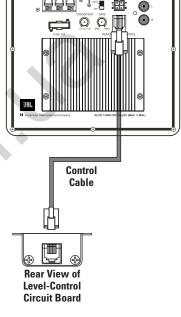



# **POWER CONNECTIONS**

Connecting power to BassPro II is shown in **Figure 7**. Please observe the following installation tips:


When using the high-level input connections, BassPro II will automatically turn on when you turn on your radio. In this case, the remote (REM) connection is not needed. Use at least #20 AWG speaker wire for speaker-level input connections.

Use at least #12 AWG wire for the Positive Battery (BATT +12) and Ground (★) connections. If needed, use at least #20 AWG wire for the remote (REM) turn-on connection.

Connect BassPro II's "BATT +12V" terminal directly to the battery's positive (+) terminal. Install a fuse holder, with a 20A fuse, within 18" of the battery's positive (+) terminal.

Route all power wires through a grommet in the vehicle's firewall. If a factory grommet is not available, install one. Connect a short ground wire from BassPro II's ground terminal (\*) to the nearest bare metal surface. For a good connection, use sandpaper to clear paint from the metal surface and use a screw with a lock (star) washer.

The remote (REM) connection requires a +5 to +12 Vdc signal for BassPro II to turn on when using the line-level connections. Most head units with preamp outputs provide this remote voltage signal. As an alternative, connect this terminal to a switched ignition circuit.

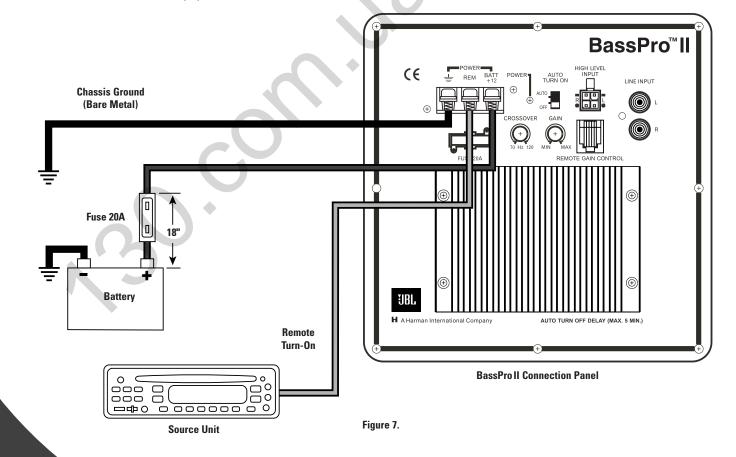


**YBL** 

# **APPLICATIONS**

BassProII is equipped with two linelevel (RCA) inputs and two high-level inputs. To help you plan the installation of BassProII, we have included two system application diagrams in Figures 8 and 9. For more installation suggestions, contact your local authorized JBL car audio dealer.

Figure 8. High-level connections. Connect BassPro II's high-level inputs to either the front or rear speaker outputs of your head unit (splice crimps not included).

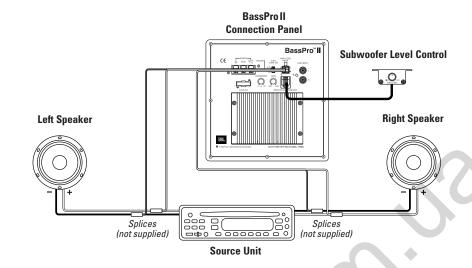

BassPro II
Connection Panel


RF Speaker

RCA Stereo Cables
(not supplied)

Source Unit

RR Speaker

RR Speaker



**JBL** 

# **CONTROLS AND FUNCTIONS**

BassPro II has controls and indicators that help simplify sonic integration with almost any vehicle's unique acoustic properties. These controls are located on the amplifier panel, as shown in Figure 10.

Power LED Gain Control Crossover Remote Bass Control Auto Turn-On

POWER LED: This indicator will glow red when the BassPro II is operating.

**GAIN CONTROL:** Use this control to adjust the relative volume (loudness) of BassPro II with the other speakers in the vehicle.

**CROSSOVER:** Use this control to adjust the amount of high-frequency information present in BassPro II's output. A lower value signifies less highfrequency content.

AUTO TURN-ON: For speakerlevel connections, used this switch to activate (or deactivate) BassPro II's automatic turn-on circuit. For most speaker-level applications, slide the switch to the AUTO position. If you prefer to use the remote (REM) connection, slide the switch to the OFF position.

REMOTE BASS CONTROL: Use this RJ-11 iack to connect the supplied remote bass control.

#### SETTING THE CONTROLS:

- 1. Make sure the head unit is off and VOLUME control is set to minimum.
- 2. On BassPro II's amplifier panel, set the CROSSOVER to its maximum frequency of 120Hz, as shown in Figure 10.

NOTE: If using the REMOTE BASS CONTROL, set GAIN to maximum and set the BASS CONTROL to the midpoint.

- 3. Turn the head unit ON and play a selection of your favorite music track that has substantial bass.
- 4. Adjust the CROSSOVER control counterclockwise, until vou hear only low-frequency information. Example - you should not hear vocals coming from BassProII when seated in the normal listening position.
- 5. Adjust the BASS CONTROL either clockwise or counterclockwise to suit your taste, and to avoid audible distortion.
- 6. If you elect not to install the Remote Bass Control, adjust the GAIN control to the maximum level that provides undistorted output from the BassPro II, with the head unit's volume control at its 3 o'clock setting.

**NOTE:** In most cases the above steps will provide you with satisfactory results. However, the actual process may require several readjustments of each control, since the settings will interact with one another. If necessary, consult your authorized JBL car audio dealer for help in tuning your system.

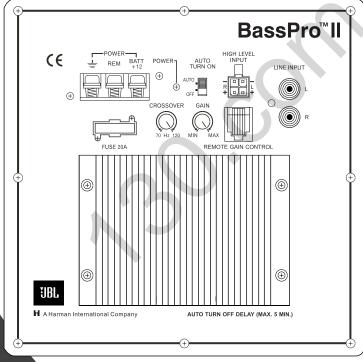


Figure 10.



# **TROUBLESHOOTING**

PROBLEM	CAUSES AND SOLUTIONS
POWER LED is not lit.	Fuse is blown and needs replacement.     Head unit not functioning properly.     Check remote turn-on, power and ground connections.
POWER LED is lit but there is no bass.	Inputs are not connected. Check connections.     Head-unit fader controls are not set properly. Adjust head-unit controls to feed audio signals to BassPro II.     Incorrect GAIN control setting.
Output sounds muddy or distorted.	1. GAIN is set too high. 2. Bass level is set too high on head unit. 3. Head unit output is distorted or blown. See your authorized JBL car audio dealer.
Output gets louder when the head-unit balance is adjusted to L or R.	Using speaker-level connection: one of the speaker connections is reversed (+/-). Reverse one channel.
POWER LED remains ON after system is turned off.	Speaker-level connections have a five- minute turn-off delay. Check the unit at a later time.



IJBL

# **SPECIFICATIONS**

Amplifier power: 100 Watts
Frequency response: 20Hz – 120Hz

Fuse rating: 20A Max current draw: 12A

Idle current draw: <800mA

Input sensitivity: 50mV to 4V Line-level input; 1V to 16V universal interface

Crossover frequency: 70Hz – 120Hz

Crossover slope: 12dB

Dimensions (L x W x H): 16-1/8" x 9-1/2" x 12-1/4" (includes mounting feet) (410mm x 242mm x 312mm)

Features, specifications and appearance are subject to change without notice.

## **Declaration of Conformity**



We, Harman Consumer International 2, route de Tours 72500 Chateau-du-Loir France

declare in own responsibility that the product described in this owner's manual is in compliance with technical standards:

EN 55013:2001 EN 55020:2002

Emmanuel Millot
Harman Consumer International
Chateau-du-Loir, France 3/04

JBL Consumer Products

250 Crossways Park Drive, Woodbury, NY 11797 USA

516.255.4JBL (4525) • FAX 516.682.3523 • www.jbl.com

© 2004 Harman International Industries, Incorporated

JBL is a registered trademark, and BassPro is a trademark, of Harman International Industries, Incorporated.

Part No. BASSPROIIOM3/04

H A Harman International Company

