



0 (800) 800 130  
(050) 462 0 130  
(063) 462 0 130  
(067) 462 0 130

**130**  
**COM.UA**

# Internet store of autogoods



km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories | CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories | GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodels • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronics • Front parktronics • Combined parktronics • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<https://130.com.ua>









## 5 POSITIONING THE CHILD

ADJUST HEADREST BEFORE SECURING YOUR CHILD.

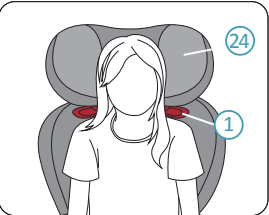

1. Seat your child in the child seat.
2. The headrest (24) shall be adjusted to a level that the shoulder belt guide (1) is just above the child's shoulders.

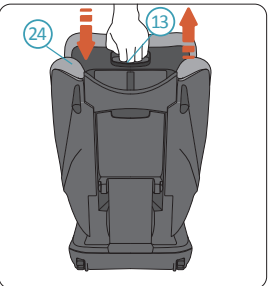

3. Operate and hold headrest adjustment handle (13) on the back of the headrest, which unlocks the headrest.
4. While holding the headrest adjustment handle (13), move the unlocked headrest (24) to the desired height. Release the handle to lock the headrest.

**⚠ DANGER** The child seat headrest will need to be adjusted from time to time as the child grows. Child's shoulders should be just under the shoulder belt guide (1).

**⚠ DANGER** There are 9 positions in total for the headrest (24). You may use the 4 lowest positions in the 5-point harness (11) mode. If the headrest is in its highest position with 5-point harness and you can no longer accommodate your child's shoulders, it means you should use your vehicle's 3-point belt instead. Remove the 5-point harness according to the instructions in Section 7. Then the headrest can be moved into 5 additional higher positions.


**⚠ DANGER** AFTER SECURING YOUR CHILD, PLEASE CHECK BELOW BEFORE YOUR TRAVEL:

1. The child seat is correctly secured. The lap belt (29) runs in the lap belt guide (4) on both sides of the seat cushion (10).
2. The shoulder belt (28) runs in the lap belt guide (4) on the side of vehicle's 3-point belt buckle (30) and the shoulder belt guide (1) on the other side of the headrest (24).
3. The vehicle's 3-point belt is tight and not twisted. The 3-point belt buckle (30) must not be positioned in the lap belt guide (4).

## 6 REMOVAL


1. Detach the Top Tether from your vehicle.
2. Pull the ISOFIX release levers on both sides to release the ISOFIX connectors. You can now remove the child seat.

## 7 REMOVAL AND REFITTING THE 5-POINT HARNESS

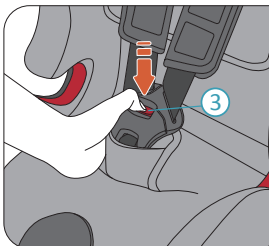


1. Uninstall the child seat from your vehicle. See instructions in Section 6.
2. Press the red button on the harness buckle (3) and open the harness.
3. Adjust the headrest to the highest position where the chest pad linkage stops the headrest from going further up.


### A. SECURING YOUR CHILD WITH 5-POINT HARNESS.

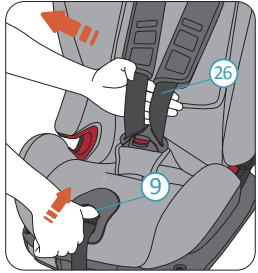


1. Hold down the harness adjustment button (9) and pull shoulder harness (26) towards you as much as possible. Make sure you pull the shoulder harness from beneath the chest pads as shown.

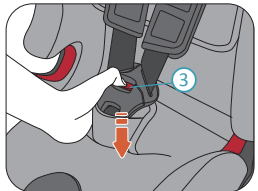


2. Press the red button on the 5-point harness buckle (3) to unbuckle it.




3. Seat your child in Sperling-Fix i-Size. Route the shoulder harness (26) over your child's shoulders and engage the buckle tongues (25) together. Click the engaged tongues into the buckle body.

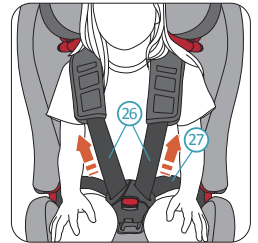

4. Pull both shoulder harness (26) to tighten the lap harness (27).
- ⚠ DANGER** Please check that the lap strap is worn low down so that the child's pelvis is firmly engaged.

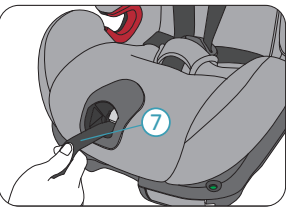


5. Pull the 5-point harness adjuster (7) until the harness firmly secures your child.
- ⚠ DANGER** Please check after tightening that none of the harness straps are twisted.
6. Finally pull both chest pads down fully.

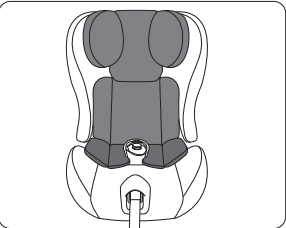


For a younger child (< 2 years) using the Sperling-Fix i-Size he/she must use the young child insert. The insert is pre-fitted to your child seat and is also available as spare parts from AVOVA retailers. From the age of 2 years onwards it is allowed to remove the young child insert. The cover of the headrest contains an additional shock-absorbing foam on both sides. This foam must be used until the child is 4 years old. From the age of 4 years onwards it is allowed to remove this foam from the headrest cover.

### B. SECURING YOUR CHILD WITH 3-POINT VEHICLE BELT.


**⚠ CAUTION** Make sure that the shoulder belts of the harness are removed and other parts of the harness are properly stored, according to the instructions in Section 7.

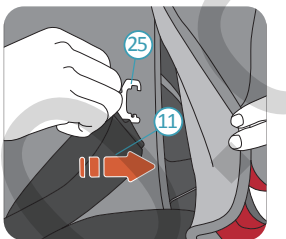

7. Put the buckle tongue (25) into the slot behind cover, then hide the shoulder harness and shoulder pad behind the cover.

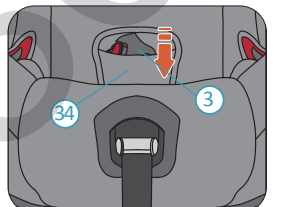

8. Remove the 5-point harness buckle (3) body from the crotch pad (34).

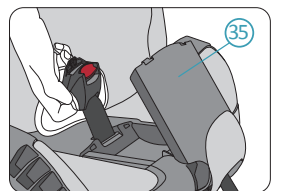

9. Open and hold the buckle storage cover (35) under the seat cover. Push the buckle through the slot in cover and put it in the buckle storage. Then close the storage cover.

10. Place the crotch pad below the seat cover. Now the harness is removed. You can restore the seat cover.

### REFITTING THE 5-POINT HARNESS.

Refit the harness in reverse order. If you have any question, please contact AVOVA for help.

## 8 CARE AND MAINTENANCE

### CARE AND MAINTENANCE


You may want to remove and wash the cover from time to time. Please do so with mild detergent in the delicates programme of the washing machine (30°C). Please refer to the washing label of the cover. The plastic parts can be cleaned with a mild soap and water.

**⚠ DANGER** The child seat must not be used without the AVOVA seat cover or young child insert if required for the child's age (< 2 years). The cover is a safety feature and may only be replaced by an original AVOVA cover.

### REMOVING AND REFITTING THE COVER



1. Move the headrest to the highest position. Release the cover hooks (36) at the lap belt guides and the elastic bands (37) at the front of the seat on both sides. Then remove the seat cover.

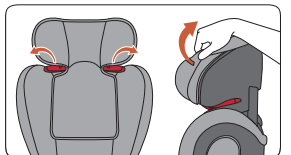

2. Pull out the trim of the headrest cover from the plastic part. Then release the loops behind the headrest cover.

Please refit the cover in the reverse order.

## 9 WARRANTY

1. The warranty for AVOVA Sperling-Fix i-Size lasts for 2 years from the date of original purchase from new. The usage of the product should be in accordance with this user manual. Any damage caused by operations against the instructions in this user manual will void the warranty.

2. Please keep your proof of purchase properly in case of a warranty claim.

3. Never use third parties for maintenance, repair or modification otherwise you will void the warranty. Always check with AVOVA retailers for advice.


If you have any further questions regarding the child seat's use, please feel free to contact us:

AVOVA GmbH  
Blaubeurer Straße 71  
89077 Ulm  
Germany


T: +49 731 379941-0  
info@avova-childcare.com  
www.avova-childcare.com

## 10 DISPOSAL

When you need to dispose of the child seat, please refer to your local waste disposal regulations. If you have further questions, please contact your communal waste management or administration of your city.

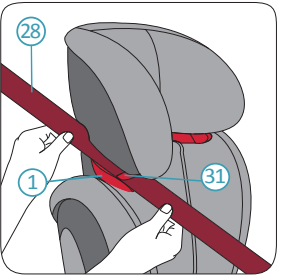

**⚠ WARNING** If the shoulder belt guide (1) is concealed by the backrest (22), adjust the headrest (24) upwards to allow the shoulder belt section (28) can be inserted easily into the shoulder belt guide and then adjust the headrest back to the correct height.

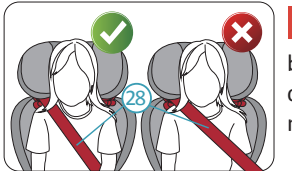

**⚠ DANGER** Check that the shoulder belt (28) runs over your child's collar-bone, not across his/her neck.



5. First pull the shoulder belt part that crosses the body of the child to remove the slack from lap section. Then pull the shoulder belt (28) part above the child seat to remove the remaining slack.