

PHONES 0 (800) 800 130 (050) 462 0 130

(063) 462 0 130 (067) 462 0 130

# Internet store of autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |

CAR AUDIO — Car audio speakers • Amplifiers • Crossovers • Accessories | TRIP COMPUTERS — Universal computers • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories | TRIP COMPUTERS — Universal computers • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories | TRIP COMPUTERS — Universal computers • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Antennas • Accessories |

CAR AUDIO — Car audio speakers • Accessories |

CAR AUDIO — Car audio speakers

- GPS NAVIGATORS Portable GPS Built-in GPS GPS modules GPS trackers Antennas for GPS navigators Accessories | VIDEO DVR TV sets and monitors Car TV tuners Cameras Videomodules Transcoders Car TV antennas Accessories | SECURITY SYSTEMS Car alarms Bike alarms Mechanical blockers Immobilizers Sensors Accessories | OPTIC AND LIGHT Xenon Bixenon Lamps
- LED Stroboscopes Optic and Headlights Washers Light, rain sensors Accessories | PARKTRONICS AND MIRRORS Rear parktronics Front parktronics Combined parktronics Rear-view mirrors Accessories | HEATING AND COOLING Seat heaters Mirrors heaters Screen-wipers heaters Engine heaters Auto-refrigerators Air conditioning units Accessories | TUNING Vibro-isolation
- Noise-isolation Tint films Accessories | ACCESSORIES Radar-detectors Handsfree, Bluetooth Windowlifters Compressors Beeps, loudspeakers Measuring instruments Cleaners Carsits
- Miscellaneous | MOUNTING Installation kits Upholstery Grilles Tubes Cable and wire Tools Miscellaneous | POWER Batteries Converters Start-charging equipment Capacitors
- Accessories | MARINE AUDIO AND ELECTRONICS Marine receivers Marine audio speakers Marine subwoofers Marine amplifiers Accessories | CAR CARE PRODUCTS Additives Washer fluid Care accessories Car polish Flavors Adhesives and sealants | LIQUID AND OIL Motor oil Transmission oil Brake fluid Antifreeze Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

https://130.com.ua





**DR900S-2CH**Manual

**ENGLISH** 

www.blackvue.com

## **Table of Contents**

Introduction	5
Important safety information	6
Overview	9
In the box	9
At a glance	10
Front camera	10
Removing and inserting the front camera	12
Rear camera	13
Removing and inserting the rear camera	13
Installation	14
Installing the BlackVue dashcam	14
Playing and Managing Videos	18
Playing and managing video files using your sm (Android/iOS)	
Opening video files	18
BLACKVUE WI-FI screen composition	20
Playing video	21
Playing back videos	
Identify video files by recording type	21
Checking the displayed time & GPS data	23
Real-time streaming video (Live View)	24
Managing videos	
Managing videos in BLACKVUE WI-FI	25
Copy to Internal Memory	25
Managing videos in INTERNAL MEMORY	
Deleting videos Creating a new folder	
Copying and pasting videos	
Moving videos	
Renaming a video	
opioaumy, snaring of emailing a video	28

Playing and managing video files using your compute (Windows/Mac)	
Removing the microSD card	
Opening video files in BlackVue Viewer	30
Viewer screen composition	31
Windows Viewer	31
Mac Viewer	
Playing video	33
Playing back videos	33
Identify video files by recording type	33
Checking the displayed time	35
Using BlackVue Viewer	35
Exploring the timeline and G-Sensor graph	36
Zoom options	37
Checking the GPS data	38
Managing videos	39
Capturing or printing a still image from video	39
Deleting videos	
For Windows users For Mac users	
Exporting videos	
For Windows users	
Copying videos	
For Mac users	
Tips for optimal performance	44
Formatting the microSD card	44
Formatting the card in the BlackVue	
Format using BlackVue Viewer (Windows)	
Format using BlackVue Viewer (macOS)	45
Upgrading the firmware	47
Upgrading the firmware using an iOS or Android device (Firmware Over The Air)	
Ungrading the firmware using a computer (Windows or Mac)	

Changing settings	52
Changing settings using your smartphone (And	
Basic settings	
Time settings	54
Video settings	56
Resolution	56
Video Codec	
Image quality	
Enhanced night vision	
Brightness (Front)	
Recording settings	
Normal recording  Automatic parking mode	
Voice recording	
Date & time display	
Speed unit	
Video segment length	
Lock event files	59
Front camera rotation	59
Rear camera rotation	59
Sensitivity settings	60
G-Sensor (Normal mode) / G-Sensor (Parking mode)	61
Motion detection (Parking mode)	
System settings	63
LED	63
Recording status	63
Front security (Normal mode)	
Front security (Parking mode)	
Rear security	
Wi-Fi (Parking mode)	
Proximity Sensor	64
Voice guidance	64
Impact detected in parking mode	64
Volume	64
Scheduled Reboot	65
Speed alert	65
User text overlay	65

Wi-Fi settings	66
Login credentials	66
Wi-Fi auto turn on & off	66
Cloud settings	67
Enable Cloud service	
Cloud service hotspot settings	68
Push notification settings	
FW Language	
Changing settings using your computer (Wi	
BlackVue Viewer settings	
Select language	
Speed unit on map	
Select map service	72
Use video accelerator	72
Firmware settings	73
Basic settings	74
Time settings	
Video settings	
Recording settings	
Sensitivity settings	
G-Sensor (Normal mode) / G-Sensor (Parking mode)	
Advanced sensitivity settings for normal and parking mode	
System settings	
LED	
Proximity Sensor	
Voice guidance	
Volume	8
Scheduled Reboot	
Speed alert	
User text overlay	
Wi-Fi settings	
Login credentials	
Cloud settings  Enable Cloud service	
Cloud service hotspot settings	
Push notification settings	
Applying the settings	

About the Cloud Service	<b>87</b>
Connect to BLACKVUE CLOUD (Optional)	87
Optional accessories	92
Parking mode hardwiring kit (Optional)	92
Parking mode battery pack (Optional)	93
Troubleshooting	94
Changing / resetting direct Wi-Fi SSID and password	94
On-device Wi-Fi SSID and password reset	94
Change Wi-Fi SSID and password over the Cloud	95
Change the Wi-Fi password using BlackVue Viewer (Windows or Mac)	97
Product specifications	98
Recording time 1	00
Disposal and recycling information1	01

#### Introduction

Thank you for purchasing this BlackVue dashcam made by Pittasoft Co., Ltd.

This instruction manual contains information on how to operate your dashcam.

Before using your dashcam, we recommend that you read through this manual to ensure correct usage.

To improve the performance of the product, the contents of this manual are subject to change without prior notice.



• A formatted microSD card is provided with the BlackVue dashcam when you purchase the product. Insert the microSD card in the dashcam and power it up. The microSD card will be initialized.

## Important safety information

For user safety and to avoid property damage, read through this manual and follow these safety instructions to use the product correctly.



Failure to observe the following directions could result in death or property damage:

Do not disassemble, repair, or modify the product yourself.

Doing so may cause fire, electric shock, or malfunction. For internal inspection and repair, contact the service center.

• If any foreign matter gets inside the product, detach the power cord immediately.

Contact the service center for repair.

Do not adjust the product while driving.

Doing so may cause an accident. Stop or park your car in a safe place before installing and setting up the product.

• Do not install the product in a location where the product can interfere with the driver's field of vision.

Doing so may cause an accident.

• Do not use a damaged or modified power cord. Only use the cords provided by the manufacturer.

Damaged or modified power cords may cause an explosion, fire, or malfunction.

• Do not operate the product with wet hands.

Doing so may cause electric shock.

• Do not install the product in an environment with high humidity, or combustible gases or liquids.

Doing so may cause an explosion and/or fire.



## **WARNING** Failure to observe the following directions could result in death or serious injury:

• Do not leave the product near infants, children, or pets.

There is a risk of them swallowing small components, and/or their saliva may get into the product, causing an explosion due to a short circuit.

- Do not spray water or wax directly onto the product while cleaning the inside of the car.

  Doing so may cause fire, electric shock, or malfunction.
- If smoke or an unusual smell is emitted from the power cord, detach the power cord immediately.
- Contact the service center or your distributor.
- Keep the terminals of the power cord clean.
   Failure to do so may cause excessive heat and fire.
- Use the correct input voltage.

  Failure to do so may cause explosion, fire, or malfunction.
- Plug in the power cord firmly so that it cannot easily be disconnected. Failure to do so may cause fire.
- Do not cover the product with any material.

Doing so may cause external deformation of the product or fire. Use the product and peripherals in a well-ventilated location.



**CAUTION** Failure to observe the following directions could result in injury or property damage:

Do not spray cleaning products directly onto the product.

Doing so may cause discoloration, cracks, or malfunction.

- If the product is used outside the optimal temperature range (-20°C 70°C / -4°F 158°F), performance can decline or malfunctions may occur.
- Make sure that the product is installed properly.

If installed incorrectly, vibrations may cause the product to fall, and may cause physical injury.

- When entering or exiting a tunnel, when directly facing into bright sunlight, or when recording at night without lighting the quality of recorded video may deteriorate.
- If the product is damaged or the power supply is cut due to an accident, video may not be recorded.
- Excessively tinted windshield glass can distort the recorded video or cause recorded video to be indistinct.
- Prolonged use of the product can increase the interior temperature and cause burns.
- microSD cards are consumables, so replace microSD cards after prolonged use.

microSD cards may not record video correctly after extended use, so check the microSD card's recording capability periodically and replace as necessary.

• Clean the lens regularly.

Foreign material attached to the lens can affect the recording quality.

• Do not remove the microSD card while the microSD card is saving or reading data.


The data can be damaged or malfunctions may occur.

- It is recommended that you install the software and firmware from the BlackVue downloads page (www.blackvue.com).
- It is recommended that you remove the power cord if the product (BlackVue dashcam/Parking Mode Hardwiring Kit) is not used for an extended period of time.



## In the box

Check the box for each of the following items before installing the BlackVue dashcam.

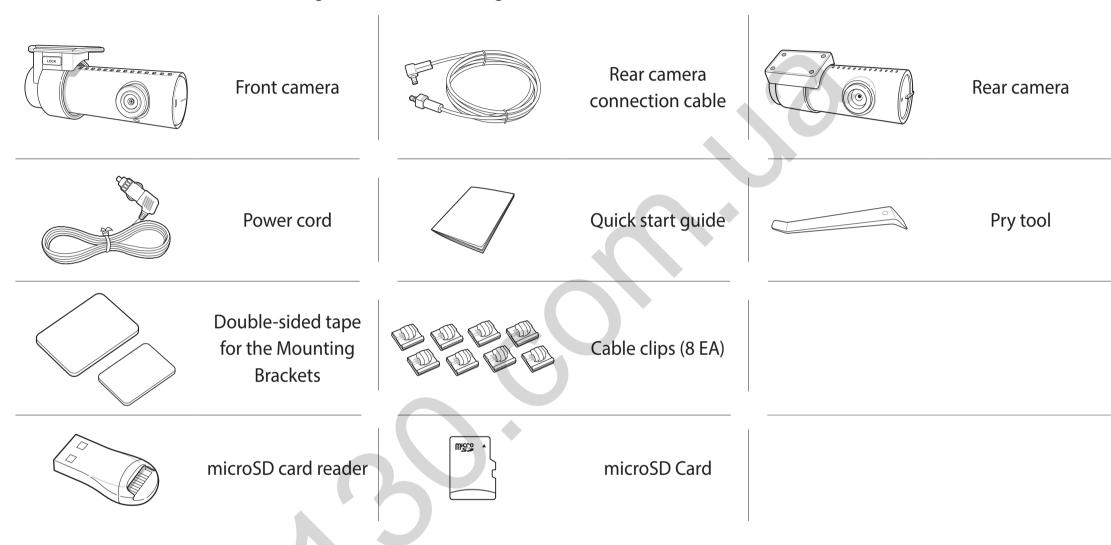


## Note

- The illustrations in this manual may differ from the product.
- To improve the performance of the product, the contents of this manual are subject to change without prior notice.
- For more information about the package components and accessories, visit the BlackVue website (www.blackvue.com).


# At a glance

The following diagrams explain each part of the BlackVue dashcam.

#### Front camera

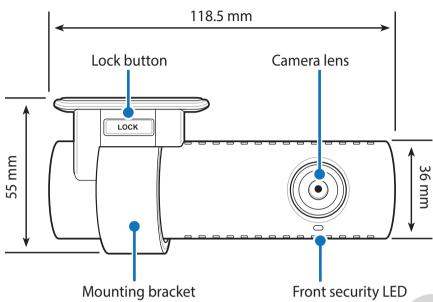

- : Blinks slowly during normal mode and parking mode motion detection standby.
- : Blinks quickly when (i) an event is being recorded (impact detected), (ii) manual recording has started, or (iii) motion is detected in parking mode.

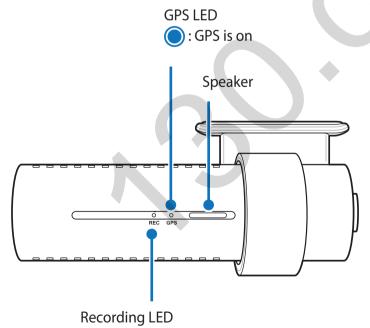


- ( ): Blinks orange in normal mode.
- (i) an event is being recorded (impact detected), or (ii) manual recording has started.
- : Blinks green in parking mode when motion is detected.

Wi-Fi/Internet LED

🛜 : Direct Wi-Fi is on.

: Blinks when connected to the internet (Cloud connected).

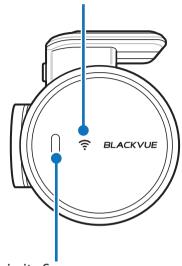


#### Proximity Sensor:

Touch or wave a finger within 20mm of the sensor to turn on/off audio recording.

Alternatively, it can be set as a manual recording trigger in the firmware settings.

#### Rear camera connection port

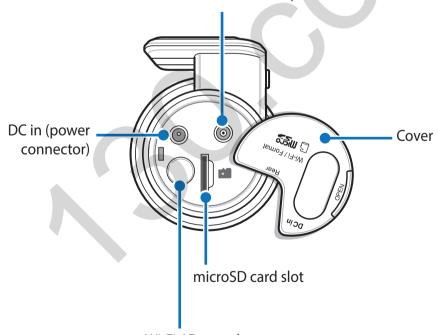


#### Wi-Fi / Format button:

- Press once to turn on/off Wi-Fi.
- Press and hold for 5 seconds and once voice instructions start, release the button. Then press once again to reset the Wi-Fi SSID and password or press and hold for 5 seconds to format the microSD card.

#### Removing and inserting the front camera


Connectivity details label:

- Default Wi-Fi SSID
- Default Wi-Fi password
- Cloud code
- QR code

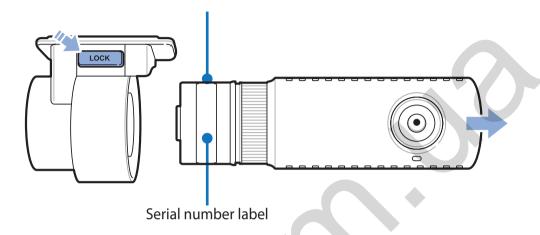


- To remove the dashcam from its bracket, press the LOCK button and pull the dashcam out of the mounting bracket.
- To insert the dashcam into its bracket, push the dashcam into the mounting bracket until it "clicks" in.

#### Rear camera

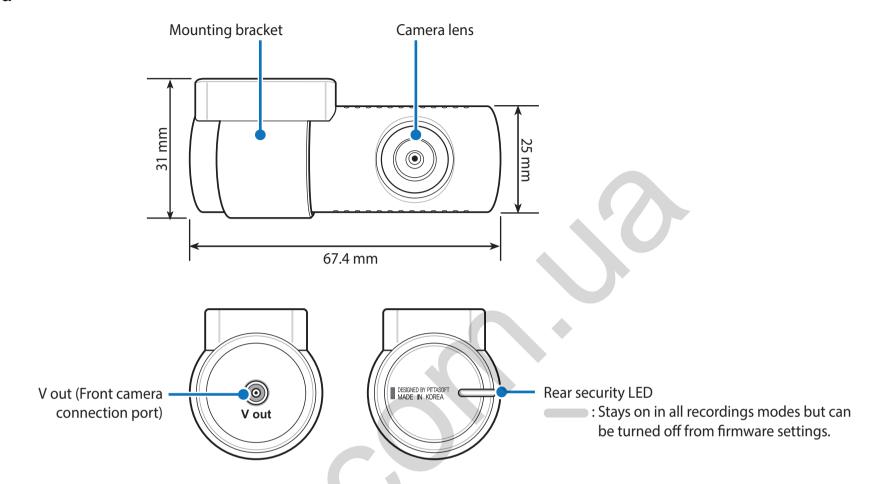

Removing and inserting the rear camera

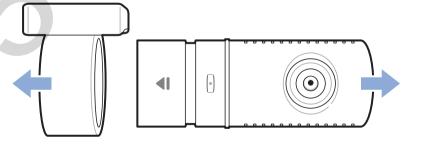


- To remove the rear camera from its bracket, hold the mounting bracket and pull the rear camera out.
- To insert the rear camera into its bracket, push the rear camera into the mounting bracket until it "clicks" in.

## Installation



## **Installing the BlackVue dashcam**


Install the front camera behind the rear view mirror. Install the rear camera at the top of the back windshield. Remove any foreign matter and clean and dry the windshield before installation.

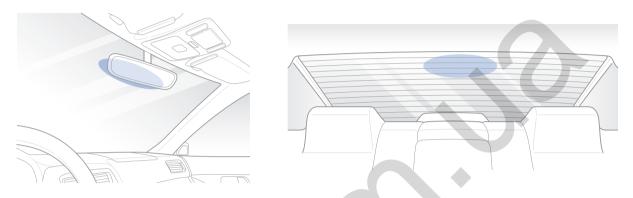




#### Warning


- Do not install the product in a location where it can obstruct the driver's field of vision.
- Turn off the engine. Open the cover of the microSD card slot, gently push the card into the slot until it locks into place and close the cover.

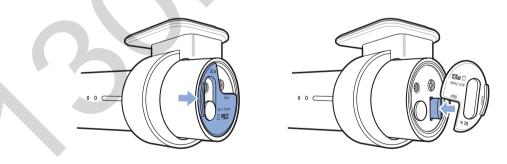


Peel off the protective film from the double-sided tape and attach the front camera to the windshield behind the rear-view mirror.

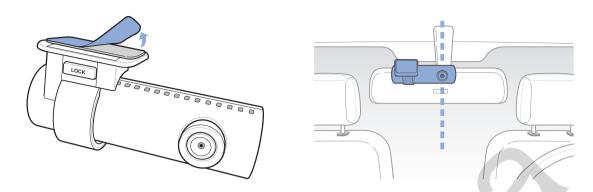


Adjust the angle of the lens by rotating the body of the front camera. We recommend pointing the lens slightly downwards (≈10° below horizontal), so as to record video with a 6:4 road to background ratio.

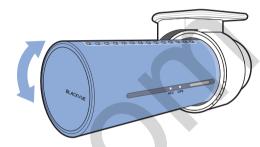


Peel off the protective film from the double-sided tape and attach the rear camera to the rear windshield. Adjust the angle of the lens by rotating the body of the rear camera.

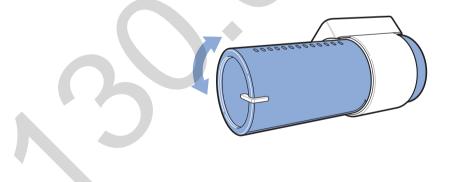


5 Connect the front camera ('Rear' port) and the rear camera ('V out') using the rear camera connection cable.

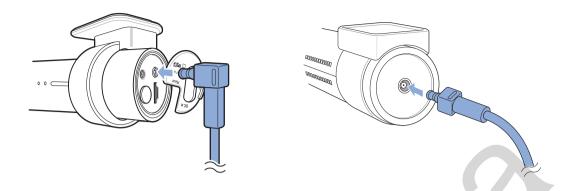

6 Use the pry tool to lift the edges of the rubber window sealing and molding and tuck in the rear camera connection cable.

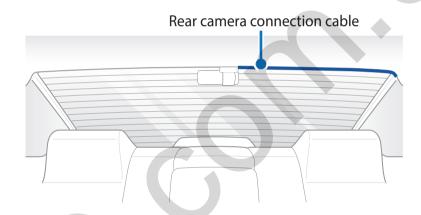

- **7** Plug the power cord into the cigarette lighter socket and the front camera.
- 8 Use the pry tool to lift the edges of the windshield trim/molding and tuck in the power cord.

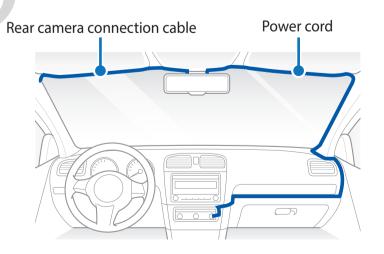

- Turn on the engine. The BlackVue dashcam will power up and start recording. Video files are stored on the microSD card. When the microSD card fills up, the newest video files will start to replace the oldest video files (called loop recording) – so you will always have the most recent video files.
- Turn off the engine. The dashcam will automatically stop recording and power down. To record in parking mode while the engine is off please install a Power Magic Battery Pack (sold separately) or a Power Magic Pro (sold separately). A Power Magic Pro powers your dashcam when the engine is off by hardwiring it to the automotive battery. A low voltage power cut-off function and a parking mode timer protect the automotive battery from discharge.

## Note


- Up to 50 event recordings (impact, manual) can be locked from being overwritten. By default, this feature is disabled. You can enable it from firmware settings and choose to either overwrite them with new event files when the event file storage is full or lock the 50 event files and save the new event files in loop recording storage. Please note that formatting the microSD card deletes all the recordings including the locked event files.
- The recording LED blinks while recording (default setting) and the GPS LED is on when a GPS signal is received. There are 4 recording modes: Normal, Event, Parking and Manual. The dashcam starts recording in normal mode, switches to event mode when an impact is detected, and switches to parking mode if the vehicle is stationary for 5 minutes. Touching the proximity sensor turns on/off audio recording or triggers manual recording depending on the firmware settings.
- When you run the dashcam for the first time the firmware is automatically loaded onto the microSD card. After the firmware has been loaded onto the microSD card you can customize settings using BlackVue Viewer on a computer.

## **Playing and Managing Videos**

- Playing and managing video files using your smartphone (Android/iOS)
- **Opening video files**
- Search for the BlackVue app in the Google Play Store or Apple App Store and install it on your smartphone.
- "Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi:
  - a. Unplug the power cable and remove the front dashcam from its mount. With the label visible, plug in the power cable and wait for the dashcam to start normal recording. Press the Wi-Fi button once to turn on Wi-Fi.
  - b. Go to your smartphone's **Settings** then select **Wi-Fi**, and make sure Wi-Fi is turned on.



- c. Choose your BlackVue dashcam from the network list. The dashcam's default SSID begins with its model number (e.g. BlackVue \*\*\*-\*\*\*\*\*).
- d. Enter the password and tap join.
- \* The default Wi-Fi SSID and password are printed on the dashcam's label.
- e. Open the BlackVue app and select BLACKVUE WI-FI.

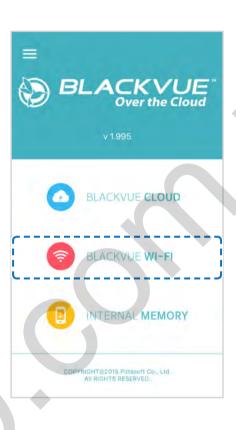




- Direct Wi-Fi lets you directly connect your smartphone to your dashcam via Wi-Fi within a range of 10m.
- The BlackVue app is available for devices running Android 4.4.2 and higher, or iOS 9.0 and higher.
- You can change the Wi-Fi SSID and password as described on page 95 and 97.

# >

# **BLACKVUE WI-FI screen composition**

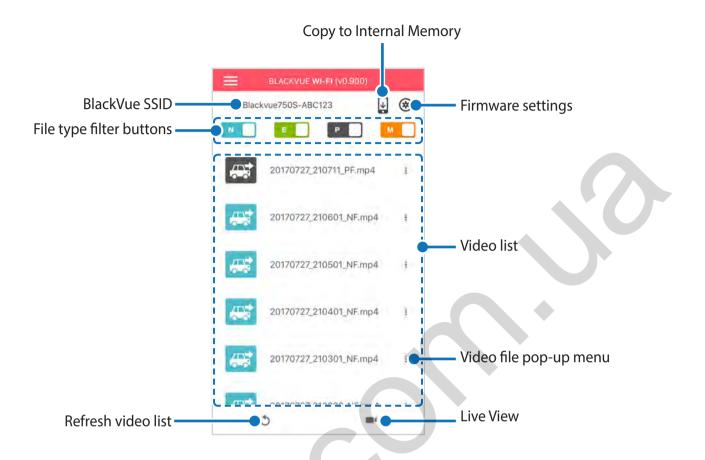



• All images shown are for illustration purposes only. Actual app may differ from images shown.



#### Playing back videos

Select the video file you want to play from the video list.

Press the refresh button to refresh the video list.

## Note

• The playback of 4K UHD resolution, 'Highest' image quality and/or H.265 coded videos depends on your device's hardware and software. Older devices may not support 4K UHD, 'Highest' image quality or H.265 video playback. If you encounter issues please check your device's video playback capabilities.


## Identify video files by recording type

N	Normal	The dashcam records in normal mode by default.
E	Event	When the dashcam detects an impact while in normal or parking mode, it switches to event mode and saves an event recording beginning 5 seconds before the event trigger. Exceeding the set speed limit will also trigger an event recording.
P	Parking	In parking mode the dashcam continuously buffers video. When motion is detected in the dashcam's field of view, it saves a parking recording beginning 5 seconds before the motion detection.
M	Manual	If proximity sensor is set as a manual recording trigger in the firmware settings, touching or waving a finger within 20 mm of the sensor will turn on manual recording.

Tap the car icon to load the thumbnail of a recording.

The car icon with an arrow pointing to the right indicates a front dashcam recording.

The car icon with an arrow pointing to the left indicates a rear dashcam recording.

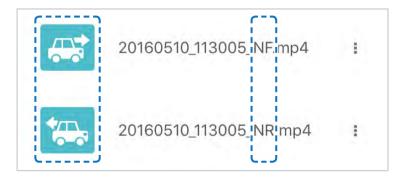

Recording file names include the date, time, recording type and camera direction.

• Recording type: N: Normal

E: Event

P: Parking mode motion detection

M: Manual

• Camera direction: F: Front camera

R: Rear camera

• **Example file name:** 20170104\_150838\_NF.mp4

Date & time: 4th January 2017, 03:08:38 PM

Recording type: Normal


Camera direction: Front camera



- Use the N, P, M buttons to filter the video list by recording type (Normal, Event, Parking and Manual). The F litter button displays both E (Event) and I (Impact event while parked) recordings.
- The dashcam requires a constant power source to record in parking mode. See "Optional accessories" on page 92 for more information.

## Checking the displayed time & GPS data

The time the video was recorded is displayed in the lower left corner of the video in the playback screen. If the displayed time in the recorded videos is incorrect please see "Time settings" on page 54 or 74.

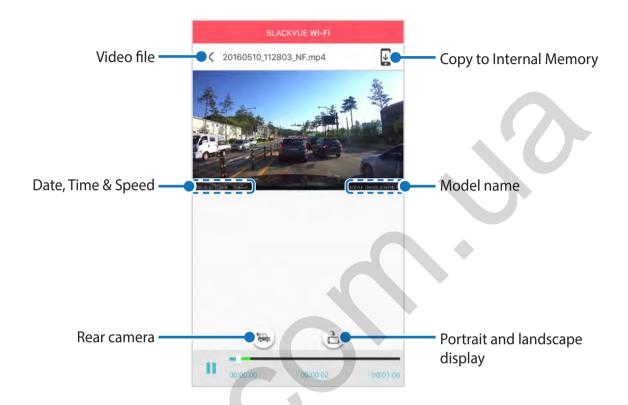

The vehicle's speed is displayed in the lower-left corner of the video.

Rotate your smartphone or press the rotate button 🖨 to switch between portrait and landscape display modes.

Press the rear button 🐃 to switch to the rear dashcam view.



## **Real-time streaming video (Live View)**

You can view in real-time the video currently being recorded by connecting your smartphone to the dashcam via direct Wi-Fi.



- Go to your smartphone's **Settings** > **Wi-Fi** and connect to your dashcam.
- 2 Open the BlackVue app. Select **BLACKVUE WI-FI** and tap the button.
- Rotate your smartphone or press the rotate button 🖮 to switch between portrait and landscape display modes.
- 4 Press the rear button 🖘 to switch to the rear dashcam view.

## Note

• When watching Live View via direct Wi-Fi, map data isn't displayed because your smartphone can't access the internet as long as it is connected to the dashcam's Wi-Fi.



## **Managing videos**


#### Managing videos in BLACKVUE WI-FI

You can manage the recorded videos using the BlackVue app.

## Note

• When the microSD card fills up, the newest video files will start to replace the oldest video files (called loop recording) – so you will always have the most recent video files.

#### **Copy to Internal Memory**

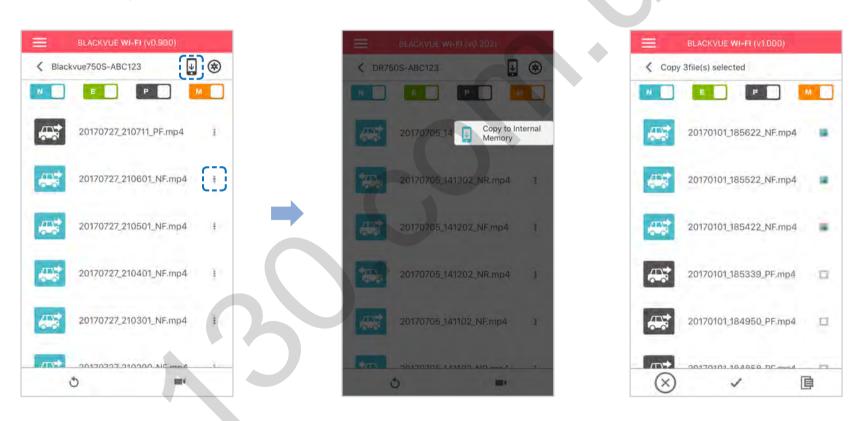


To copy individual files to your smartphone, tap next to the video you want to copy. Select Copy to Internal Memory.

To copy multiple files to your smartphone in one go tap 🖳 . Select which files to copy, or tap 🥒 to select all files. Tap 📋 to begin copying.

## **Managing videos in INTERNAL MEMORY**

Open the BlackVue app and select INTERNAL MEMORY.

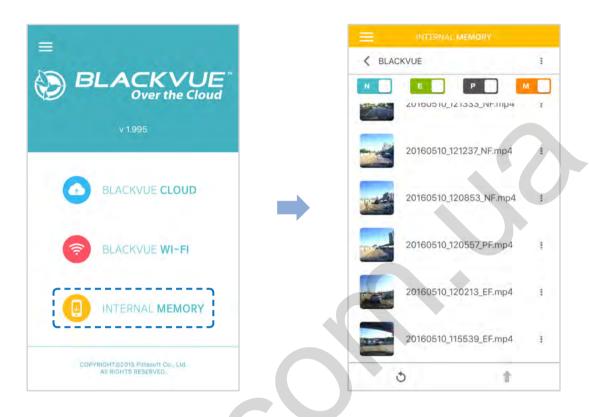



Tap to see file options. You can delete, copy or move files, change the name of files and share files.

#### Deleting videos

To delete multiple files from your smartphone in one go, tap at the top of the screen and select **Delete**. Select which files to delete, or tap to select all files. Tap to delete the selected files.

To delete individual files, tap next to the video you want to delete. Select **Delete**.

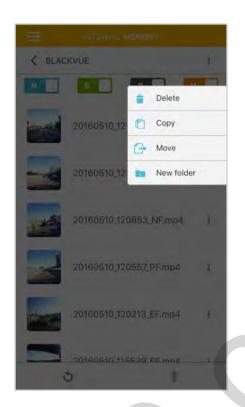

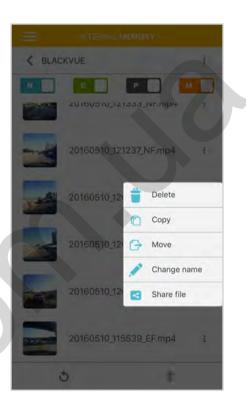

#### Creating a new folder

To create a new folder tap at the top of the screen and select **New folder**. Enter a new folder name and press OK.

#### Copying and pasting videos

To copy multiple files in one go, tap at the top of the screen and select **Copy**. Select which files to copy, or tap to select all files. Tap to copy the selected files. Go to another folder and tap to paste the selected files there.

To copy individual files, tap next to the video you want to copy. Select **Copy**. Go to another folder and tap to paste the file there.

#### **Moving videos**

To move multiple files in one go, tap at the top of the screen and select **Move**. Select which files to move, or tap 🗸 to select all files. Tap  $\stackrel{\bullet}{+}$  and go to another folder and tap  $\stackrel{\bullet}{\sqsubseteq}$  to move the selected files there.

To move individual files, tap next to the video you want to move. Select **Move**. Go to another folder and tap to move the file there.

#### Renaming a video


To rename a video, tap next to the video you want to rename. Select **Change name**. Enter a new name and tap **OK**.

#### Uploading, sharing or emailing a video

Tap next to the video you want to share. Select **Share file**. Choose the app you want to share with. The available options will depend on what apps you have installed on your smartphone.


## Playing and managing video files using your computer (Windows/Mac)

- Removing the microSD card
- Unplug the power cord to turn off the dashcam.
- Open the cover of the microSD card slot.
- To remove the microSD card, gently press on the card to release the lock then carefully pull the card out. To insert the microSD card, gently push the card into the slot until it locks into place and close the cover.

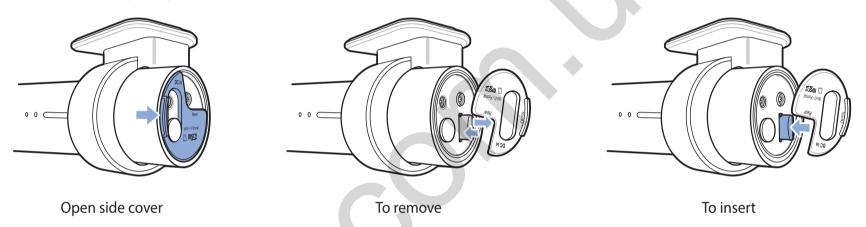

# **Opening video files in BlackVue Viewer**

- Remove the microSD card from the dashcam.
- Insert the card into the microSD card reader and connect it to a computer.

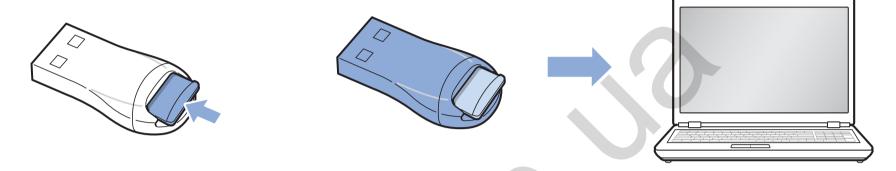


- Download BlackVue Viewer from <a href="https://www.blackvue.com">www.blackvue.com</a> > Support > Downloads and install it on your computer.
- Run BlackVue Viewer. To play, select a video and click on the play button or double click the selected video.



## **Viewer screen composition**

#### Windows Viewer

When you launch the program, you will see the SD card Viewer window. To open Cloud Viewer, click the state button.

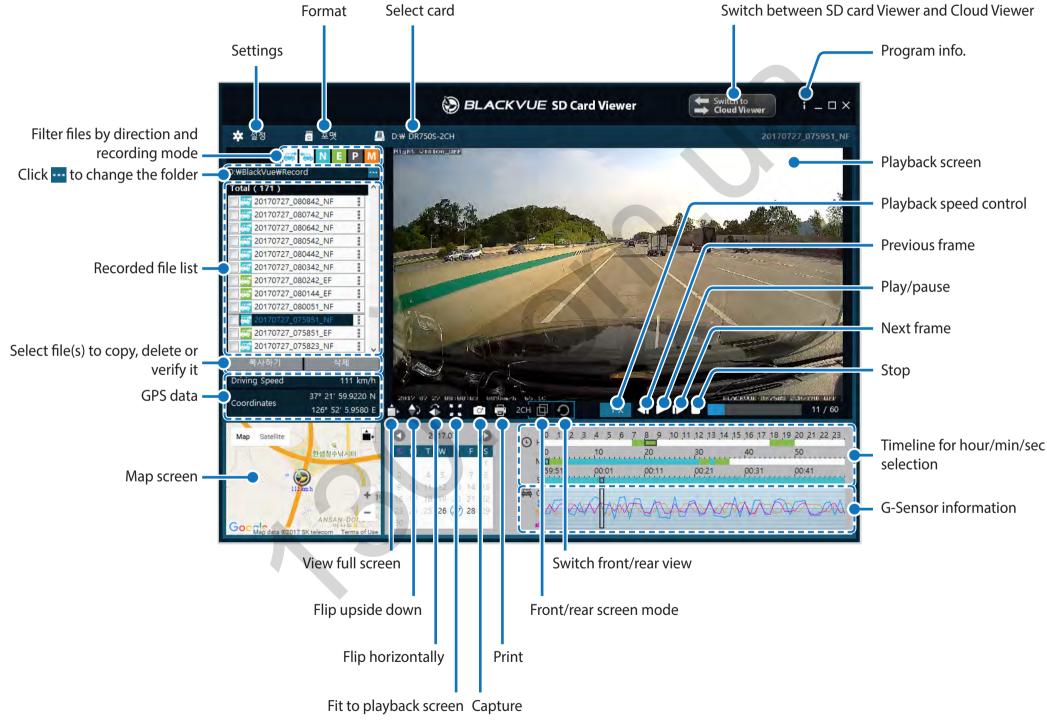




• All images shown are for illustration purposes only. Actual program may differ from images shown.

#### **Mac Viewer**

When you launch the program, you will see the SD card Viewer window. To open Cloud Viewer, click the state button.

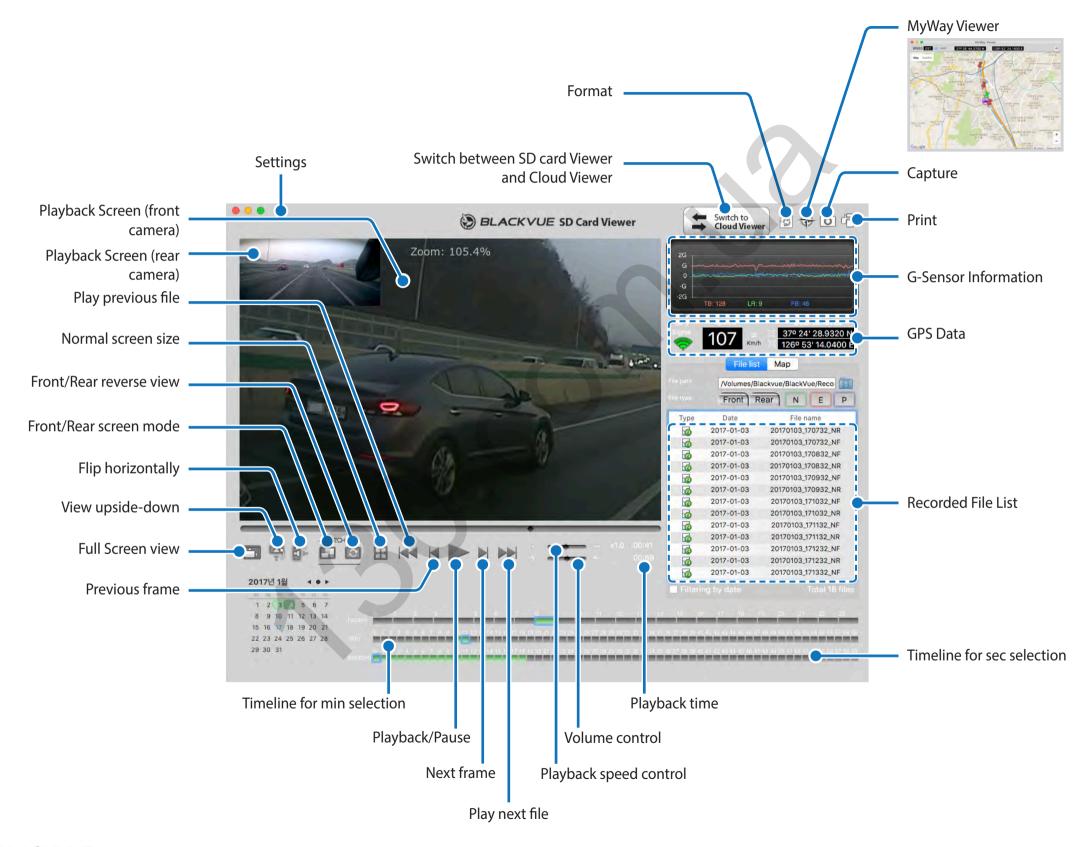



## Playing back videos

In BlackVue Viewer double click a video file to play.

BlackVue Viewer shows by default the files in the microSD card. To see files in another folder click the button and browse to the folder.

## Note

- The playback of 4K UHD resolution and/or H.265 coded videos depends on your computer's hardware and software. Older computers may not support 4K UHD or H.265 video playback. If you encounter issues please check your computer's video playback capabilities.
- Depending on your computer's hardware and software, the dashcam videos that are recorded at 60fps may not play smoothly or at higher speeds (2x, 4x, etc.).

## Identify video files by recording type

20161215_171828_PR	- 3	
20161215_171732_PF	78	— Parking mode, Front camera
	-	
20161215_171732_PF		<ul> <li>Parking mode, Rear camera</li> </ul>
	-	
20161031_213100_NF	- 1	
7 20160825 081954 NF	1.	
	-	
20160825_081853_NF		

Recording type: N: Normal

E: Event

P: Parking mode motion detection

M: Manual

**Camera direction:** F: Front camera

R: Rear camera

**Example file name:** 20170104\_150838\_NF.mp4

Date & time: 4th January 2017, 03:08:38 PM

Recording type: Normal

Camera direction: Front camera

EPM buttons to filter the video list by recording type. The Efilter button displays both E (Event) and I (Impact event while parked) recordings.

Normal	The dashcam records in normal mode by default.
Event	When the dashcam detects an impact while in normal or parking mode, it switches to event mode and saves an event recording beginning 5 seconds before the event trigger. Exceeding the set speed limit will also trigger an event recording.
Parking	In parking mode the dashcam continuously buffers video. When motion is detected in the dashcam's field of view, it saves a parking recording beginning 5 seconds before the motion detection.
Manual	If proximity sensor is set as a manual recording trigger in the firmware settings, touching or waving a finger within 20mm of the sensor will turn on manual recording.

The car icon with an arrow pointing to the right indicates a front dashcam recording.


The car icon with an arrow pointing to the left indicates a rear dashcam recording.

## Note

• The dashcam requires a constant power source to record in parking mode. See "Optional accessories" on page 92 for more information.

#### Checking the displayed time


The time the video was recorded is displayed in the lower left corner of the video in the playback screen. If the displayed time in the recorded videos is incorrect please see "Time settings" on page 54 or 74.

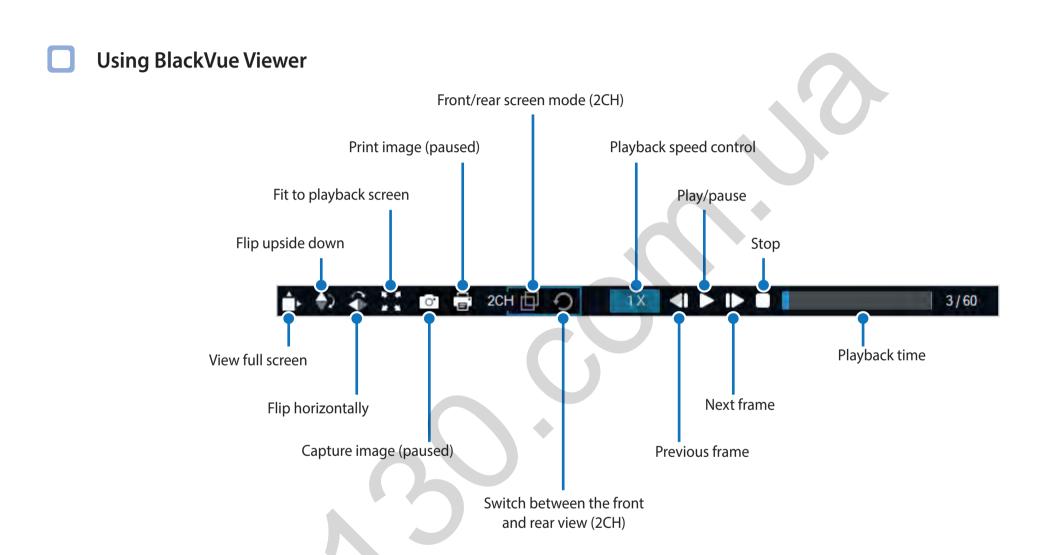

## **Exploring the timeline and G-Sensor graph**


You can explore the timeline for the playback of the recorded videos by date, hour, minute and second using the timeline.


You can check the impact sensitivity (G-Sensor) information in the line graph.

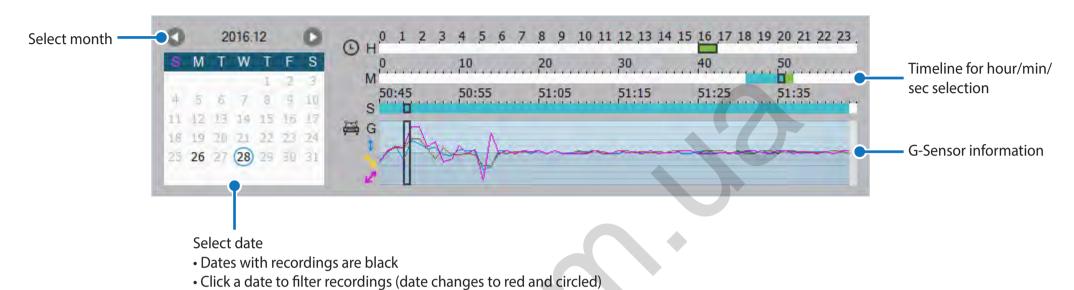

## **Zoom options**

- Use the mouse scroll wheel zoom. Right clicking will restore the video to the default size.
- You can resize the playback frame or the BlackVue Viewer window by dragging the borders.
- Full-screen view: Double click on the video image to enter full-screen view. Double click again or tap ESC to return to the default view.

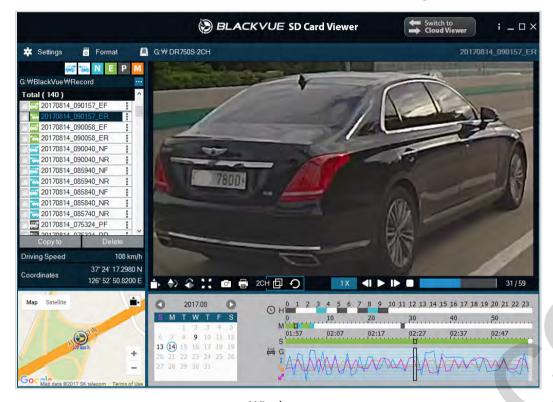

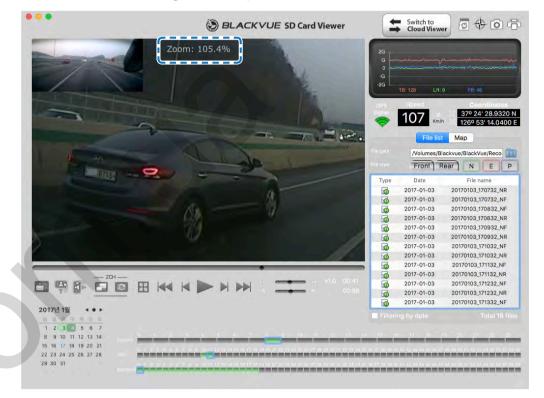


Windows Mac

## **Checking the GPS data**

You can check the GPS data of the recorded video in BlackVue Viewer while video is playing back. The driving speed and coordinates are displayed above the map frame.

## Note Note

• GPS data is not recorded during parking mode. Map data cannot be displayed for parking mode recordings.

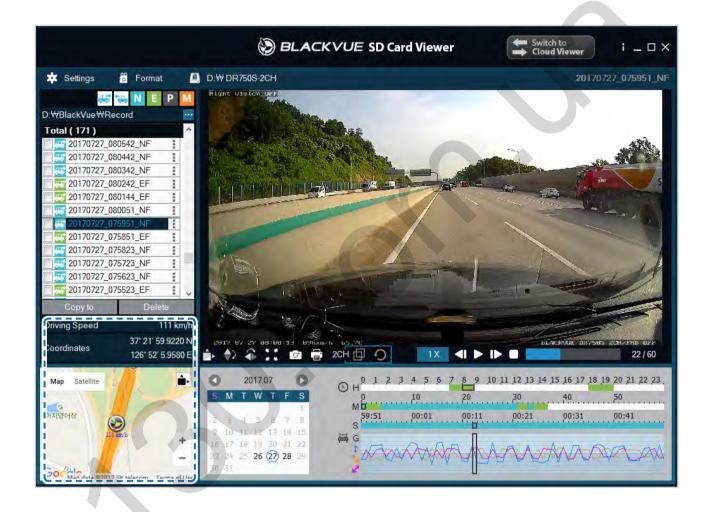




## **Managing videos**

You can manage the recorded videos through the BlackVue Viewer program. You can also format the microSD card.




- If the microSD card is full, by default the dashcam will record over the oldest videos first.
- Capturing or printing a still image from video
- Double click a file in the file list to play.
- Click the **III** pause button to pause the video.
- Select the capture button to capture the image or the print button to print directly.
- **Deleting videos**
- **For Windows users**
- Select the video, or videos using the checkboxes, from the recorded video list.
- Click **Delete**.
  - You can also delete individual files by clicking next to a video in the recorded video list and selecting **Delete**.

- For Mac users
- Go to \BlackVue\Record\.
- Select the video from the recorded video list.
- Click Move to Trash.

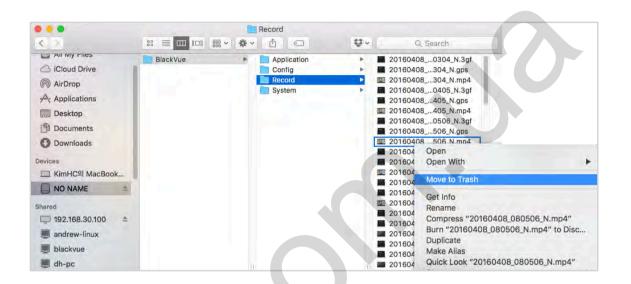


Autogoods "130"

- **Exporting videos**
- For Windows users
- Click next to a video in the recorded video list.

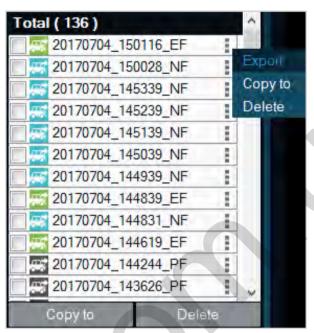


- Click **Export**.
- If you want to extract a segment of a file select Save segment and edit the start and end second points. To export without audio select **Sound Off**.

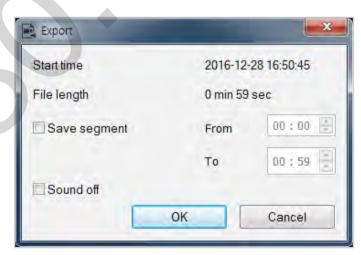

- 4 Click the **OK** button.
- 5 Select the folder in which to save the file and enter the file name.
- **6** Click the **Save** button.

- Copying videos
- For Windows users
- 1 Click next to a video in the recorded video list.
- **2** Click **Copy to**.
- **3** Select the folder in which to copy the file and enter the file name.
- Click the Select folder button.
  - To copy multiple files at once check the boxes next to the file names and press the **Copy to** button
  - When copying files the segment adjustment and sound off tools are not available.

- For Mac users
- Go to \BlackVue\Record\.
- Select the video from the recorded video list.
- Click Copy "file name".

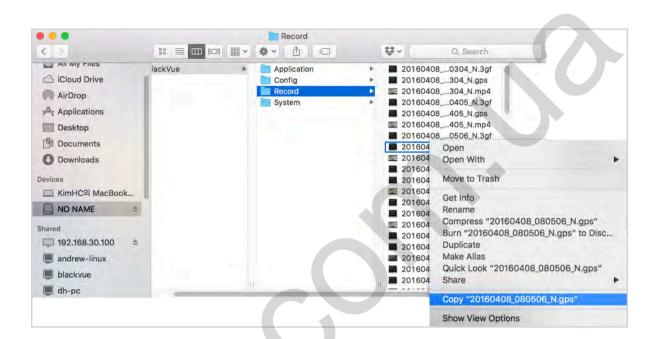

## Tips for optimal performance



## Formatting the microSD card




#### **Caution**

• Back up necessary video files before formatting the microSD card. If you format the microSD card, all the video files stored in the microSD card will be deleted including the locked event files. Your saved settings will not be affected.

# >

## Formatting the card in the BlackVue

Press and hold the Wi-Fi button for 5 seconds and once voice instructions start, release the button. Then press and hold again for 5 seconds to format the microSD card.

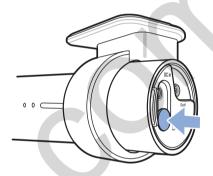


# Format using BlackVue Viewer (Windows)


- 1 Insert the microSD card into the microSD card reader and connect the reader to your computer.
- 2 Download BlackVue Viewer (Windows) from <u>www.blackvue.com</u> > Support > Downloads and install it on your computer.
- 3 Launch the **BlackVue Viewer** that is installed on your computer.
- 4 Click the Format Format button, select the card drive and click OK.

## Format using BlackVue Viewer (macOS)

- Insert the microSD card into the microSD card reader and connect the reader to your computer.
- Download BlackVue Viewer (Mac) from www.blackvue.com > Support > Downloads and install it on your computer.
- Launch the **BlackVue Viewer** that is installed on your computer.
- Click the 🐻 Format button and select the microSD card from the list of drives in the left frame.

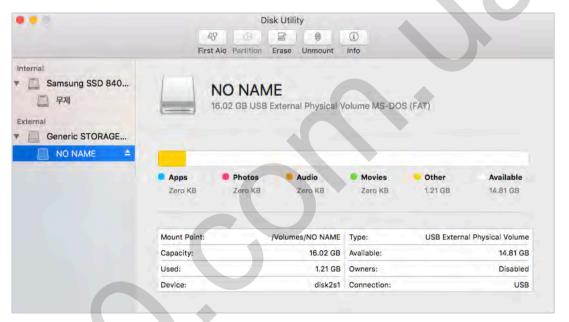

5 After selecting your microSD card select the Erase tab in the main window.

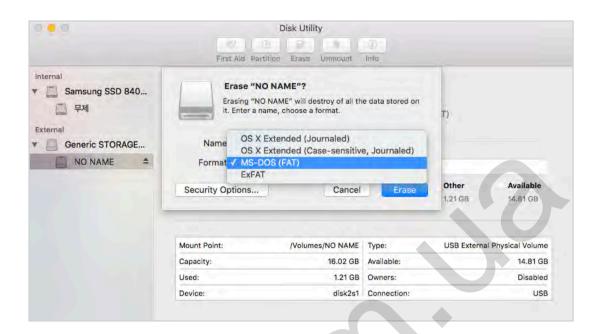

6 Select "MS-DOS (FAT)" from the Volume Format drop-down menu and click Erase.



- Formatting the microSD card once a month is recommended.
- Format the microSD card if the recorded video quality appears to be poor.
- Only use official BlackVue microSD cards. Other cards may have compatibility issues. PittaSoft Co., Ltd. will not be held responsible for any problems caused by using another manufacturer's microSD card.
- For Windows users: To format the microSD card directly from "My Computer", right-click the microSD card drive and select Format. Select File system as FAT32 and Allocation unit size as 64KB then click Start. If FAT32 is not available or can't be selected, please format the microSD card using BlackVue Viewer.



## **Upgrading the firmware**

Regularly upgrade the firmware for performance improvements and updated features. Firmware updates will be made available for download at www.blackvue.com > Support > Downloads.

Your saved settings are not affected by firmware upgrade.



## **Upgrading the firmware using an iOS or Android device (Firmware Over The Air)**

<u>Click here for a step-by-step video tutorial</u>, or go to the main menu and select **Help > Video tutorials**.

Makes sure your smartphone has a stable internet connection.

- Open the BlackVue app
- Tap and select **Firmware download**.
- Select your dashcam model and the firmware language and tap **OK**.

## Note

- Please select the firmware language currently installed in your dashcam. Once upgrade is completed, you can change the firmware language from dashcam settings as described on page 70 or 73.
- Check the firmware version and release notes and tap **OK** to start downloading.
- After the download completes tap **OK** to be taken back to the home screen.
  - Make sure your BlackVue dashcam is on and nearby.

6 Go to your smartphone's **Settings** then select **Wi-Fi**, and make sure Wi-Fi is turned on.



- Choose your BlackVue dashcam from the network list. The dashcam's default SSID begins with its model number (e.g. BlackVue\*\*\*-\*\*\*\*).
- **8** Enter the password and tap join.
  - \* The default Wi-Fi SSID and password are labeled on the dashcam. To find them, unplug the cables and remove the front camera from its mount.

Open the BlackVue app. Select **BLACKVUE WI-FI** > **(\*\*)** > **Firmware upgrade**.



## Note


- The firmware version currently installed on the microSD card is shown first. Below it, the firmware version you downloaded in step 4 is shown.
- **10** Tap **OK** to apply the firmware upgrade.
- The dashcam's firmware will be upgraded this may take a few minutes. The dashcam needs to reboot to complete the firmware upgrade.




## Upgrading the firmware using a computer (Windows or Mac)

Keep your BlackVue dashcam updated by upgrading the firmware to the latest version. Visit the BlackVue website (<u>www.blackvue.com</u>) to check for any new firmware releases for your BlackVue dashcam model.

- 1 Insert the microSD card into the microSD card reader.
- Connect the microSD card reader to a computer.
- 3 Launch BlackVue Viewer and click on the About i button.
  - For Mac users, click **BlackVue Viewer** and select About BlackVue from the menu.
- 4 Check the current firmware version of your BlackVue dashcam and proceed only if your version is not the latest one.

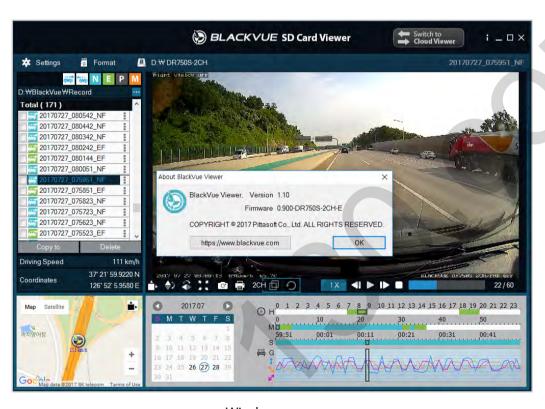


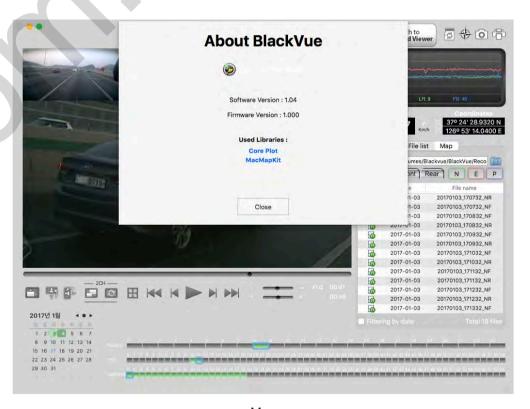

Windows

- 5 Format the microSD card. See "Formatting the microSD card" on page 44.
- Go to the BlackVue website (<u>www.blackvue.com</u> > Support > Download) and download the latest firmware for your BlackVue dashcam model in zip format.

Unzip the downloaded file and copy the BlackVue folder to the microSD card.

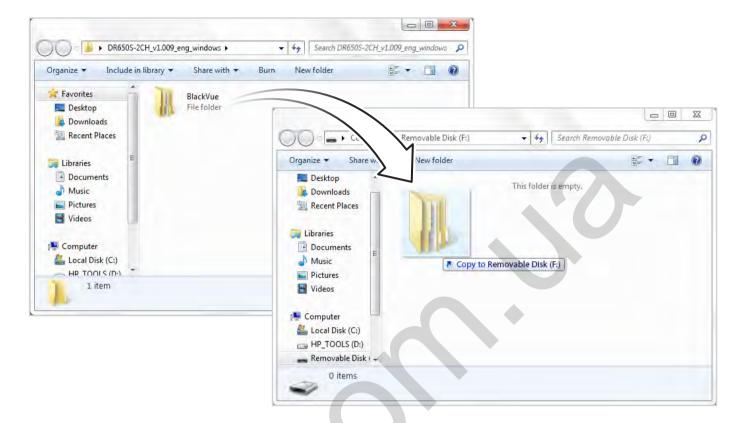

Insert the microSD card into the dashcam and connect the power to initiate the firmware upgrade. Make sure the power remains on until the upgrade is completed. Any power interruption may prevent the firmware upgrade from completing, resulting in malfunction.

## **Note**

- Do not insert or remove the microSD card when the dashcam is turned on. Doing so may damage the data and cause a malfunction of the microSD card.
- Your saved settings are not affected by firmware upgrade.
- The firmware is upgraded to the previously saved language. If you want to change it, please refer to page 70 or 73.

## Changing settings using your smartphone (Android/iOS)




"Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi (for details see "Opening video files" on page 18).

- **1** Go to your smartphone's **Settings** > **Wi-Fi** and connect to your dashcam.
- 2 Open the BlackVue app. Select **BLACKVUE WI-FI** > 🗱 to access the Firmware settings menu.
- 3 After making any changes, go back to the Firmware settings menu, tap **<** and tap **Save and close**.


### **!** Caution

• Please backup necessary recordings before changing **time**, **video resolution**, **image quality** or **video segment length** settings. If any of the aforementioned settings are changed and saved, the dashcam will format the microSD card and delete all recordings stored on the card including locked event files in order to ensure optimal performance.



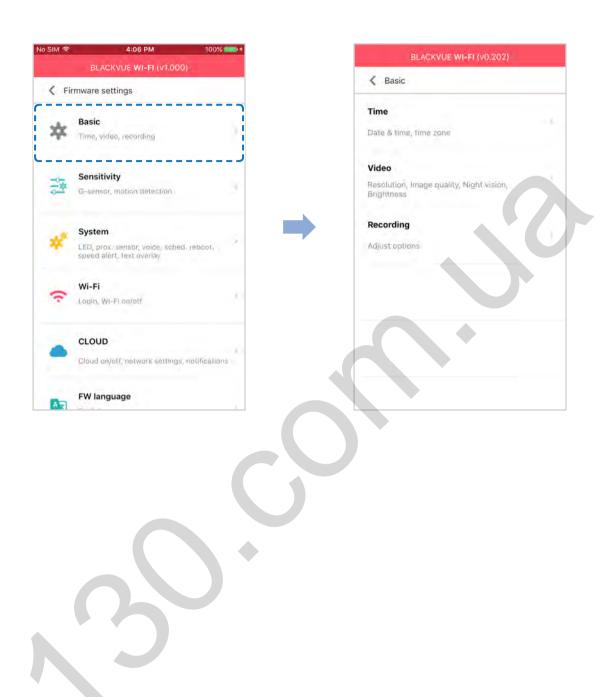

## Time settings

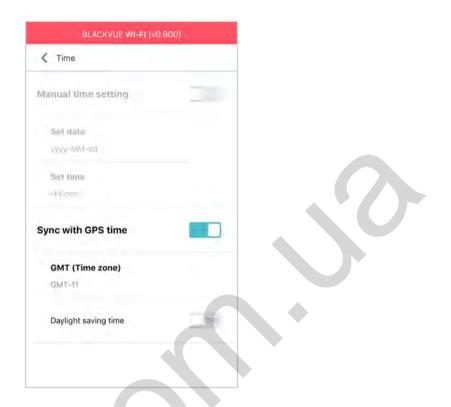

Select your time zone to auto-sync with GPS time or you can set the time and date manually after enabling Manual time setting.



• The factory setting is GMT -11.

Some examples of GMT time offsets are:


- GMT-7: Los Angeles
- GMT-4: New York
- GMT+0: London
- GMT+1: Paris
- GMT+3: Moscow
- GMT+8: Singapore
- GMT+9: Seoul
- GMT+10: Sydney

If you are unsure of your GMT offset please look up your city on https://greenwichmeantime.com/

- \* Selecting **Daylight saving time** will advance the clock by one hour.
- When setting the time manually, please set to the expected time you will use the BlackVue (not the present time).



## **Video settings**

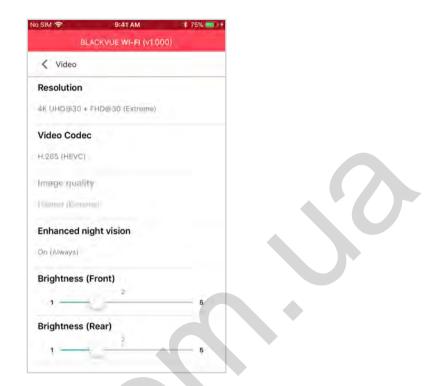

#### Resolution

Select the resolution and frame rate. For example, "FHD@30 + FHD@30" means the front camera records Full HD video at 30 frames per second, and the rear camera records Full HD video at 30 frames per second.

## Note

- The playback of 4K UHD resolution and/or H.265 coded videos depends on your device's hardware and software. Older devices may not support 4K UHD or H.265 video playback. If you encounter issues please check your device's video playback capabilities.
- At "4K UHD@30 (Extreme) + FHD@30" resolution, the image quality is automatically set to Highest (Extreme) and Video segment length to 1 min. These settings can not be changed.
- Frame rate may vary during Wi-Fi streaming.

#### Video Codec

Choose between H.265 (HEVC) and H.264 (AVC).

- H.265 (HEVC) is recommended, particularly for 4K UHD resolution recording. In comparison to AVC, HEVC offers about double the data compression ratio at the same level of video quality. However, older devices may not support HEVC video playback.
- H.264 (AVC) can be chosen for compatibility with older desktop and mobile devices.

#### **Image quality**

At "4K UHD (Extreme) + FHD" resolution the image quality is fixed to Highest (Extreme) (25 Mbit/s + 10 Mbit/s). At other resolution settings you can adjust the recording image quality (bit rate). Choose between:

- Highest (Front: 12 Mbit/s, Rear: 10 Mbit/s)
- High (Front: 10 Mbit/s, Rear: 8 Mbit/s)
- Normal (Front: 8 Mbit/s, Rear: 6 Mbit/s)

These are the maximum bit rates when the resolution is set to "4K UHD@30 + FHD@30".

Increasing the image quality will increase the size of the video files. Loading and copying time will increase accordingly. If your phone does not support video streaming at the 'highest' image quality setting, please copy the recording to your phone and play from internal memory. Alternatively, if you lower the image quality setting to 'high' you will be able to stream new recordings.

#### **Enhanced night vision**

The dashcam has an intrinsic night vision feature. If you want to enhance it, enable Enhanced night vision.


#### **Brightness (Front)**


You can adjust the recording brightness level of the front camera.

#### **Brightness (Rear)**

You can adjust the recording brightness level of the rear camera.

## **Recording settings**

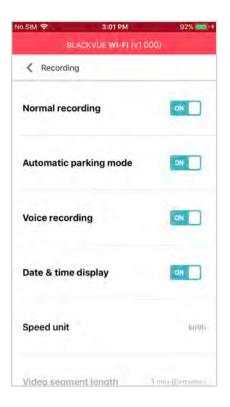

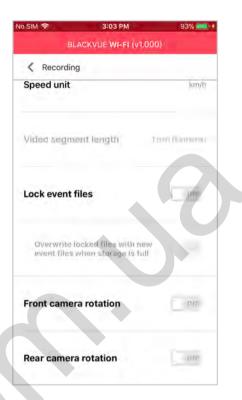

## **Normal recording**

When turned off the dashcam does not record in normal mode.

## Automatic parking mode

If enabled, the dashcam switches from normal mode to parking mode when the vehicle is stationary for 5 minutes.

#### **Voice recording**

When turned off the dashcam does not record audio.

#### Date & time display

Turn on/off the date and time display on videos.

#### Speed unit

Select km/h, MPH, or turn off.

#### Video segment length

Choose between 1, 2 or 3 minute video segment lengths.

#### Lock event files

Turning on this option will lock the following recording types and stop them from being overwritten by newer recordings:

- Impact event recordings during normal and parking mode (E); and
- Manual recordings (M).

A maximum of 50 files can be locked. Once this limit is reached, to lock new recordings please review locked files on the microSD card and free up space, or enable 'Overwrite locked files with new event files when storage is full' to allow the oldest locked files to be overwritten.

#### Front camera rotation

If you installed the front camera in a flipped position, use this setting to rotate the front camera image 180°.


#### Rear camera rotation


If you installed the rear camera in a flipped position, use this setting to rotate the rear camera image 180°.

# **Sensitivity settings**



## G-Sensor (Normal mode) / G-Sensor (Parking mode)

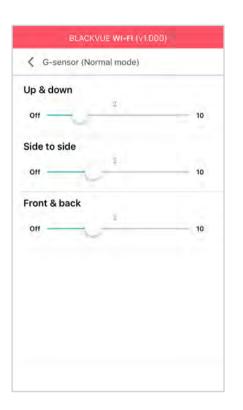

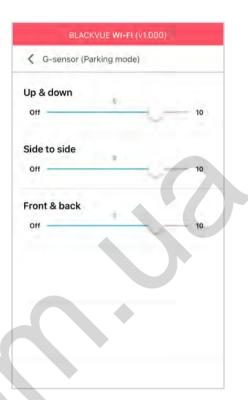

The G-sensor measures the movement of your vehicle through 3 axes – up and down, side to side, and front and back. When the G-sensor detects significant or sudden movement (such as an impact or collision) it will trigger an event recording. You can adjust the sensitivity so minor incidents and bumps don't trigger an event recording. To turn off event recordings by impact detection set the G-sensor sensitivity to off.


## **Motion detection (Parking mode)**



In parking mode the dashcam continuously buffers video and saves a parking recording when motion is detected in the dashcam's field of view.

You can adjust the sensitivity of the motion detection so minor motion caused by wind or rain doesn't trigger a recording. Please take into account your vehicle's surroundings when adjusting the sensitivity.

# **System settings**

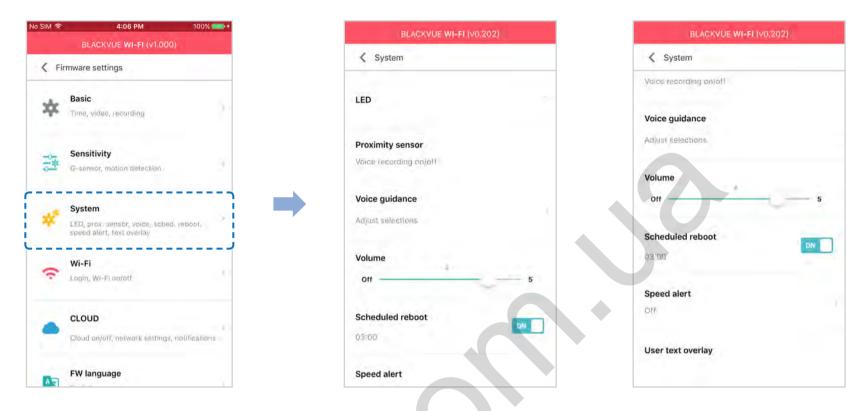

- LED
- **Recording status**

You can turn the recording status LED on/off.

Front security (Normal mode)

You can turn the front security LED on/off for normal mode.

Front security (Parking mode)

You can turn the front security LED on/off for parking mode.

# **Rear security** You can turn the rear security LED on/off. Wi-Fi (Parking mode) You can turn the Wi-Fi LED on/off for parking mode.

## **Proximity Sensor**

You can choose the function of proximity sensor. It can be configured either for audio recording on/off feature or to trigger manual recording.

## Voice guidance

You can adjust the voice guidance (announcements) you want to hear.

## Impact detected in parking mode

Notifies when exiting parking mode if an impact had been detected during parking mode, however, it ignores any impact detected within three minutes before exiting parking mode.

## **Volume**

You can adjust the volume of the voice guidance (announcements).

## **Scheduled Reboot**

The dashcam reboots automatically once-a-day if in parking mode at the set time for improved stability. If the dashcam is recording at the set time, the scheduled reboot is skipped.

You can enable/disable and change the time for scheduled rebooting. Default time is 03:00 am.

## **Speed alert**

Set a speed limit (up to 300 km/h or 200 MPH) for the speed alert. When the vehicle exceeds the specified speed limit, the dashcam beeps and switches to event recording. After saving one event recording file the dashcam switches back to normal mode recording.

## **User text overlay**

You can create a user text overlay of up to 20 characters using a combination of English letters (A - Z, a - z), numbers (0 - 9), and symbols (;;'/+-\_()\$#). The text is overlaid in the top-left corner of the recorded videos.

# **Wi-Fi settings**



## **Login credentials**

You can change the dashcam's SSID and Wi-Fi login password.

## Wi-Fi auto turn on & off


When the Cloud service is enabled the Wi-Fi auto turn on/off settings cannot be adjusted. Wi-Fi will automatically switch on when you turn on the dashcam and remain on.

If you disable the Cloud service, you will be able to adjust the Wi-Fi auto turn on/off setting.

	ON	OFF
Wi-Fi auto turn on	Wi-Fi turns on when the dashcam turns on.	Wi-Fi does not turn on when the dashcam turns on.
Wi-Fi auto turn off	Wi-Fi turns off if it is inactive for 10 minutes.	Wi-Fi does not turn off automatically.

You can also press the physical Wi-Fi / Format button on the dashcam to manually switch Wi-Fi on/off.

# **Cloud settings**

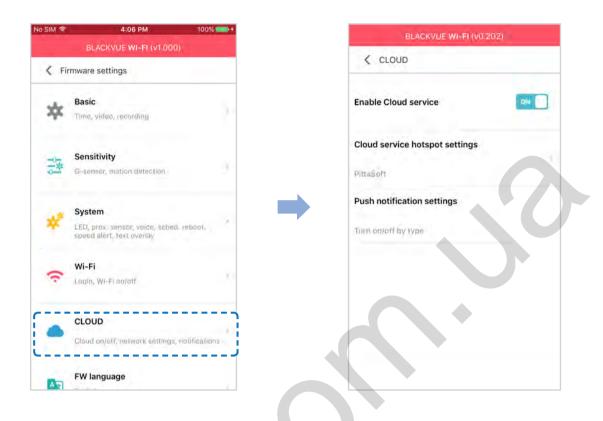

## **Enable Cloud service**

Turn on to use the Cloud service. If you don't use the Cloud service you can turn it off.


## **Cloud service hotspot settings**



Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work). Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots.


Your BlackVue will try to connect to hotspot 1 first. If it cannot connect to hotspot 1, it will then try to connect to hotspot 2, and then hotspot 3.

## **Push notification settings**

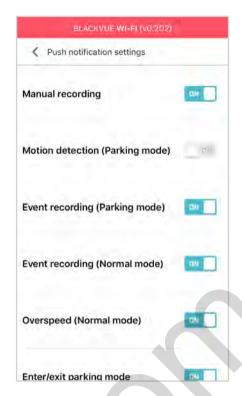


You can customize when you want to receive push notifications.

# **FW Language**

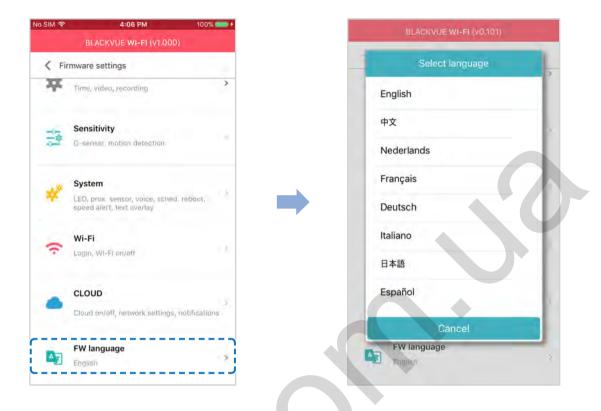

You can change the Firmware language of your dashcam.

## **Changing settings using your computer (Windows/Mac)**

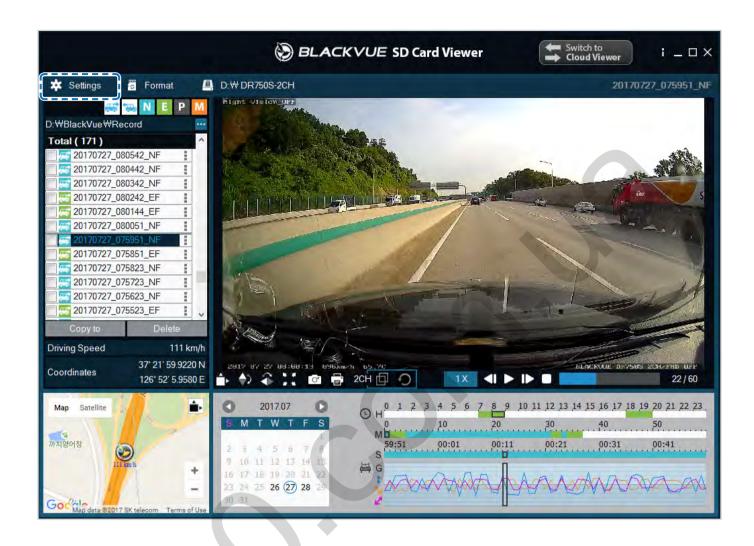

Click on the Settings Settings button (Windows) or the BlackVue Viewer menu (mac OS) to open the BlackVue settings panel. You will be able to change most of the BlackVue settings to customize its operation.

# **BlackVue Viewer settings**



## Select language

Select your preferred language for the BlackVue Viewer interface from the dropdown list.

### Speed unit on map

Change the speed unit displayed on the map.

### Select map service

Change the mapping service used.

### Use video accelerator

If you experience synchronization issues when playing front and rear recordings at the same time, we recommend you enable the video accelerator.

## **Firmware settings**

Select your preferred language for the firmware from the FW language dropdown list. The audio announcements by the dashcam will be in the selected language.



#### **Caution**

• Please backup necessary recordings before changing time, video resolution, image quality or video segment length settings. If any of the aforementioned settings are changed and saved, the dashcam will format the microSD card and delete all recordings stored on the card including locked event files in order to ensure optimal performance.

- Basic settings
- Time settings

Select your time zone to auto-sync with GPS time or you can set the time and date manually after enabling Manual time setting.

## Note

- The factory setting is GMT -11.
  - Some examples of GMT time offsets are:
  - GMT-7: Los Angeles
  - GMT-4: New York
  - GMT+0: London
  - GMT+1: Paris
  - GMT+3: Moscow
  - GMT+8: Singapore
  - GMT+9: Seoul
  - GMT+10: Sydney

If you are unsure of your GMT offset please look up your city on https://greenwichmeantime.com/

- \* Selecting **Daylight saving time** will advance the clock by one hour.
- When setting the time manually, please set to the expected time you will use the BlackVue (not the present time).

#### **Video settings**

#### Resolution

Select the resolution and frame rate. For example, "FHD@30 + FHD@30" means the front camera records Full HD video at 30 frames per second, and the rear camera records Full HD video at 30 frames per second.

## **■** Note

- The playback of 4K UHD resolution and/or H.265 coded videos depends on your computer's hardware and software. Older computers may not support 4K UHD or H.265 video playback. If you encounter issues please check your computer's video playback capabilities.
- At "4K UHD@30 (Extreme) + FHD@30" resolution, the image quality is automatically set to Highest (Extreme) and Video segment length to 1 min. These settings can not be changed.
- Frame rate may vary during Wi-Fi streaming.

#### Video Codec

Choose between H.265 (HEVC) and H.264 (AVC).

- H.265 (HEVC) is recommended, particularly for 4K UHD resolution recording. In comparison to AVC, HEVC offers about double the data compression ratio at the same level of video quality. However, older devices may not support HEVC video playback.
- H.264 (AVC) can be chosen for compatibility with older desktop and mobile devices.

#### - Image quality

At "4K UHD (Extreme) + FHD" resolution the image quality is fixed to Highest (Extreme) (25 Mbit/s + 10 Mbit/s). At other resolution settings you can adjust the recording image quality (bit rate). Choose between:

- Highest (Front: 12 Mbit/s, Rear: 10 Mbit/s)
- High (Front: 10 Mbit/s, Rear: 8 Mbit/s)
- Normal (Front: 8 Mbit/s, Rear: 6 Mbit/s)

These are the maximum bit rates when the resolution is set to "4K UHD@30 + FHD@30".

Increasing the image quality will increase the size of the video files. Loading and copying time will increase accordingly.

#### - Enhanced night vision

The dashcam has an intrinsic night vision feature. If you want to enhance it, enable Enhanced night vision.

#### - Brightness (Front)

You can adjust the recording brightness level of the front camera.

### - Brightness (Rear)

You can adjust the recording brightness level of the rear camera.

### **Recording settings**

#### - Normal recording

When turned off the dashcam does not record in normal mode.

#### - Automatic parking mode

If enabled, the dashcam switches from normal mode to parking mode when the vehicle is stationary for 5 minutes.

### - Voice recording

When turned off the dashcam does not record audio.

#### - Date & time display

Turn on/off the date and time display on videos.

#### - Speed unit

Select km/h, MPH, or turn off.

#### - Video segment length

Choose between 1, 2 or 3 minute video segment lengths.

#### Lock event files

Turning on this option will lock the following recording types and stop them from being overwritten by newer recordings:

- Impact event recordings during normal and parking mode (E); and
- Manual recordings (M).

A maximum of 50 files can be locked. Once this limit is reached, to lock new recordings please review locked files on the microSD card and free up space, or enable 'Overwrite locked files with new event files when storage is full' to allow the oldest locked files to be overwritten.


#### - Front camera rotation

If you installed the front camera in a flipped position, use this setting to rotate the front camera image 180°.

#### - Rear camera rotation

If you installed the rear camera in a flipped position, use this setting to rotate the rear camera image 180°.

### **Sensitivity settings**

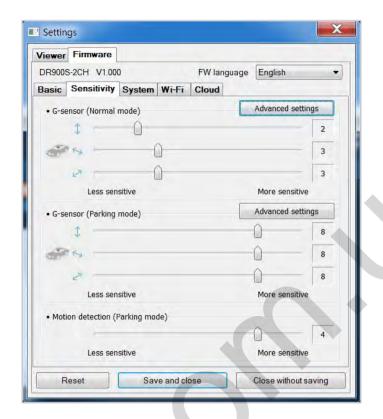

#### G-Sensor (Normal mode) / G-Sensor (Parking mode)


The G-sensor measures the movement of your vehicle through 3 axes – up and down, side to side, and front and back. When the G-sensor detects significant or sudden movement (such as an impact or collision) it will trigger an event recording. You can adjust the sensitivity so minor incidents and bumps don't trigger an event recording. To turn off event recordings by impact detection set the G-sensor sensitivity to off.

#### **Motion detection (Parking mode)**

In parking mode the dashcam continuously buffers video and saves a parking recording when motion is detected in the dashcam's field of view.

You can adjust the sensitivity of the motion detection so minor motion caused by wind or rain doesn't trigger a recording. Please take into account your vehicle's surroundings when adjusting the sensitivity.

### Advanced sensitivity settings for normal and parking mode

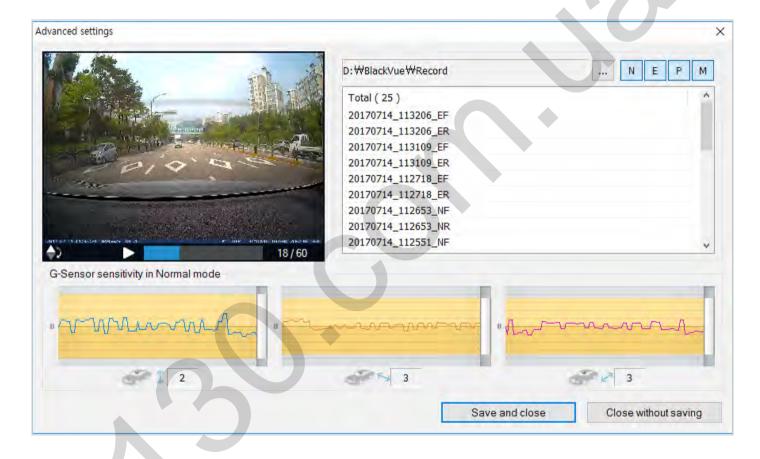

Advanced sensitivity settings allows you to fine-tune the event recording G-Sensor threshold, while watching pre-recorded G-Sensor data and video as a reference.

- 1 Click the **Advanced settings** button.
- Double click the video from the list that you want to use as a G-Sensor data reference.
- 3 Set the thresholds by adjusting the control bars next to each G-Sensor axis. Any G-Sensor data that crosses over the threshold on any of the 3 axes will trigger an Event recording.



4 Click Save and close.

### **System settings**



LED

### - Recording status

You can turn the recording status LED on/off.

#### - Front security (Normal mode)

You can turn the front security LED on/off for normal mode.

#### - Front security (Parking mode)

You can turn the front security LED on/off for parking mode.

#### - Rear security

You can turn the rear security LED on/off.

#### - Wi-Fi (Parking mode)

You can turn the Wi-Fi LED on/off for parking mode.

### **Proximity Sensor**

You can choose the function of proximity sensor. It can be configured either for audio recording on/off feature or to trigger manual recording.

### Voice guidance

You can adjust the voice guidance (announcements) you want to hear.

### - Impact detected in parking mode

Notifies when exiting parking mode if an impact had been detected during parking mode, however, it ignores any impact detected within three minutes before exiting parking mode.

#### Volume

You can adjust the volume of the voice guidance (announcements).

#### **Scheduled Reboot**

The dashcam reboots automatically once-a-day if in parking mode at the set time for improved stability. If the dashcam is recording at the set time, the scheduled reboot is skipped.

You can enable/disable and change the time for scheduled rebooting. Default time is 03:00 am.

### **Speed alert**

Set a speed limit (up to 300 km/h or 200 MPH) for the speed alert. When the vehicle exceeds the specified speed limit, the dashcam beeps and switches to event recording. After saving one event recording file the dashcam switches back to normal mode recording.

#### User text overlay

You can create a user text overlay of up to 20 characters using a combination of English letters (A - Z, a - z), numbers (0 - 9), and symbols (;;'/+-\_()\$#). The text is overlaid in the top-left corner of the recorded videos.

### Wi-Fi settings



#### **Login credentials**

You can change the dashcam's SSID and Wi-Fi login password.

### Wi-Fi settings

#### Wi-Fi auto turn on & off


When the Cloud service is enabled the Wi-Fi auto turn on/off settings cannot be adjusted. Wi-Fi will automatically switch on when you turn on the dashcam and remain on.

If you disable the Cloud service, you will be able to adjust the Wi-Fi auto turn on/off setting.

	ON	OFF	
Wi-Fi auto turn on	Wi-Fi turns on when the dashcam turns on.	Wi-Fi does not turn on when the dashcam turns on.	
Wi-Fi auto turn off	Wi-Fi turns off if it is inactive for 10 minutes.	Wi-Fi does not turn off automatically.	

You can also press the physical Wi-Fi/Format button on the dascam to manually switch Wi-Fi on/off.

## **Cloud settings**

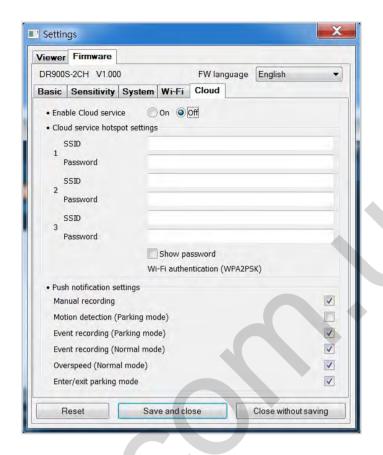

#### **Enable Cloud service**

Turn on to use the Cloud service. If you don't use the Cloud service you can turn it off.

### **Cloud service hotspot settings**

Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work). Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots.

Your BlackVue will try to connect to hotspot 1 first. If it cannot connect to hotspot 1, it will then try to connect to hotspot 2, and then hotspot 3.

### **Push notification settings**

You can customize when you want to receive push notifications.

### Applying the settings

You can automatically apply the configuration by inserting the microSD card into the BlackVue dashcam and turning it on. Configure the settings before using the dashcam.

To reset the settings in the current tab to their defaults press the **Reset** button at the bottom of the settings panel.

### **About the Cloud Service**

Using a mobile Wi-Fi hotspot or a car-embedded wireless internet connection you can connect your dashcam to the internet and take advantage of the following features in the BlackVue app and BlackVue Cloud Viewer:

**Live View** – Watch your dashcam's live video feed.

**Push notifications** – Be notified on your smartphone when something happens to your car.

**GPS tracking** – See in real-time where your car is and track your car's route and speed.

**Two-way voice communication** – Initiate voice chat from your smartphone to your dashcam.

**Video backup** – Backup video recordings to the Cloud or your smartphone's storage.

**Auto-upload** – Automatically uploads event recordings to the Cloud

**Video playback** – Watch recorded videos stored on your dashcam or in the Cloud on your smartphone anywhere, anytime.



## **Connect to BLACKVUE CLOUD (Optional)**

If you don't have a mobile Wi-Fi hotspot, or if you don't want to use the BLACKVUE CLOUD service, you can skip this step.

If you have a mobile Wi-Fi hotspot (also known as a portable Wi-Fi router), a car-embedded wireless internet network or a Wi-Fi network near your car, you can use the BlackVue app to connect to BLACKVUE CLOUD and see in real-time where your car is and the dashcam's live video feed.

For more information about using the BlackVue app, please download the BlackVue app Manual from www.blackvue.com > Support > Downloads.

#### Create an account

- (i) Open the BlackVue app.
- (ii) Tap the button in the top-left corner and select **Create account**.
- (iii) Enter your email address and choose a password. Re-enter your password and press **Next**.
- (iv) After reading the Terms & Policies, check the boxes and press the **Create account** button to continue.
- (v) You will receive an e-mail. Click the link in the email to finish creating your account.

### Register your dashcam with your account

- (i) In the BlackVue app select **BLACKVUE CLOUD** and login to your account.
- (ii) Tap **Yes** to enable push notifications (this setting can be adjusted at any time later).
- (iii) Select Register new camera.
- (iv) Register your camera using one of the following methods:


**QR Code**: Press **Scan QR Code** and line up the QR Code on your smartphone's screen.

\*The QR code can be found labeled on the front camera when you remove it from its mount.

or

Manual registration: Enter your camera's Serial number and Cloud code and press Register.

(v) The app will ask for your permission to access your dashcam's GPS data. If you allow access the app will be able to show you your dashcam's location and speed. If you don't allow access you won't be able to see your dashcam's location and speed (you can allow access later in Privacy settings).

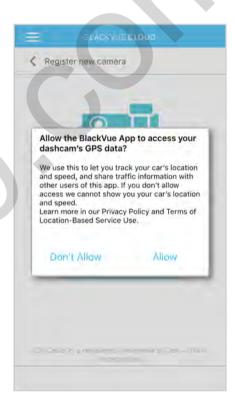


- Connect your BlackVue dashcam to a Wi-Fi hotspot for Cloud connectivity <u>Click here for a step-by-step video tutorial</u>, or go to the main menu and select **Help** > **Video tutorials**.
  - Make sure your BlackVue dashcam and mobile Wi-Fi hotspot are on.
  - (ii) "Pair" your smartphone with the BlackVue dashcam via direct Wi-Fi.
  - (iii) Open the BlackVue app. Select **BLACKVUE WI-FI** > **(\*)** > **Cloud settings**.



(iv) Ensure **Enable Cloud service** is on. Select **Cloud service hotspot settings**.


(v) Choose your Wi-Fi hotspot from the list and enter the password. Tap 2 and 3 to add settings for additional hotspots. Once done, tap **OK**.

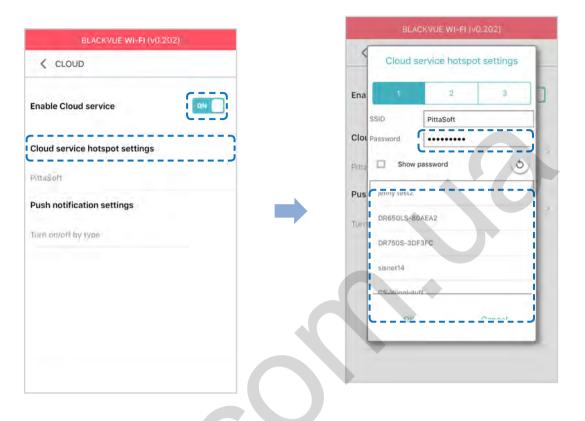



• Up to 3 Wi-Fi hotspot SSIDs can be saved (e.g. home, portable hotspot and work).

(vi) Go back to the Firmware settings menu, tap < and tap Save and close.

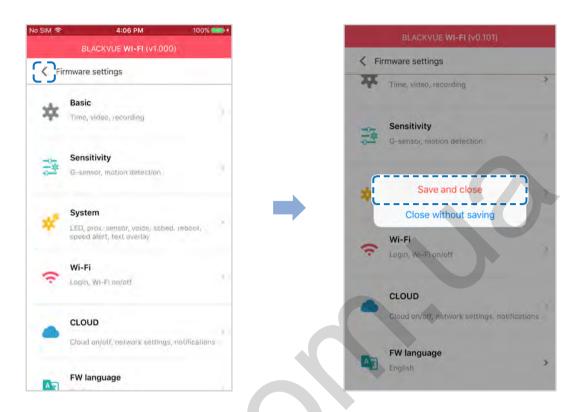

After rebooting, your dashcam will automatically connect to the Wi-Fi hotspot.

Select BLACKVUE CLOUD from the main screen to access all of the Cloud features.


## Note

- You can also change the dashcam settings through BLACKVUE CLOUD by tapping next to your camera name and selecting Camera settings.
- For more information about using the BlackVue app, please refer to the manual by going to the main menu and selecting **Help** > App manual.



## **Parking mode hardwiring kit (Optional)**

The BlackVue dashcam will turn off when the engine is turned off. To record video while the engine is turned off, a hardwiring kit (such as the Power Magic Pro) is required. The Power Magic Pro powers your dashcam when the engine is off by hardwiring it to the automotive battery. A low voltage power cut-off function and a parking mode timer protect your vehicle's battery from discharge.

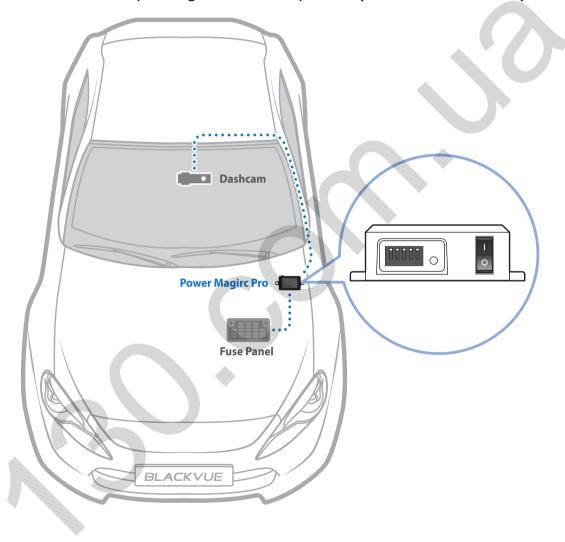



## **Parking mode battery pack (Optional)**

To record video when the engine is turned off without using the vehicle's battery, you can install a parking mode battery pack. The Power Magic Battery Pack B-112 powers a single dashcam for up to 12 hours after 1 hour of rapid charging. When the engine is off the battery pack powers the dashcam. When the engine is on the dashcam is powered directly from the vehicle's battery and the battery pack charges.



### **Troubleshooting**



## **Changing / resetting direct Wi-Fi SSID and password**

The dashcam's Wi-Fi SSID and password can be changed/reset using on of the following methods.



## **On-device Wi-Fi SSID and password reset**


Press and hold the Wi-Fi button on the dashcam, for 5 seconds and once voice instructions start, release the button. Then press once again to reset the Wi-Fi SSID and password to default.

\*The default Wi-Fi SSID and password can be found labeled on the front camera when you remove it from its mount.




- Login to the BlackVue app.
- Select **BLACKVUE CLOUD**.
- Note
  - You can access FW settings Over the Cloud only when the dashcam is ON and connected to the internet (Cloud). A blue colored icon means the dashcam is connected to the Cloud while a grey colored icon means that the dashcam is not connected to the Cloud.
- Tap next to your camera name and select Camera settings > Firmware settings > Wi-Fi > Login credentials. You can change the camera's SSID and Wi-Fi login password.



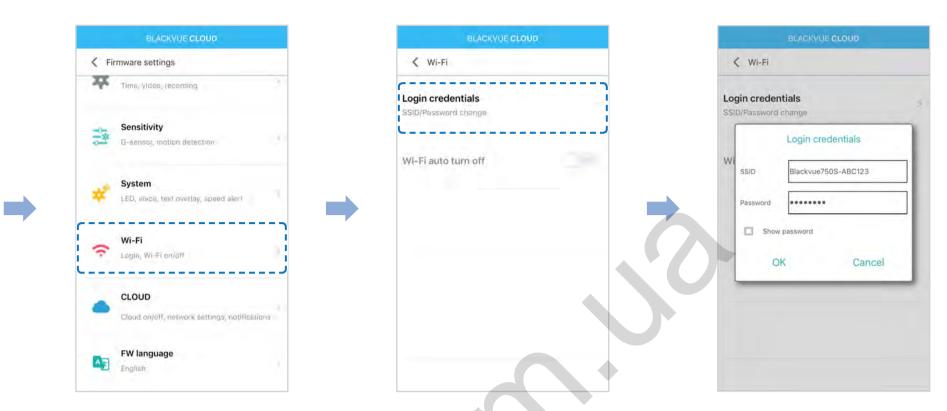

Go back to the Firmware settings menu, tap **\langle** and tap **Save and close**.

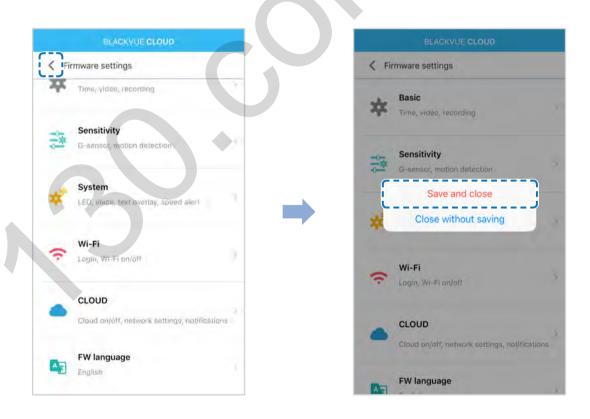

Autogoods "130"

# **Change the Wi-Fi password using BlackVue Viewer (Windows or Mac)**

- Remove the microSD card from the dashcam.
- Insert the card into the microSD card reader and connect it to a computer.
- Launch BlackVue Viewer.
  - \*You can download **BlackVue Viewer** from <u>www.blackvue.com</u> > **Support** > **Downloads** and install it on your computer.
- In BlackVue Viewer click on the \* Settings Settings button (Windows) or the BlackVue Viewer menu (macOS) to open the BlackVue settings panel.
- Click the Firmware tab, then the Wi-Fi tab and under Login credentials change the password.
- Click Save and close.

# **Product specifications**

Model Name	DR900S-2CH		
Color/Size/Weight	Front: Black / Width 118.5 mm x Height 36 mm / 91 g Rear: Black / Width 67.4 mm x Height 25 mm / 25 g		
Memory	microSD Card (16 GB / 32 GB / 64 GB / 128 GB)		
Recording Modes	Normal recording, Event recording (when impact is detected in normal and parking mode), Manual recording and Parking recording (when motion is detected)  * For Parking mode recording, a Parking Mode Battery Pack (Power Magic Battery Pack) or a Parking Mode Hardwiring Kit (Power Magic Pro) is required.		
Camera	Front: 8-Megapixel CMOS Sensor Rear: Sony STARVIS™ CMOS Sensor (Approx. 2.1 megapixels)		
Viewing Angle	Front: Diagonal 162°, Horizontal 136°, Vertical 77° Rear: Diagonal 139°, Horizontal 116°, Vertical 61°		
Resolution/Frame Rate KUHD (3840x2160) @30fps (Extreme) — Full HD (1920x1080) @30fps 4K UHD (3840x2160) @30fps — Full HD (1920x1080) @30fps Full HD (1920x1080) @60fps — Full HD (1920x1080) @30fps Full HD (1920x1080) @30fps — Full HD (1920x1080) @30fps * Frame rate may vary during Wi-Fi streaming.			
Video Codec	H.265 (HEVC), H.264 (AVC)		
Image Quality	Highest, High, Normal		
Video Compression Mode	MP4		
Wi-Fi	Built-in (802.11n 2.4GHz / 802.11ac 5GHz Dual band)		
GPS	Built-in		
Microphone	Built-in		
Speaker (Voice Guidance)	Built-in		

<sup>\*</sup> STARVIS is a trademark of Sony Corporation.

LED Indicators	Front: Recording LED, GPS LED, Wi-Fi LED, Front Security LED		
LED IIIUICALOIS	Rear: Rear Security LED		
Button	<ul> <li>Wi-Fi / Format button:</li> <li>* Press once to turn on/off Wi-Fi.</li> <li>* Press and hold for 5 seconds and once voice commands start, release the button. Then press once again to reset the Wi-Fi SSID and password or press and hold for 5 seconds to format the microSD card.</li> <li>Proximity sensor:</li> <li>Touching the proximity sensor turns on/off audio recording or triggers manual recording depending on the firmware settings.</li> </ul>		
Sensor	3-Axis Acceleration Sensor		
Backup Battery	Built-in super capacitor		
Input Power	DC 12 V - 24 V (DC Plug: ⊝ ⊕ (Ø3.5 x Ø1.35), MAX 1 A/12 V)		
Power Consumption	Avg. 380 mA (4.56 W at 12 V, when GPS is On and Wi-Fi is Off) Avg. 360 mA (4.32 W at 12 V, when GPS and Wi-Fi are Off) * Actual power consumption may vary depending on use conditions and environment.		
Operation Temperature	-20 °C - 70 °C (-4 °F - 158 °F)		
Storage Temperature	-20 °C - 70 °C (-4 °F - 158 °F)		
High Temperature Cut-Off	Approx. 75 °C (167 °F)		
Certifications	Front: FCC, CE, RoHS, Telec, WEEE, IC Rear: FCC, CE, RoHS, WEEE		
Software	BlackVue Viewer  * Windows XP or higher and Mac Yosemite OS X (10.10) or higher		
Application	BlackVue Application (Android 4.4.2 or higher, iOS 9.0 or higher)		
Other Features	Adaptive Format Free File Management System		

## **Recording time**

Your dashcam will automatically turn on and start recording when it is connected to a power source.

Memory Capacity	Image Quality	Resolution (Front + Rear)			
		4K UHD @ 30 fps (Extreme) + Full HD @ 30fps	4K UHD @ 30 fps + Full HD @ 30fps	Full HD @ 60 fps + Full HD @ 30fps	Full HD @ 30 fps + Full HD @ 30fps
16GB	Highest (Extreme)	55 MIN	X	х	X
	Highest	Х	1 HR 20 MIN	1 HR 20 MIN	1 HR 20 MIN
	High	Х	1 HR 40 MIN	1 HR 40 MIN	1 HR 40 MIN
	Normal	X	2 HR 10 MIN	2 HR 10 MIN	2 HR 10 MIN
32GB	Highest (Extreme)	1 HR 50 MIN	Х	х	Х
	Highest	X	2 HR 40 MIN	2 HR 40 MIN	2 HR 40 MIN
	High	X	3 HR 20 MIN	3 HR 20 MIN	3 HR 20 MIN
	Normal	X	4 HR 20 MIN	4 HR 20 MIN	4 HR 20 MIN
64GB	Highest (Extreme)	3 HR 40 MIN	Х	Х	Х
	Highest	Х	5 HR 20 MIN	5 HR 20 MIN	5 HR 20 MIN
	High	х	6 HR 40 MIN	6 HR 40 MIN	6 HR 40 MIN
	Normal	X	8 HR 40 MIN	8 HR 40 MIN	8 HR 40 MIN
128GB	Highest (Extreme)	7 HR 20 MIN	X	X	X
	Highest	X	10 HR 40 MIN	10 HR 40 MIN	10 HR 40 MIN
	High	х	13 HR 20 MIN	13 HR 20 MIN	13 HR 20 MIN
	Normal	Х	17 HR 20 MIN	17 HR 20 MIN	17 HR 20 MIN
Bitrate (Mbps) Front + Rear	Highest (Extreme)	25 + 10	X	Х	Х
	Highest	X	12 + 10	12 + 10	12 + 10
	High	х	10 + 8	10 + 8	10 + 8
	Normal	Х	8+6	8+6	8+6

The recording times specified above are the same for both video codecs (H.264/H.265).



- If the microSD card is full, older files are deleted first to make space for newly-recorded videos.
- Total recording time is different depending on the memory capacity of the microSD card and the image quality of the video.

#### **100 BLACKVUE**

### Disposal and recycling information

### **Disposal of your BlackVue dashcam**



- 1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Contact local authorities to learn about disposal and recycling options available in your area.
- 2. The correct disposal of your BlackVue dashcam will help prevent potential negative consequences for the environment and human health.
- 3. For more detailed information about disposal of your BlackVue dashcam, please contact your city office, waste disposal service or the shop where you purchased the product.

### **Customer Support**

For customer support and firmware updates please visit www.blackvue.com

You can also email a Customer Support expert at <a href="mailto:cs@pittasoft.com">cs@pittasoft.com</a>

### **Before Requesting Service**

Please back up all important files and data before requesting service. In order to service the dashcam it may be necessary to delete all files and data from the dashcam. All servicing is provided on the basis that the user has backed up all necessary files and data before requesting service. Therefore Pittasoft Co., Ltd. will not be responsible for the loss of any files or data.

### **Copyright & Trademark**

- This instruction manual is protected by Copyright Law, and all rights to it are protected by law.
- It is prohibited to reproduce, copy, modify, or translate this instruction manual without permission.

**BLACK VUE** BlackVue is the registered trademark of Pittasoft Co., Ltd. Pittasoft Co., Ltd. reserves all rights regarding all works related to the BlackVue brand such as product design, trademarks, and product-promotional videos. It is prohibited to reproduce, copy, modify, or use related works without permission. Any violation may be penalized in accordance with the relevant regulations.





Product I Car Dashcam

Model Name I DR900S-2CH

Manufacturer I Pittasoft Co., Ltd. / South Korea

Address I 7F, BYC HIGHCITY Building A 131, Gasan Digital 1-ro, Geumcheon-gu, Seoul, Republic of Korea, 08506

Customer Support | cs@pittasoft.com

**Product Warranty** I One-Year Limited Warranty

f facebook.com/BlackVueOfficial

www.blackvue.com

Made in Korea