



PHONES

0 (800) 800 130
(050) 462 0 130
(063) 462 0 130
(067) 462 0 130

130
COM.UA

Internet store of
autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |
CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |
GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Car seats • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid • Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant




In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to choose the very particular thing. We are waiting for you at the address

<https://130.com.ua>

mifold

the Grab-and-Go Booster®

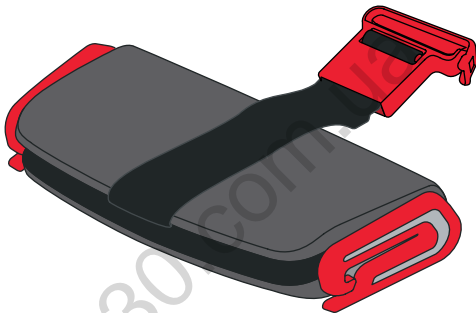

4 to 12 years

Group 2/3 (15-36kg)

Approved to ECE R44.04



P/N - 1021 Rev D



Autogoods "130"

Congratulations on buying your mifold

Grab-and-Go booster seat. mifold is the most advanced, compact, and portable booster seat ever invented. mifold is more than 10x smaller than a regular booster seat, and is just as safe*. We hope that you are delighted and satisfied with mifold. We always enjoy hearing from customers with your ideas, thoughts, feedback, pictures and videos.

You can contact us in many ways:



support@mifold.com



@mifoldBooster



www.mifold.com/contact



pinterest.com/mifold



facebook.com/mifold




instagram.com/mifold

*Safety claim based on compliance with UNECE Regulation 44/04.

User Manual Storage

It is most important that these instructions remain with the mifold Grab-and-Go booster seat at all times. Store these instructions in the slot located on the edge of the mifold Grab-and-Go booster seat.

Read and follow all instructions and information in this manual, on the product labels, and in the vehicle owner's manual for booster seat and vehicle seat belt use.

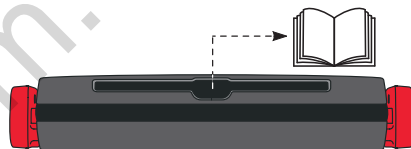

Introduction to your mifold Grab-and-Go Booster Seat


Before using this booster seat it is important to understand how to properly install your booster seat, secure your child correctly, and familiarise yourself with the features and functions of the booster seat.

It is important to take the time to read and understand these instructions fully. This is best done with the mifold Grab-and-Go booster seat in front of you.

Read all the safety warnings before using the booster seat.

mifold Grab-and-Go

Booster Seat Features

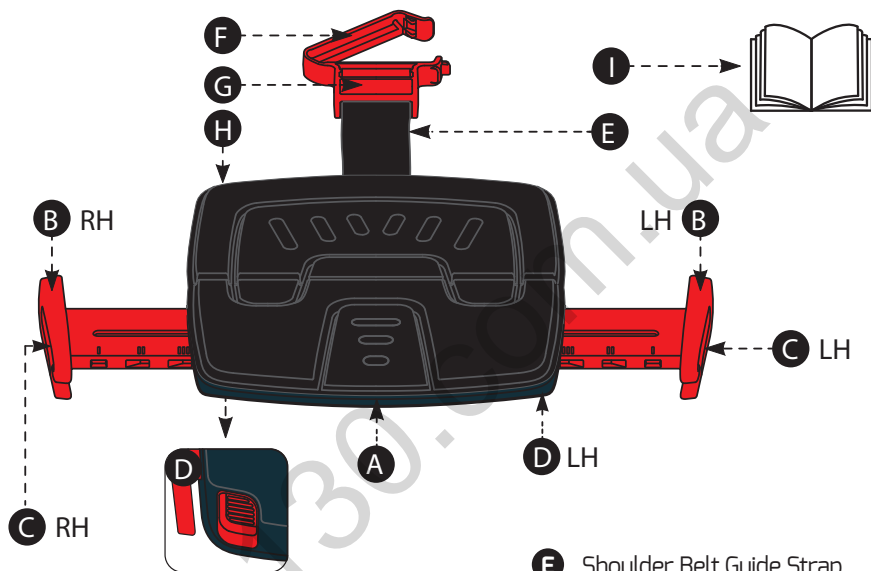



Safety Instructions



- Always give preference to using the rear seats of your vehicle even if your highway code permits the use on the front seat.
- Check your highway code as this regulation may vary according to the country.
- Check the vehicle manual for advice on fitting your car seat in the front of the vehicle.
- Airbags can cause injury. Do not use this seat on passenger seats fitted with a frontal airbag.
- Your mifold Grab-and-Go booster seat must be positioned and installed so that, under normal vehicle usage conditions, no part can become jammed under or between any moveable seat, or in the vehicle door.
- Make sure there is no loose luggage or other large objects that are likely to cause injuries in the event of an accident. These items may cause injury to other occupants. Always secure loose items.
- Shade your booster seat from sunlight to avoid hot items causing injury to your child.



Safety Instructions




- Do not modify or add to your car seat in any way without the approval of a competent authority or the manufacturer, as this will void any warranty.
- Toxic cleaning fluids can cause illness. Never use bleach, do not iron, do not machine wash and do not tumble dry as this could damage the product.
- Do not leave your child unattended while in the booster seat and in the vehicle.
- Always replace the booster seat after any accident in case of any unseen damage.
- Store your booster seat in a safe area when your child is not in the car seat. An unsecured booster seat can cause injuries in the event of a collision.
- If you are in any doubt about any part of the installation or proper use of your booster seat, contact the booster seat manufacturer.
- Failure to follow these instructions may affect your child's safety.
- Keep these instructions with the booster seat to refer to for future reference.


Install your booster seat

The seat can be used for a child approximately 4 years to 12 years, weighing 15kg – 36kg, securing the child with the adult 3 point seat belt approved to ECE R16.


Note: Your car seat is designed to fit only with a 3 point lap and diagonal seat belt and must not at any time be fitted using only a 2 point lap belt.

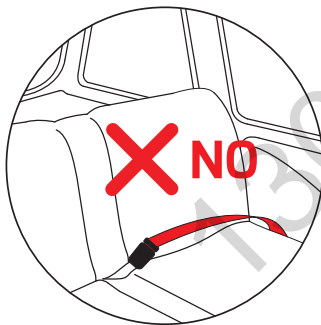


Prepare Your Booster Seat

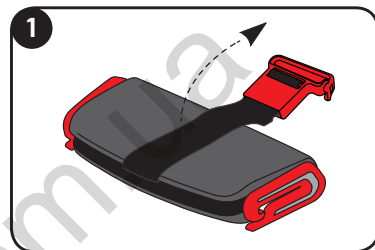


Open the booster seat and fold out the upper body.

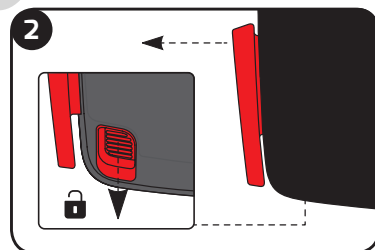

To unlock the lap belt guides, slide the Lap Belt Guide Release button forward.
To lock the guides, release the Lap Belt Guide Release button.

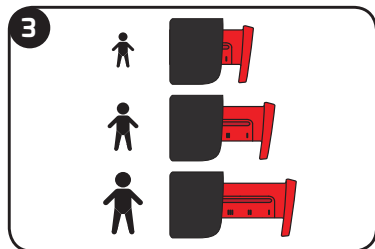

Extract the lap belt guides and position according to the chart.

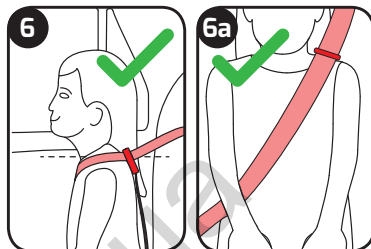

Ensure that the shoulder belt guide is positioned above and centred on your child's shoulder.




To access the shoulder belt guide strap, pull open the shoulder belt guide buckle.




To shorten or lengthen the shoulder belt guide pull the strap in the desired direction.


Install Your Booster Seat

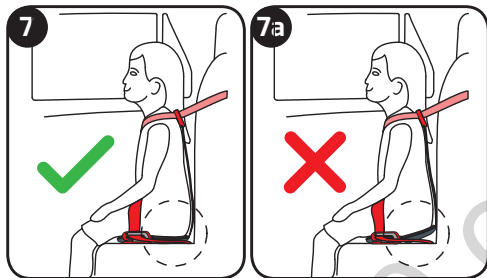



Ensure that the booster seat is laid flat and up against the back rest of the vehicle seat.

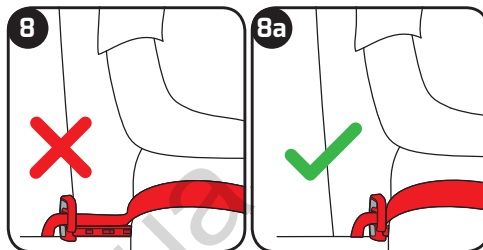


Position your child sitting upright on the booster seat and if necessary, slide lap belt guides into the position nearest to, but not touching the child's thigh. Pull out on lap belt guides to check they are locked into position.

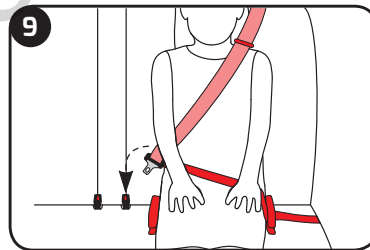

Extract the vehicle seat belt and pass it across the front of your child. Slide lap belt portion of vehicle seat belt through both lap belt guides and connect the seat belt tongue into the vehicle buckle.

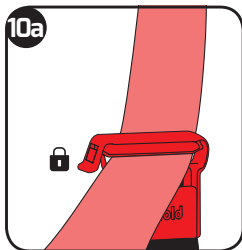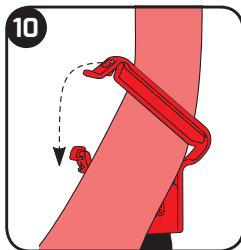


To position the shoulder belt guide, attach the shoulder belt guide to the diagonal portion of the vehicle seat belt, by opening the clip and inserting the seat belt. Then close the clip.

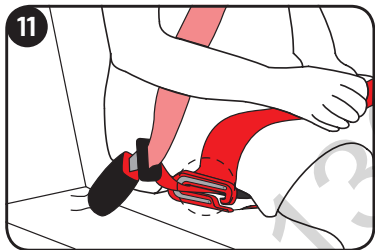

Insert the lap portion only of the vehicle seat belt through the red belt guides on each side of the booster.

WARNING! If the vehicle seat belt tongue is up against the red lap belt guide such that you cannot tighten the seat belt, this condition is unacceptable. You must use a different seat position.

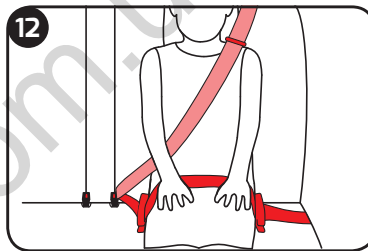

Ensure that the lap portion of the vehicle seat belt has passed through the lap belt slots on both sides of the booster seat.

13



Remove any twists or seat belt slack by pulling on the lap portion and then the diagonal portion of the adult seat belt. Ensure that the lap portion is positioned over the child's lap and supported on the child's pelvis.

Final checklist

However safe a child seat is, however well built it is, your child's safety depends on you carrying out the following checks before every journey:

- Check that the booster seat is facing forwards in the vehicle and in the direction of travel.
- Check that the vehicle seat belt is fitted correctly with the shoulder belt engaged with the shoulder belt guide, the lap strap is attached to the red lap belt guides, and the tongue is connected to the buckle.
- Check that the vehicle seat belt is not twisted or slack

IMPORTANT! Misusing your child seat will reduce the protection and safety you offer your child.

Maintenance advice

The booster seat cover is not removable. In case of light staining, clean using a damp cloth or soapy water.



Safety Warning



Toxic cleaning fluids can cause illness. Never use bleach, do not iron, do not machine wash, do not tumble dry as this could damage the cover and require replacing.

Additional information

This booster seat is not approved for use on aircraft. For more information, contact the airline.

To dispose of your booster seat safely always render the seat unusable.

IMPORTANT! Make sure the instruction book is removed from the slot before cleaning.

Notice

This booster seat is a “Universal” child restraint system. It has been approved in accordance with regulation ECE R44/04, and is suitable for general use in vehicles, and is compatible with the majority of vehicle seats.

- This child restraint is likely to fit if the vehicle manufacturer states that the vehicle approval specifies suitability for “Universal” child restraint systems.
- This restraint system is classified as “Universal” in accordance with the strictest approval criteria, whereas earlier models do not correspond to these new provisions.
- This restraint system can only be installed in vehicles with 3-point static or retractable seat belts that have been approved compliant with the UN/ECE No.16 or other equivalent standards.

If in doubt, contact the manufacturer of the restraint system.

Distributed in the U.K. by:

Whitestep Ltd.

www.whitestep.co.uk

info@whitestep.co.uk

Tel: +44 207 323 9514



support@mifold.com



[@mifoldBooster](https://twitter.com/mifoldBooster)



www.mifold.com/contact



pinterest.com/mifold



facebook.com/mifold



instagram.com/mifold

Manufactured by:

carFoldio Ltd.

Unit 2407, PO Box 6945

London, W1A 6US, England, U.K.

Tel: 0800 4714984 (from within the U.K.)

Tel: +44 207 866 2385 (International)