



PHONES

0 (800) 800 130  
(050) 462 0 130  
(063) 462 0 130  
(067) 462 0 130

130  
COM.UA

Internet store of  
autogoods



SKYPE

km-130

CAR RECEIVERS — Receivers • Media receivers and stations • Native receivers • CD/DVD changers • FM-modulators/USB adapters • Flash memory • Facia plates and adapters • Antennas • Accessories |  
 CAR AUDIO — Car audio speakers • Amplifiers • Subwoofers • Processors • Crossovers • Headphones • Accessories | TRIP COMPUTERS — Universal computers • Model computers • Accessories |  
 GPS NAVIGATORS — Portable GPS • Built-in GPS • GPS modules • GPS trackers • Antennas for GPS navigators • Accessories | VIDEO — DVR • TV sets and monitors • Car TV tuners • Cameras • Videomodules  
 • Transcoders • Car TV antennas • Accessories | SECURITY SYSTEMS — Car alarms • Bike alarms • Mechanical blockers • Immobilizers • Sensors • Accessories | OPTIC AND LIGHT — Xenon • Bixenon • Lamps  
 • LED • Stroboscopes • Optic and Headlights • Washers • Light, rain sensors • Accessories | PARKTRONICS AND MIRRORS — Rear parktronic • Front parktronic • Combined parktronic • Rear-view mirrors  
 • Accessories | HEATING AND COOLING — Seat heaters • Mirrors heaters • Screen-wipers heaters • Engine heaters • Auto-refrigerators • Air conditioning units • Accessories | TUNING — Vibro-isolation  
 • Noise-isolation • Tint films • Accessories | ACCESSORIES — Radar-detectors • Handsfree, Bluetooth • Windowlifters • Compressors • Beeps, loudspeakers • Measuring instruments • Cleaners • Carsits  
 • Miscellaneous | MOUNTING — Installation kits • Upholstery • Grilles • Tubes • Cable and wire • Tools • Miscellaneous | POWER — Batteries • Converters • Start-charging equipment • Capacitors  
 • Accessories | MARINE AUDIO AND ELECTRONICS — Marine receivers • Marine audio speakers • Marine subwoofers • Marine amplifiers • Accessories | CAR CARE PRODUCTS — Additives • Washer fluid •  
 Care accessories • Car polish • Flavors • Adhesives and sealants | LIQUID AND OIL — Motor oil • Transmission oil • Brake fluid • Antifreeze • Technical lubricant



In store "130" you can find and buy almost all necessary goods for your auto in Kyiv and other cities, delivery by ground and postal services. Our experienced consultants will provide you with exhaustive information and help you to chose the very particular thing. We are waiting for you at the address

<https://130.com.ua>

# doona™

## User Guide



ECE R04/44  
EN 1888:2012  
Group +0  
Up to 13kg  
Language: English



Important – Keep these instructions  
for future reference

Autogoods “130”

# Table of Contents.

01/ Vital information / Warnings .....	4
02/ Suitability .....	6
03/ Product overview .....	7
04/ Use modes .....	9
4.1. Use modes and their purposes .....	9
4.2. Adjusting the rotation angle of the handle .....	10
4.3. Transition between modes .....	11
4.4. On-the-go mode .....	17
05/ Securing your baby in the Doona Car Seat .....	19
5.1. Adjusting the shoulder straps (#8) to your baby's height .....	22
5.2. Rotating the handle (#2) .....	25
5.3. Loosening the shoulder straps (#8) .....	25
5.4. Placing the infant height adjustment pillow (#27) .....	26
5.5. Adjusting the head support position (#23) .....	26
5.6. Securing your baby using the harness .....	27

5.7. Tightening the straps .....	29
5.8. Checklist to ensure that your baby is buckled up correctly.....	30
<b>06/ Use of the Doona Car Seat in the vehicle.....</b>	<b>31</b>
6.1. Securing the Doona Car Seat in your vehicle.....	35
6.2. Checklist to ensure that your Doona Car Seat is correctly installed .....	39
6.3. Removing the Doona Car Seat from the vehicle.....	40
<b>07/ Care instructions .....</b>	<b>41</b>
7.1. Care for the harness buckle .....	42
7.2. Cleaning .....	42
7.3. Removing the fabric seat cover and the sunshade.....	43
7.4. Re-fitting the fabric seat cover and the sunshade.....	44
<b>08/ Two-year warranty.....</b>	<b>46</b>
<b>09/ Warranty Card.....</b>	<b>47</b>

# Congratulations.

Congratulations on choosing Simple Parenting's Doona as your baby's safety and mobility solution.

In order to protect your baby correctly, the Doona Car Seat must always be used and installed as described in these instructions.

Important – Keep these instructions for future reference. Read these instructions carefully, your child's safety may be affected if you do not follow these instructions.

Please always keep the user instructions available in the compartment provided on the child seat.

If you have any further questions regarding its use, please feel free to contact us at:

Simple Parenting  
4B, 12 Shipyard Lane, Quarry Bay,  
Hong Kong,  
Hong Kong  
Phone: (852) 3580-1330  
Email: [info@simpleparenting.co](mailto:info@simpleparenting.co)  
Website: [www.simpleparenting.co](http://www.simpleparenting.co)

# 1 / Vital information / Warnings.



**WARNING!** For the protection of your baby this Doona Car Seat is not suitable for the following:

- As a substitute for a cot or a cradle. Carrycots, pushchairs and buggies must only be used to transport babies or children.
- To transport more than one child.
- For commercial use.



**WARNING!**

In a case of car accident violent stresses occur, if you were involved in a car accident we recommend you to change the device.



**WARNING!**

Do not make any alterations or additions to the Doona Car Seat.

**WARNING!**

Do not use this product if any components are broken or missing.

**WARNING!**

Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

**WARNING!**

Never leave your child unattended.

**WARNING!**

This product is not suitable for running or skating.

**WARNING!**

Do not let your child play with this product.

**WARNING!**

When outside of the car, always use the parking brake when placing and removing the child from the Doona Car Seat, or when standing still.

## 2 / Suitability.

The Doona Car Seat is intended for Rear-Facing use only.

Group: 0+

Weight: Up to 13 kg

This Doona vehicle is intended for children from birth and up to 13 kg.

### Safety Information



**WARNING!** DO NOT use the Doona Car Seat if any of the following applies:

- The child exceeds 13 kg in weight
- The top of the head is less than 2.5 cm from the top of the Doona Car Seat shell (See figure to the left)
- The harness straps are in slots higher than child's shoulders height.



minimum  
2.5 cm (1")

### Certification – Approval Mark

ECE R44/04  
Universal  
0-13 kg




0444 4311



# 3 / Product overview.



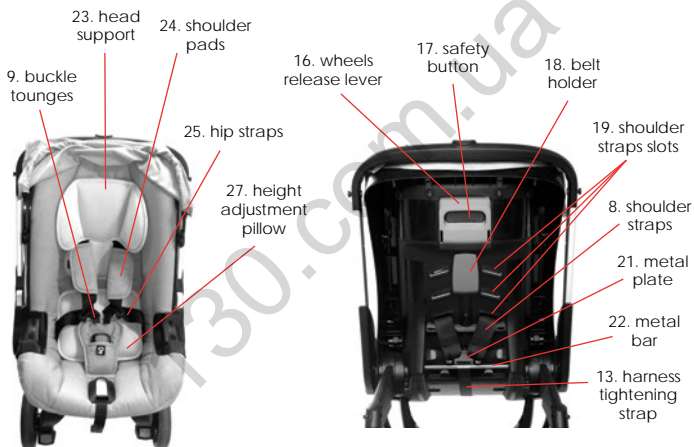

# 4 / Use modes.

## 4.1 Use modes and their purposes



### **Car seat mode**

When travelling in a vehicle, always use the Doona Car Seat mode.

(See chapter #6 of this manual, for instructions regarding securing and releasing in the vehicle).



### **Pull-along mode**

Use the pull along mode for maneuvering the product easily while walking or seating next to it.




### **On-the-go mode**

Use the on-the-go mode when you leave the vehicle and wish to walk around with your baby.

## 4.2 Adjusting the rotation angle of the handle

You can engage the handle (#2) in three positions:

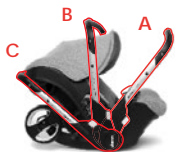

- A. Press the handle rotation buttons (#5) on both sides simultaneously.
- B. With the handle rotation buttons (#5) pressed, begin rotating the handle (#2) towards the desired position.
- C. Make sure the handle does not rotate further than the desired position (A, B or C).
- D. Let go of the handle rotation buttons (#5) and rotate the handle further more until it is engaged on both sides in the desired position and locked in place. You should hear a “click” sound.



### 4.3. Transition between modes



#### **WARNING!**

Ensure that all the locking devices are engaged before use.



#### **WARNING!**

To avoid injury ensure that your child is kept away when unfolding and folding this product.

When folding and unfolding the Doona, ensure that your child is either restrained with the harness (arms and legs are kept away from moving parts), or kept away when not seated.

#### **From car seat mode to on-the-go mode**

**A.** Press the handle rotation buttons (#5) on both sides simultaneously, and rotate the handle (#2) to the top position (B).



**B.** Release the Doona Car Seat from the vehicle belt (See chapter #6 of this manual, for instructions regarding securing and releasing of the Doona Car Seat in the vehicle).



C. carry the Donna Car Seat out of the car and then hold it with one hand.

D. With the other hand push in the red safety button (#17), and squeeze the wheels release lever (#16), to release the wheels mechanism. The wheels will unfold.



\*As an alternative to stages c-d: you can take the Doona Car Seat out of the car and place it on the ground, and then push in the red safety button (#17), and squeeze the wheels release lever (#16), to release the wheels mechanism. In this option, you have to lift the Doona Car Seat up while still squeezing, to allow the wheels to unfold.

E. Press the handle rotation buttons (#5) on both sides simultaneously, and rotate it to the on-the-go position (#A).



F. Press the handle extension button (#1), and pull the handle towards you, to extend its length.



#### From on-the-go mode to car seat mode

A. Press the handle extension button (#1), and push down the handle (#2), to return the handle to its shortest mode.



**B.** Press the handle rotation buttons (#5) on both sides simultaneously and rotate the handle (#2) to the top position (B).



**C.** Step on the red brake lock pedal (#14) to lock it.  
Alternatively, place your foot in front of the wheel to block its movement.





D. Hold the Doona Car Seat by the handle with one hand, and with the other hand push in the red safety button (#17), and squeeze the wheels release lever (#16).



E. While squeezing, lean the Doona Car Seat against the rear wheels (#7), until they start to fold, and then lower it all the way to the ground, until the wheels are fully folded and locked in place.



F. Lift the Doona Car Seat by the handle (#2), and place it in the vehicle.

G. Secure the Doona Car Seat in the vehicle (See chapter #6 of this manual, for instructions regarding securing and releasing of the Doona Car Seat in the vehicle).

H. Press the handle rotation buttons (#5) on both sides simultaneously, and rotate it to position A.



## 4.4. On-the-go mode

### Rear Brakes

The rear wheels are fitted with a braking system which allows you to use just one pedal to control both the rear wheels. To apply the brakes, press the red brake lock pedal (#14) located next to the right wheel. To release the brakes, the green brake release pedal (#15) located next to the left wheel. The brake must always be on when putting the child in or taking him out. Always use the parking brake when placing and removing the child, or when standing still even for a few moments! Always check that the brake is fully engaged.



15. break release pedal (green)

14. break lock pedal (red)



### WARNING!

Ensure that all the locking devices are engaged before use.

### Use of load carrying accessories

Two load carrying accessories are available for purchase with Doona:



All-Day Bag



Essentials Bag

**WARNING!**

Do not overload the All-Day bag with weights of over 3 kg.

Do not overload the Essentials bag with weights of over 1.5 kg.

Exceeding these limits may compromise the stability of the stroller and cause it to topple over. Load carrying accessories which are not approved by the manufacturer should not be used.

**WARNING!**


Any load attached to the handle affects the stability of the Doona vehicle.

Important note: You must remove all bags from the Doona vehicle before folding the wheels and transferring to Car Seat mode.

# 5 / Securing your baby in the Doona Car Seat.

!	on front passanger seat without front airbag	yes
✓	on outer rear seat	yes
!	on centre rear seat with 3-point-belt	yes
×	on a rearward-facing seat	no
×	on seats facing sidewards	no

Please observe the regulations applicable to your particular country.

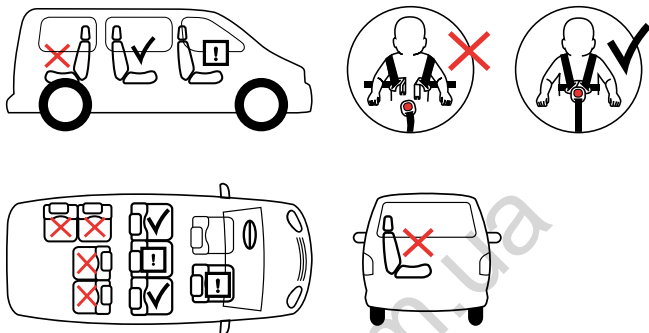

### WARNING!


For the protection of your baby:

- Always secure your baby in the Doona Car Seat using the restraint system.
- As a general rule: When used in the car, the more snugly the belt fits over your child's body, the safer your child will be. Make sure the belt fits tightly when used in the car.
- Please notice the belt is tight and not twisted.
- It is recommended that children will not be left unattended in the Doona Car Seat.
- It is dangerous to use this Doona Car Seat on an elevated surface, e.g. a table.

**WARNING!**

- Never allow the harness tightening strap (#13) to become caught in moving parts (e.g. automatic doors, escalators, etc.).
- The metal and plastic parts of the Doona Car Seat can heat up in the sun. **WARNING!** Your child may get burnt. Protect your child and the Doona Car Seat against intense sunlight (e.g. by putting a light cloth over the seat).
- It is recommended to take the baby out of the seat frequently in order to relieve the baby's spine, both inside and outside of the car. Please note it is recommended to take frequent breaks during long journeys.
- The Doona vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable pram body, cot or bed.
- This product is not intended for prolonged periods of sleeping.
- When using the Doona as a Reclining Cradle, Do not use the Doona once your child can sit unaided.

## 5.1. Adjusting the shoulder straps (#8) to your baby's height

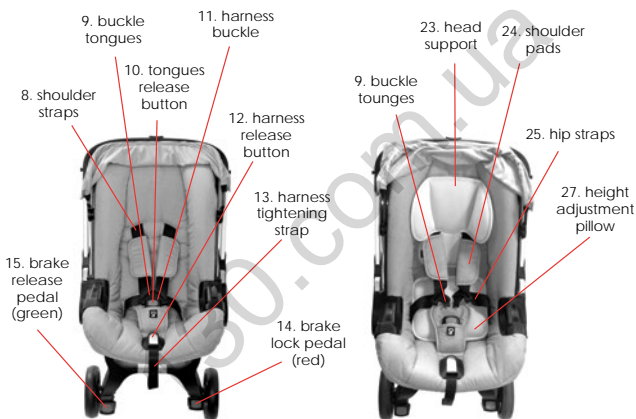



First time you use the Doona Car Seat and as your baby grows, you need to adjust the shoulder straps (#8) to your baby's height as follows:



- When the shoulder straps (#8) are adjusted correctly, they go through the shoulder strap slots (#19) at shoulder level or slightly below.
- Place the baby in the Doona Car Seat and locate the correct shoulder strap slots (#19) for your baby's height. Then take your baby out of the Doona Car Seat.
- At the back of the Doona Car Seat, disconnect the shoulder straps (#8) from the metal plate (#21).
- Insert the shoulder straps (#8) to the correct slots (#19).
- Reconnect the straps to the metal plate (#21).



### **WARNING!**


Ensure that all straps are not twisted and that the shoulder straps (#8) are correctly inserted in the shoulder strap slots (#19). See the image below for correct assembly.

**WARNING!**

Ensure that the shoulder straps (#8) are correctly reconnected to the metal plate (#21). See the image below for correct assembly.

**WARNING!**

Ensure that the shoulder straps (#8) are assembled to the metal plate (#21) in a way that all of them are located between the metal bar (#22) and the seat body. No part should go over the metal bar (#22). See the image below for correct assembly.

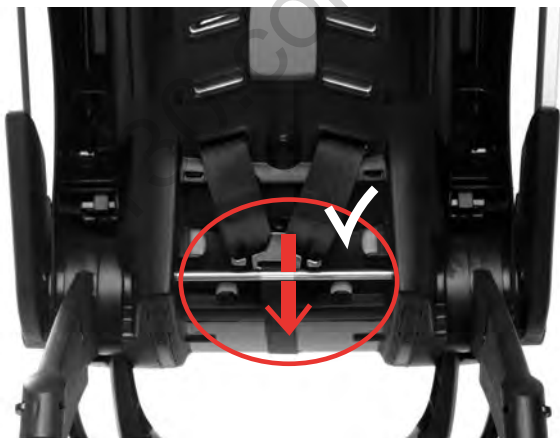

## 5.2. Rotating the handle (#2)

Rotate the handle to the C position



## 5.3. Loosening the shoulder straps (#8)

Press the harness release button (#12) and at the same time pull both shoulder straps (#8) towards you. For small-sized infants please notice the following stages 5.4 and 5.5.



## 5.4. Placing the infant height adjustment pillow (#27)


Place the infant height adjustment pillow (#27) in the lowest part of the seat. The shoulder straps (#8) should go through the slots (#19) at shoulder level or slightly below. When the shoulder straps can go through the slots at shoulder level or slightly below without using the infant height adjustment pillow, the pillow can be removed.

## 5.5. Adjusting the head support position (#23)

- Make sure that the head support straps are connected to back of the height adjustment pillow (#27).
- The head support (#23) should be adjusted so that the shoulder straps (#8) are at the same level as your baby's shoulders or slightly below.

## 5.6. Securing your baby using the harness



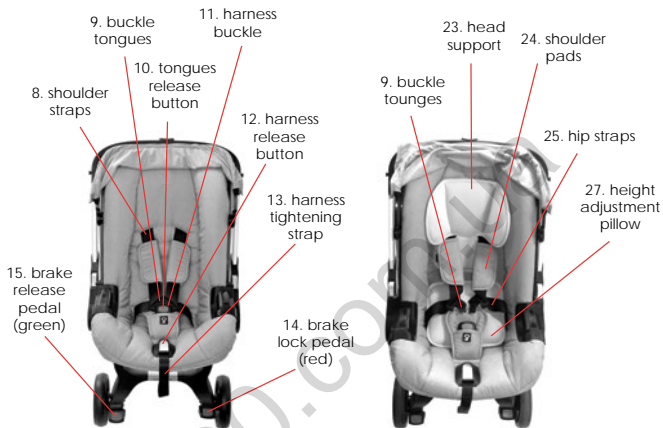

- Loosen the shoulder straps (see chapter #5.3)
- Release the buckle tongues (#9) from the harness buckle (#11) by pressing the tongues release button (#10).
- Place your baby in the Doona Car Seat.
- Place the shoulder straps (#8) over the shoulders of your baby.

**WARNING!**

The hip straps (#25) must lie as low as possible over your baby's hips.

- We recommend not to use the shoulder straps without the shoulder pads.

**WARNING!**

Do not twist or interchange the shoulder straps (#8).

- Put the two buckle tongues (#9) together and engage the buckle tongues (#9) in the harness buckle (#11) with an audible CLICK!
- Make sure that the head support (#23) is positioned correctly.
- Tighten the straps until they are in contact with your baby's body. (see next chapter #5.7)

## 5.7. Tightening the straps

Pull the harness tightening strap (#13) until the harness lies flat and is in contact with your baby's body.






### **WARNING!**

There should never be more than one finger's width of space between the shoulder straps and your baby's shoulders.

## **5.8. Checklist to ensure that your baby is buckled up correctly**

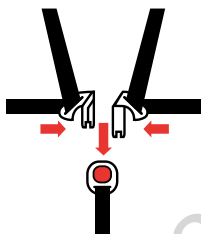

### **FOR YOUR BABY'S SAFETY CHECK THE FOLLOWING**

- The shoulder straps (#8) of the Doona Car Seat are close to the body without constricting the child.
- The shoulder straps (#8) are adjusted correctly, the straps are not twisted.
- The buckle tongues (#9) are engaged in the harness buckle (#11).



# 6 / Use of the Doona Car Seat in the vehicle.

Please observe the instructions on the use of child restraint systems described in your vehicle owner's manual.



## **WARNING!**

In an accident, enormous forces occur. Never try to secure a child on your lap with the vehicle seat belt or by holding onto them by holding onto them.



## **Secure your child in the Doona Car Seat for every journey!**

Always secure the Doona Car Seat onto the vehicle seat in a rearward-facing position.



## **WARNING!**

An airbag hitting the Doona Car Seat can cause serious injuries to your child, possibly resulting in death.

**! DO NOT use on a passenger seat with a front airbag!**

For seats with side airbags, please observe the instructions in your vehicle owner's manual.

**! WARNING!**

We advise you that all the rigid items and plastic parts of the Doona Car Seat must be located and installed so that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.

**The Doona Car Seat is approved for use with the vehicle's 3-point belt (universal)**

This manual includes detailed instructions only regarding installation without a base.

\*For detailed instructions regarding use with a base, refer to the user manual provided with the base, in case you have purchased one.

Fastening the Doona Car Seat to the vehicle using a base is based on semi-universal approval. The seat may only be used with a base in the vehicles detailed in the list of approved vehicle types enclosed with the base, should you decide to purchase a base. This list is constantly updated.

The latest version can be obtained from [www.simpleparenting.co](http://www.simpleparenting.co)



### Installation with the vehicle's 3-point belt (universal)



#### **WARNING!**





The use of a 2-point belt substantially increases the risk of injury to your child in the event of an accident.



#### **Always use with an approved 3-point belt.**

The vehicle safety belt must be approved to ECE R 16 or a comparable standard (see test label on belt with an "E" or "e" in a circle).

Follow these instructions when using your Doona Car Seat:

	in the direction of travel	no
	against the direction of travel	yes
	with 2-point belt	no
	with 3-point belt	yes



Please do not leave your child unattended in the Doona Car Seat in the vehicle.



**For the protection of all vehicle occupants**

In the case of an emergency stop or an accident, unsecured persons or objects may cause injury to other vehicle occupants. Please always check that...

- The backrests of the vehicle seats are locked (i.e. that a foldable rear seat bench latch is engaged).
- All heavy or sharp-edged objects in the vehicle (e.g. on the parcel shelf) are secured.
- All persons in the vehicle have their seat belts fastened.
- The Doona Car Seat is always secured when it is in the vehicle, even if no child is being transported.

**To protect your vehicle**


Some vehicle seat covers made from sensitive materials (e.g. velour, leather, etc.) may develop wear marks when car seats are used. This can be avoided by placing the vehicle seat cover under the Doona Car Seat.

## 6.1. Securing the Doona Car Seat in your vehicle



To secure the Doona Car Seat using the 3-point belt of your vehicle proceed as follows:



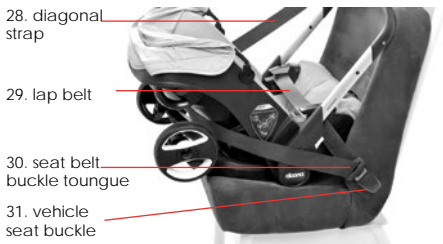

- Place the Doona Car Seat rearward-facing on the vehicle seat (baby is facing backwards).

Note: Installation of the Doona Car Seat in the front seat of the vehicle is not recommended, yet possible. Should you decide to install your Doona Car Seat in the front, move the front seat of the vehicle all the way back before proceeding to the next steps. Once completing the installation according to below instructions, take the seat forward.

- Ensure that the handle (#2) is in the upright position B.
- Pull out the vehicle seat belt and place it across the Doona Car Seat.
- Engage the vehicle seat belt buckle tongue (#30) in the vehicle seat buckle (#31).
- Place the lap belt section of the vehicle seat belt (#29) in the blue belt guides (#3) on both sides of the Doona Car Seat.

**WARNING!**

Do not twist the belt.

- Tighten the lap belt section of the vehicle seat belt (#29) by pulling on the diagonal strap (#28).

**WARNING!**

The vehicle seat buckle (#31) must not be positioned in the blue belt guide (#3) or reach so far forward that it lies in front (in the direction of travel) of the blue belt guide (#3).

Note: Should this be the case, try it on a different seat. If you have any doubts about installation, please feel free to contact us.

- Pull the diagonal strap of the vehicle seat belt (#28) behind the head end of the Doona Car Seat.
- Place the diagonal strap of the vehicle seat belt (#28) between the blue belt holder (#18) and the Doona Car Seat.

**WARNING!**

Do not twist the belt.

- Tighten the diagonal strap section of the vehicle seat belt (#28).
- Rotate the handle (#2) to the car seat position A (for instructions on how to rotate the handle see chapter #4.2).

**WARNING!**

Do not use any load bearing contact points other than those described above and marked on the Doona Car Seat.

130.com.ua



## 6.2. Checklist to ensure that your Doona Car Seat is correctly installed



### **For your baby's safety, check that:**

- The Doona Car Seat is fastened against the direction of travel.
- The Doona Car Seat is installed on the front passenger seat only if no front airbag exists, or if the airbag has been disabled.
- The Doona Car Seat is secured using a 3-point belt only.
- The lap belt section of the vehicle seat belt (#29) runs through both blue belt guides (#3) on the Doona Car Seat.
- The diagonal strap section of the vehicle seat belt (#28) runs between the blue belt holder (#18) and the Doona Car Seat.
- The vehicle seat buckle (#31) is not positioned in the blue belt guide (#3), or before the blue belt guide (#3).
- The vehicle seat belt is tightened up and not twisted.

## 6.3. Removing the Doona Car Seat from the vehicle



- Unhook the diagonal strap of the vehicle seat belt (#28) from the blue belt holder (#18).
- Discharge the vehicle seat buckle (#31) and take the lap belt section of the vehicle seat belt (#29) out of the blue belt guides (#3).

# 7 / Care instructions.



## To retain the protective effect

- In an accident at a collision speed above 10 km/h the Doona Car Seat could suffer damage which is not necessarily obvious. In this case the car seat must be replaced. Please dispose of it properly.
- Regularly check all important parts for damage. Ensure the correct operation of all mechanical components.
- To prevent damage or breakage, ensure that the Doona Car Seat does not become jammed in the car door, seat runners, etc.
- Should the Doona Car Seat be damaged (for example after dropping it) it must be inspected.
- The Doona Car Seat must not be used without the seat cover
- Never use spare parts or accessories other than those supplied – never replace the seat cover with any other than the original Doona seat cover, because the cover constitutes an integral part of the restraint performance.

## 7.1. Care for the harness buckle

The function of the harness buckle is important for the safety of your child. Malfunctions of the harness buckle are mostly attributable to accumulations of dirt and dust. It is recommended to clean the harness buckle system periodically, in order to keep it properly functioning.

To clean the harness buckle, sponge clean or rinse using warm water. DO NOT use any soaps, solvents or lubrication. Using anything other than water can cause the buckle to malfunction.

## 7.2. Cleaning

Always use only genuine Doona Car Seat fabric covers, since the seat cover is an integral part of the Doona Car Seat system. Using the original seat covers helps to maintain a safe and functioning system.



The Doona Car Seat must not be used without the seat cover.



- The seat cover can be removed and hand washed with a mild detergent. Follow these washing instructions to avoid damage to the seat cover: Hand wash only; Do not bleach; Do not tumble dry; Hang dry; Do not wring; Do not iron; Do not dry clean. Please observe the instructions on the washing label of the cover. The same washing instructions should be followed when washing the sunshade as well.
- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).

**WARNING!**

Never remove the buckle tongues (#9) from the straps.

## 7.3. Removing the fabric seat cover and the sunshade

- Pull out the 3 sunshade back pins (#33) at the head area of the sunshade.
- Pull out the sunshade plastic spine (#32) from the sunshade hinges (#34) and remove the fabric from the spine. Reconnect the spine to the hinges.
- Disconnect the 4 hooks (#35) located at the head area of the Doona Car Seat fabric cover.
- Pull out the fabric cover to reveal the 2 side plastic pins (#36) on each side of the Doona Car Seat.
- Pull out the fabric cover from around the blue plastic belt guides (#3).
- Click out the belt guide pins (#37) that hide under the cover in the front of the belt guides (#3).
- Click out the lower pin (#38) located at the middle of the feet area of the Doona Car Seat fabric cover.
- Pull out the fabric cover from around the harness release button (#12).
- At the back of the Doona Car Seat disconnect the shoulder straps (#8) from the metal plate (#21).
- Pull the shoulder straps (#8) and the harness buckle (#11) out of the fabric seat cover completely.

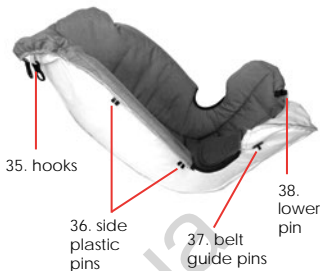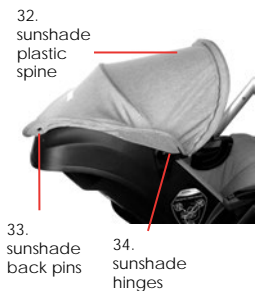

## 7.4. Re-fitting the fabric seat cover and the sunshade

- Simply proceed in the reverse order of section (#7.3)



### WARNING!

Ensure that all straps are not twisted and that the shoulder straps (#8) are correctly inserted in the shoulder strap slots (#19). See the image below for correct assembly.




### WARNING!

Ensure that the shoulder straps (#8) are correctly reconnected to the metal plate (#21). See the image below for correct assembly.

**WARNING!**

Ensure that the shoulder straps (#8) are assembled to the metal plate (#21) in a way that all of them are located between the metal bar (#22) and the seat body. No part should go over the metal bar (#22). See the image below for correct assembly.

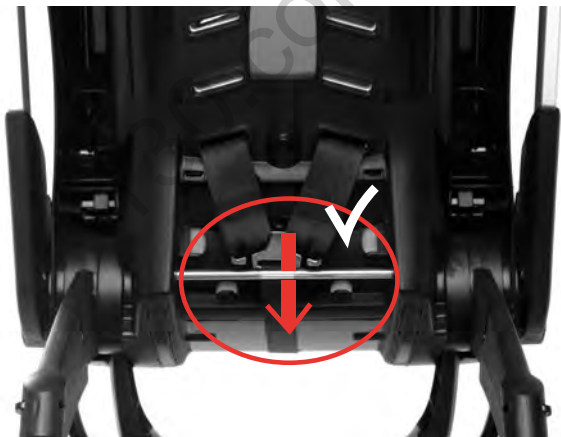

# 8 / Two-year warranty.

We guarantee that the Doona Car Seat has been manufactured in accordance with the European safety standards and regulations, and is meeting the highest standards of quality.

For the Doona Car Seat we provide a 2-year warranty against manufacturing or material defects.

The warranty period is effective from the day of purchase.

As proof of purchase we ask that you fill out the Warranty Card and retain it for the whole term of the warranty period, together with your sales receipt.

In the case of a warranty claim, the Warranty Card must be returned together with the product to your local distributor.

Please also register your Doona Car Seat online at:

[www.simpleparenting.co](http://www.simpleparenting.co)

The Warranty covers Doona Car Seats which have been handled properly and which have been sent to us in a clean condition.

The warranty does not apply in the following cases:

- Natural signs of wear and damage resulting from excessive stress.
- Damage resulting from inappropriate or improper use.
- When the product has been used for a purpose other than that provided for in the instructions for use.

In the event of a warranty claim, please contact us directly at [info@simpleparenting.co](mailto:info@simpleparenting.co)



# 9 / Warranty Card.

Warranty Card:

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Post Code: \_\_\_\_\_

City/Town: \_\_\_\_\_

Telephone No. (Including area code): \_\_\_\_\_

E-mail address: \_\_\_\_\_

Doona Car Seat serial number: \_\_\_\_\_

Retailer: \_\_\_\_\_

Fabric color (design): \_\_\_\_\_

Accessories: \_\_\_\_\_

130.com.ua

130.com.ua



SimpleParenting™

[simpleparenting.co](http://simpleparenting.co)

[info@simpleparenting.co](mailto:info@simpleparenting.co)

Autogoods "130"